

ZWILLING 36806-005

ZWILLING Fresh & Save Vacuum Sealer Machine Starter Set Instruction Manual

Model: 36806-005

1. INTRODUCTION

The ZWILLING Fresh & Save Vacuum Sealer Machine Starter Set is designed to extend the freshness of your food up to five times longer than traditional storage methods. This system is versatile, supporting various food preservation needs including refrigerating, freezing, sous vide cooking, marinating, and meal prepping. By removing air, the system helps to lock in flavor, aromas, and essential vitamins.



Image 1: Overview of the ZWILLING Fresh & Save Vacuum Sealer Starter Set components.

2. WHAT'S INCLUDED

The 6-piece Starter Set includes the following components:

- 1 large vacuum food storage container (glass)
- 2 small reusable vacuum sealer bags for food
- 2 medium reusable vacuum sealer bags for food
- 1 rechargeable vacuum sealer machine (pump)

Reusable bags are freezer safe, microwave safe (without vacuum seal), and dishwasher safe.



Image 2: The complete 6-piece ZWILLING Fresh & Save Starter Set.

3. SETUP

3.1 Charging the Vacuum Pump

The vacuum pump is rechargeable. Connect the included USB cable to the charging port located at the bottom of the pump. A full charge ensures optimal performance.



7.48 in.



ZWILLING



1.97 in.

Image 3: The ZWILLING Fresh & Save Vacuum Pump, showing its compact size.

3.2 Preparing Containers and Bags

- **Containers:** Ensure the container and its lid are clean and dry. Place the food inside the container and securely close the lid.
- **Bags:** Place the food inside the vacuum bag. Ensure the easy-zip closure is completely sealed across the entire width of the bag. For liquids, use the provided liquid barrier to prevent fluid from entering the pump.

4. OPERATING INSTRUCTIONS

4.1 Vacuum Sealing

1. **Position the Pump:** Place the vacuum pump directly onto the circular valve located on the container lid or vacuum bag.
2. **Start Sealing:** Press the button on the vacuum pump to begin the air extraction process. The pump will automatically extract air in mere seconds.
3. **Automatic Stop:** The pump will automatically stop once a sufficient vacuum has been obtained, indicating a secure seal.

GLASS VACUUM CONTAINER

Create and release vacuum seal on the air valve.

Scan QR code to track stored items and use-by dates in the accompanying app.

Double seal lid creates a perfect seal enclosure.



BPA-free borosilicate glass container is freezer safe, oven-proof (without lid), microwave safe (without vacuum seal), and dishwasher safe.



DISHWASHER SAFE

Image 4: The vacuum pump in action, sealing a glass food storage container.

6-PIECE SET INCLUDES




Vacuum Pump



Large Glass Container



2 Small Bags

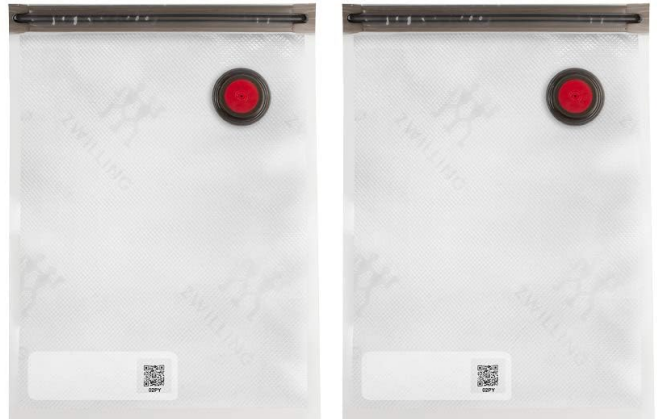

2 Medium Bags



DISHWASHER SAFE

Image 5: The vacuum pump sealing a reusable plastic vacuum bag.

FRESH AT THE PRESS OF A BUTTON

The FRESH & SAVE vacuum food storage series is revolutionizing how you store your groceries and meals!

Keep food fresh up to 5 times longer – Reduce food waste.

Reuse containers and bags – Save money while reducing waste.

Plan meals for the week – Save time and eat healthier.

Ovenproof containers and BPA-free bags are dishwasher, freezer, and microwave safe.



Image 6: Visual guide to the three easy steps of using the vacuum sealer.

4.2 Releasing the Vacuum

To open a vacuum-sealed container or bag, simply press the small button on the center of the valve. This will release the vacuum, allowing you to easily open the lid or zipper.

4.3 Official Product Videos

Your browser does not support the video tag.

Video 1: ZWILLING Fresh & Save overview, demonstrating the vacuum sealing process for various foods.

Your browser does not support the video tag.

Video 2: Demonstrating vegetable preparation and vacuum sealing with the Fresh & Save system.

Your browser does not support the video tag.

Video 3: Exploring the technology behind ZWILLING Fresh & Save for optimal food preservation.

Your browser does not support the video tag.

Video 4: Using Fresh & Save for preparing and storing kid snacks.

5. USAGE TIPS

- **Extend Freshness:** The system keeps food fresh up to five times longer, reducing food waste.
- **Meal Prep:** Prepare meals days in advance and store them to maintain freshness.
- **Marinating:** Marinate meats or vegetables in just 30 minutes using the vacuum bags or containers.
- **Sous Vide:** Utilize the vacuum bags for sous vide cooking.
- **Organized Storage:** Use the containers and bags to keep your refrigerator and freezer organized.
- **ZWILLING Culinary World App:** Download the app to track food storage and monitor use-by dates.



Image 7: Visual representation of food staying fresh up to 5 times longer.

EASY TO USE

ONE

Position vacuum pump on air valve.

TWO

Press button to begin sealing.

THREE

Vacuum pump automatically shuts off when sealing is complete.



Image 8: A refrigerator neatly organized with various Fresh & Save containers and bags.



Image 9: Walnuts stored in a vacuum-sealed ZWILLING Fresh & Save bag.



Image 10: A full refrigerator showcasing diverse foods preserved using the Fresh & Save system.

6. CARE AND MAINTENANCE

- **Glass Containers:** The borosilicate glass bases are dishwasher safe, freezer safe, and microwave safe (without the lid).
- **Container Lids:** The plastic lids with silicone valves and seals are dishwasher safe.
- **Vacuum Bags:** The reusable plastic bags are freezer safe, microwave safe (without vacuum seal), and dishwasher safe.
- **Vacuum Pump:** Wipe the pump clean with a damp cloth. Do not immerse in water.

Reusable bags are freezer safe, microwave safe (without vacuum seal), and dishwasher safe.



Image 11: ZWILLING Fresh & Save containers and bags being cleaned in a dishwasher.

7. TROUBLESHOOTING

- **Poor Vacuum Seal:** Ensure the container lid is properly aligned and fully closed, or that the bag's zipper is completely sealed. Check that the valve on the lid/bag is clean and free from food debris.
- **Pump Not Operating:** Verify that the vacuum pump is sufficiently charged.
- **Liquid in Pump:** If liquids are being sealed, ensure the liquid barrier is correctly used to prevent fluid from entering the pump mechanism.

8. SPECIFICATIONS

Brand	ZWILLING
Model Name	Fresh & Save
Part Number	36806-005
Material	Glass (container base), Plastic (lids, bags), Silicone (valves, seals)

Color	Clear
Item Weight	2.5 Pounds
Product Dimensions	1.97"L x 1.97"W x 7.48"H (Pump)
Power Source	Corded Electric (Rechargeable)
Operation Mode	Automatic
Number of Items	6
Included Components	1 large vacuum food storage container, 2 small and 2 medium vacuum sealer bags for food, 1 rechargeable vacuum sealer machine

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official ZWILLING website or contact their customer service directly. Keep your proof of purchase for any warranty claims.