

[Manuals.plus](#) /

› [Innsky](#) /

› Innsky IS-AF005 Non-Stick Basket Air Fryer Instruction Manual

Innsky IS-AF005

Innsky IS-AF005 Non-Stick Basket Air Fryer User Manual

Model: IS-AF005

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Read all instructions carefully before operating the appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Innsky IS-AF005 Air Fryer.



Figure 1: The removable non-stick basket and pan assembly of the Innsky IS-AF005 Air Fryer. This component is designed for easy food placement, cooking, and cleaning. It features a perforated bottom for optimal air circulation during the frying process and a sturdy handle for safe removal.

Key Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** For setting time and temperature.
- **Frying Basket:** Non-stick coated basket for holding food.
- **Frying Pan:** Collects excess oil and drips.
- **Handle:** For safe removal of the basket and pan.
- **Air Inlet/Outlet:** For proper air circulation.

3. SETUP

1. **Unpacking:** Carefully remove all packaging materials, including any stickers or labels.

2. **Initial Cleaning:** Wash the frying basket and pan with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the inside and outside of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

4. OPERATING INSTRUCTIONS

4.1 Before First Use

It is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) before first use to eliminate any manufacturing odors. A slight smell may be present, which is normal.

4.2 Basic Operation

1. **Prepare Food:** Place the food you wish to cook into the frying basket. Do not overfill the basket.
2. **Insert Basket:** Slide the frying pan with the basket back into the main unit until it clicks into place.
3. **Power On:** Plug the appliance into a power outlet. The power indicator light will illuminate.
4. **Set Temperature and Time:** Use the control panel to set the desired cooking temperature and time. Refer to recipe guidelines or the cooking chart for recommended settings.
5. **Start Cooking:** Press the start button to begin the air frying process. The heating indicator light will turn on.
6. **Shake Basket (Optional):** For even cooking, especially with smaller items, pull out the basket halfway through the cooking time and gently shake it. Then slide it back in. The air fryer will resume cooking automatically.
7. **Finish Cooking:** When the set time has elapsed, the timer will chime. Carefully pull out the basket and pan.
8. **Remove Food:** Use tongs to remove the cooked food from the basket. Avoid tipping the basket directly as hot oil may collect in the pan.
9. **Power Off:** Unplug the appliance from the wall outlet after use.

4.3 Preheating

For best results, preheat the air fryer for 3-5 minutes at the desired cooking temperature before adding food.

5. MAINTENANCE

5.1 Cleaning

1. **Before Cleaning:** Always unplug the air fryer and allow it to cool down completely before cleaning.
2. **Frying Basket and Pan:** These parts are non-stick coated and can be washed in hot soapy water with a non-abrasive sponge. For stubborn food residues, soak them in hot water for about 10 minutes. They may also be dishwasher safe (check product specifications for confirmation).
3. **Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn grease, use a mild detergent.
4. **Exterior:** Clean the exterior with a damp cloth. Do not use abrasive cleaning materials or steel wool.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.

5.2 Storage

Ensure the air fryer is clean and completely dry before storing. Store the appliance in a cool, dry place, away from direct sunlight and out of reach of children.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. The basket is not inserted correctly.	Plug the main plug into a grounded wall socket. Slide the frying pan with the basket into the appliance correctly.
Food is not cooked evenly.	Too much food in the basket. Food was not shaken/flipped.	Reduce the amount of food per batch. Shake or flip food halfway through cooking.
White smoke comes from the appliance.	Fat residues from previous use. Too much oil used.	Clean the frying pan and basket thoroughly after each use. Avoid adding excessive oil to food.
Fresh fries are not crispy.	Not enough oil used. Potato type not suitable.	Add a little more oil before frying. Use fresh potatoes that are firm and suitable for frying.

7. SPECIFICATIONS

Model Number	IS-AF005
Brand	Innsky
Dimensions (Packaging)	27 x 23.7 x 14.8 cm
Weight (Packaging)	0.75 kg
Power Supply	<i>(Not specified in input, please refer to product label)</i>
Power Consumption	<i>(Not specified in input, please refer to product label)</i>

Note: Specifications are subject to change without notice for product improvement.

8. WARRANTY AND SUPPORT

Innsky products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty from the date of purchase. For detailed warranty information, please refer to the warranty card included with your product or visit the official Innsky website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Innsky Customer Service. Contact details can typically be found on the Innsky website or in the packaging materials.

You can also visit the [Innsky Store on Amazon](#) for more product information and support resources.

