

[Manuals.plus](#) /

› [Trust](#) /

› Trust Ymo Wireless Keyboard and Mouse Set User Manual

Trust 24084-02

Trust Ymo Wireless Keyboard and Mouse Set User Manual

Model: 24084-02

1. INTRODUCTION

Thank you for choosing the Trust Ymo Wireless Keyboard and Mouse Set. This set provides a comfortable and efficient wireless solution for your computer. It features a full-size AZERTY keyboard with silent, splash-resistant keys and a silent wireless mouse, both connecting via a single USB micro-receiver. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new device.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- Trust Ymo Wireless Keyboard (AZERTY layout)
- Trust Ymo Wireless Mouse
- USB Micro-Receiver
- 4 x AAA Batteries (pre-installed or included separately)
- User Manual (this document)

Emballage durable

Carton fabriqué à partir de matériaux recyclés.



Image: The retail packaging for the Trust Ymo Wireless Keyboard and Mouse Set, showing the brown cardboard box.

3. SETUP INSTRUCTIONS

Follow these steps to set up your Trust Ymo Wireless Keyboard and Mouse Set:

1. Install Batteries:

- **Keyboard:** Open the battery compartment on the underside of the keyboard. Insert 2 AAA batteries, ensuring correct polarity (+/-). Close the compartment.
- **Mouse:** Open the battery compartment on the underside of the mouse. Insert 2 AAA batteries, ensuring correct polarity (+/-). Close the compartment.

2. **Locate USB Micro-Receiver:** The USB micro-receiver is typically stored within the mouse's battery compartment for safekeeping during transport. Remove it before use.

3. **Connect Receiver:** Plug the USB micro-receiver into an available USB port on your computer (PC, laptop, or Mac).

4. **Power On:**

- **Keyboard:** Locate the ON/OFF switch on the top right side of the keyboard and slide it to the "ON" position.
- **Mouse:** Locate the ON/OFF switch on the underside of the mouse and slide it to the "ON" position.

5. **Automatic Connection:** Your computer should automatically detect and install the necessary drivers for the keyboard and mouse. This may take a few moments. Once installed, the devices are ready for use.

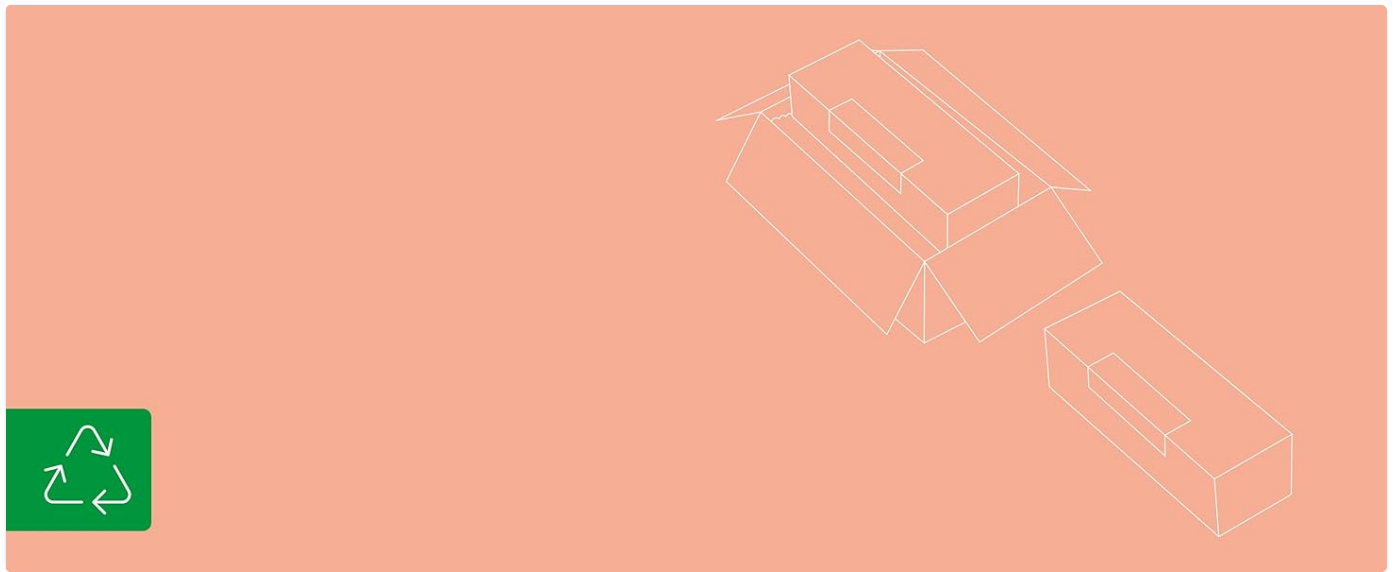 


Image: The Trust Ymo wireless keyboard and mouse, with the small USB receiver visible, illustrating the components for setup.

4. OPERATING INSTRUCTIONS


4.1 Keyboard Usage

The Trust Ymo keyboard is a full-size AZERTY layout keyboard designed for comfortable and quiet typing.

- **Silent Keys:** The keys are designed to minimize typing noise, providing a quiet working environment.
- **Adjustable Typing Angle:** Flip out the adjustable feet on the underside of the keyboard to change the typing angle for improved ergonomics.
- **Multimedia and Office Shortcut Keys:** The keyboard features 13 dedicated multimedia and office shortcut keys. These keys allow quick access to functions such as volume control, media playback, and opening applications like the calculator. Refer to the key legends for specific functions.

Saisie silencieuse

Les touches plates de ce clavier grand format et les pieds repliables offrent exactement le confort indispensable pour vous concentrer sur votre travail

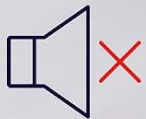

**SAISIE
SILENCIEUSE**



**13 TOUCHES DE
FONCTION MULTIMÉDIAS**

Image: A side view of the Trust Ymo keyboard, highlighting its flat profile and the adjustable feet that can be extended for a more angled typing position.

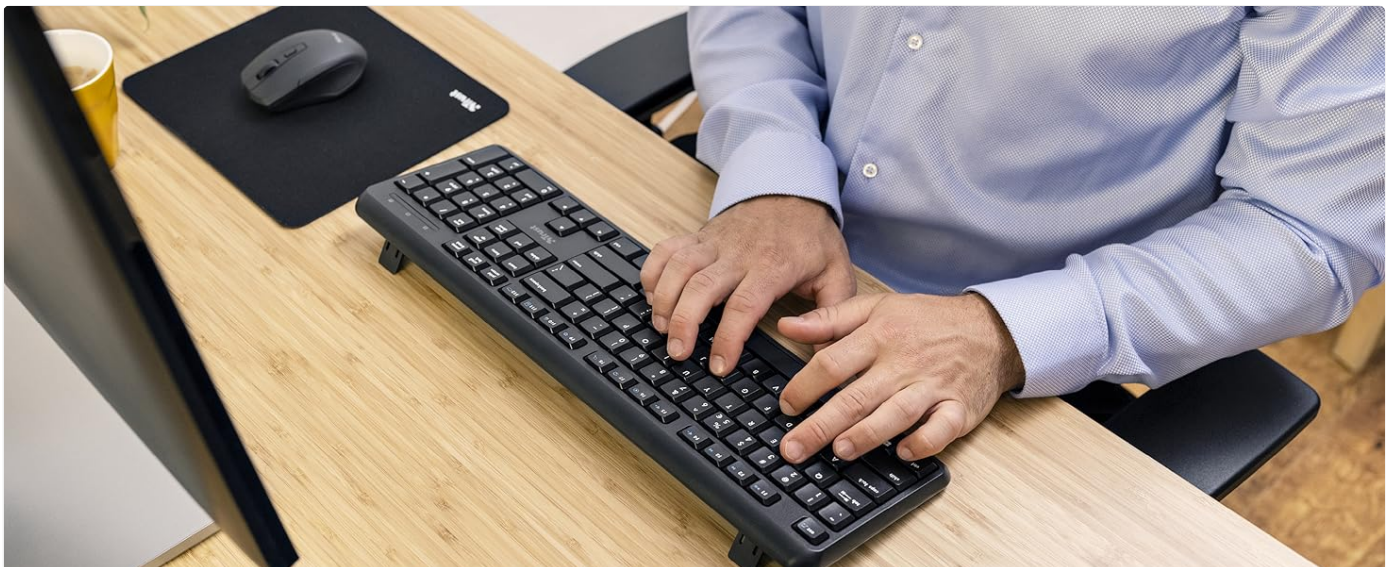 


Image: A person's hands are shown typing on the Trust Ymo wireless keyboard, which is placed on a desk next to a laptop.

4.2 Mouse Usage

The Trust Ymo wireless mouse offers precise optical tracking and a comfortable design.


- **Silent Clicks:** The mouse buttons are designed for silent operation, reducing click noise.
- **DPI Adjustment:** Use the DPI button (usually located near the scroll wheel) to cycle through different sensitivity settings (e.g., 600 to 1400 DPI) to match your preference.
- **Ambidextrous Design:** The mouse is designed to be comfortable for both left-handed and right-handed users.
- **Wireless Range:** The mouse operates wirelessly up to 10 meters from the USB receiver.

Souris confortable

La souris sans fil a un design contemporain et est aussi dotée de boutons silencieux




SANS
FIL JUSQU'À 10 M

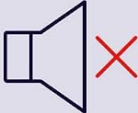
CLIC
SILENCIEUX


BOUTON DE
SÉLECTION DE VITESSE
DE 600 À 1400 PPP


POUR GAUCHERS
ET DROITIERS

Image: A close-up view of the Trust Ymo wireless mouse, showcasing its ergonomic shape and silent click feature.

5. MAINTENANCE

5.1 Cleaning

To maintain the performance and appearance of your keyboard and mouse:

- Wipe surfaces with a soft, damp cloth.
- Do not use harsh chemicals or abrasive cleaners.
- The keyboard is splash-resistant, meaning it can withstand minor spills. However, avoid submerging it in liquid or exposing it to excessive moisture. If a spill occurs, gently wipe it dry immediately.

Conception résistante aux déversements

Protège votre clavier des liquides, si bien que vous n'avez pas à vous soucier des risques de renverser votre tasse de thé

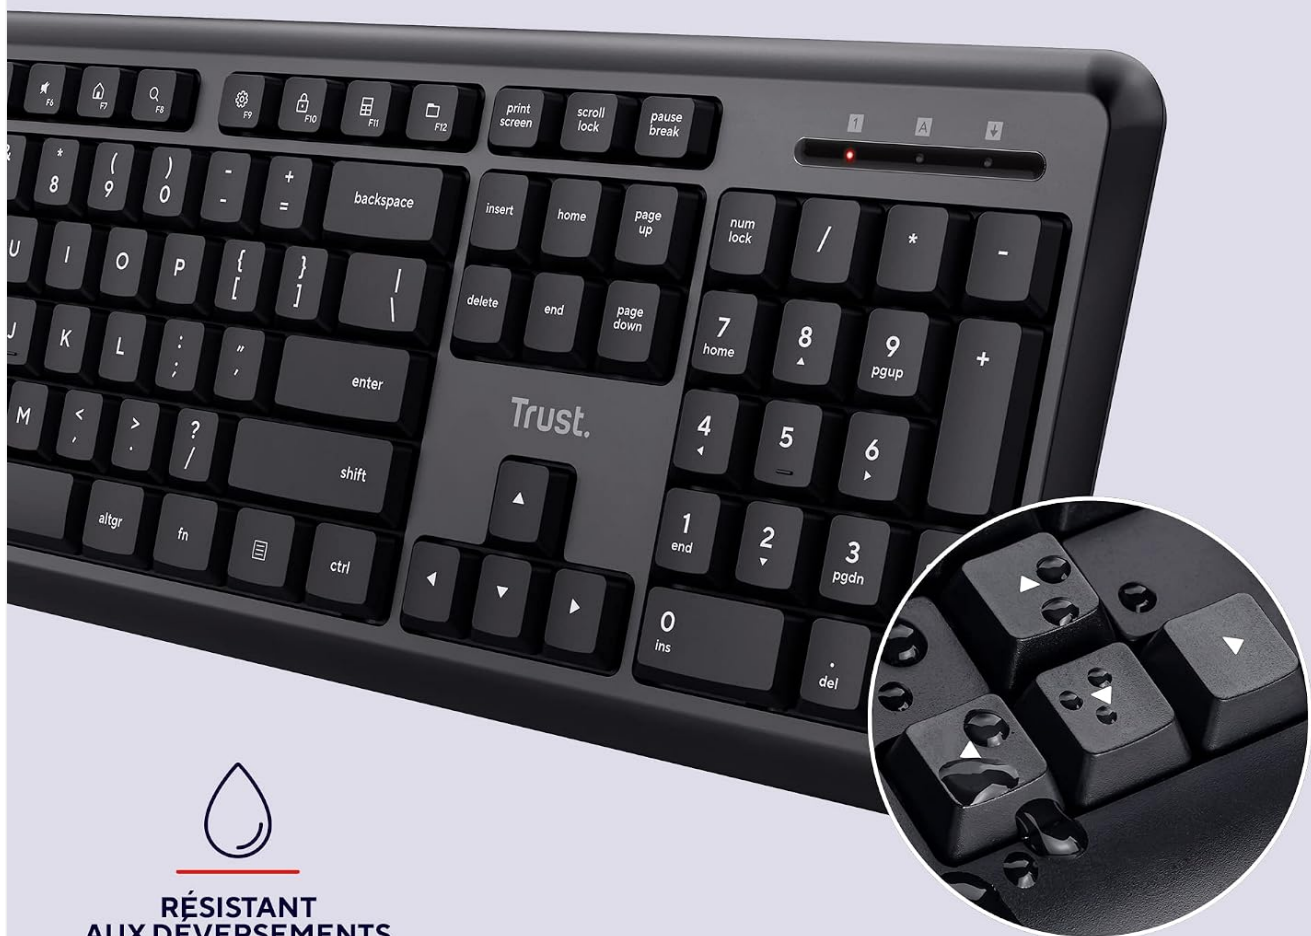


Image: A close-up of the Trust Ymo keyboard keys with small water droplets, demonstrating its splash-resistant feature.

5.2 Battery Replacement

When the devices stop responding or the indicator light (if present) signals low battery, replace the batteries:

- **Keyboard:** Replace 2 AAA batteries.
- **Mouse:** Replace 2 AAA batteries.
- Always use new batteries of the same type.
- Dispose of old batteries responsibly according to local regulations.

6. TROUBLESHOOTING

Problem	Possible Solution
Keyboard or mouse not responding.	• Ensure the ON/OFF switches on both devices are in the "ON" position. • Check battery levels and replace if necessary. • Ensure the USB micro-receiver is securely plugged into a working USB port on your computer. • Try plugging the receiver into a different USB port. • Move the keyboard and mouse closer to the receiver to rule out range issues. • Restart your computer.
Lag or intermittent connection.	• Ensure there are no large metal objects or other wireless devices (like Wi-Fi routers, other wireless peripherals) interfering with the signal between the devices and the receiver. • Try moving the receiver to a USB port on the front of your computer or using a USB extension cable to position it closer to the keyboard/mouse. • Replace batteries.
Mouse cursor movement is erratic.	• Clean the optical sensor on the underside of the mouse. • Ensure you are using the mouse on a suitable surface (not highly reflective or transparent). • Adjust the DPI setting using the DPI button on the mouse.
Shortcut keys not working.	• Ensure your operating system is up to date. • Some shortcut keys may require specific software or drivers, though typically they are plug-and-play. Check the Trust support website for any specific driver requirements for your operating system.

7. SPECIFICATIONS

Feature	Detail
Model Number	24084-02
Brand	Trust
Color	Black
Connectivity	Wireless (USB Micro-Receiver)
Keyboard Layout	AZERTY (French)
Number of Keys	104
Special Keyboard Features	Splash-resistant, Silent keys, 13 Multimedia/Office shortcut keys, Adjustable typing angle
Mouse Tracking Technology	Optical

Feature	Detail
Mouse Features	Silent clicks, DPI adjustment (600-1400 PPP), Ambidextrous design, Rubber finish for grip
Wireless Range	Up to 10 meters
Compatible Operating Systems	Windows, macOS, Chrome OS
Power Source	Battery Powered
Batteries Required	4 x AAA (2 for keyboard, 2 for mouse) - included

8. WARRANTY AND SUPPORT

The Trust Ymo Wireless Keyboard and Mouse Set comes with a**2-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For technical support, warranty claims, or further information, please visit the official Trust website or contact their customer service. Keep your proof of purchase for warranty purposes.

Trust Official Website: www.trust.com

