

[Manuals.plus](#) /

› [NIXIUKOL](#) /

› NIXIUKOL Electric Coffee Grinder User Manual

NIXIUKOL HK-032

NIXIUKOL Electric Coffee Grinder User Manual

MODEL: HK-032

1. Introduction

Thank you for choosing the NIXIUKOL Electric Coffee Grinder. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

2. Important Safety Instructions

- Always ensure the power cord is detached and the unit is unplugged before cleaning or when not in use.
- Do not immerse the motor base or power cord in water or any other liquid.
- This appliance is for household use only. Do not use outdoors.
- Keep hands and utensils out of the grinding chamber during operation to prevent injury.
- Ensure the lid is securely in place before operating the grinder. The built-in safety switch prevents operation if the lid is not properly seated.
- For grinding small amounts of spices (e.g., one teaspoon), the grinding effect may not be optimal due to blade clearance. This is a design feature to ensure safety.
- When grinding hard items like fenugreek seeds, it is recommended to grind in several short bursts for a total of more than 90 seconds to achieve desired consistency and prevent motor strain.
- Avoid continuous operation for extended periods. Allow the motor to cool down between uses.

3. Product Overview



Figure 3.1: NIXIUKOL Electric Coffee Grinder with accessories and examples of grindable items.

Components:

- Grinder Unit (Stainless Steel Housing)
- Transparent Lid
- Detachable Power Cord
- Cleaning Brush

Key Features:

- **304 Food-Grade Stainless Steel Blade:** Durable and efficient for various grinding tasks.
- **28000rpm Powerful Motor:** Ensures high grinding efficiency, processing coffee beans in 10-15 seconds.
- **50dB Low Noise Operation:** Designed for quiet use, minimizing disturbance.
- **50g Capacity:** Suitable for grinding enough coffee for approximately 12 cups.
- **Detachable Power Cord:** Enhances portability and simplifies cleaning.
- **Built-in Safety Switch:** Prevents operation unless the lid is properly secured.



Figure 3.2: Detailed features of the NIXIUKOL Coffee Grinder.

MULTIPURPOSE



Figure 3.3: The grinder's multipurpose capability for coffee, nuts, grains, and spices.

4. Setup

1. Unpack all components and remove any packaging materials.
2. Before first use, wipe the grinding chamber and lid with a damp cloth and dry thoroughly. Do not wash the motor base under running water.
3. Place the grinder on a stable, flat, and dry surface.
4. Ensure the power cord is not plugged into an electrical outlet during setup.

5. Operating Instructions



Figure 5.1: Easy-to-follow steps for using the grinder.

1. **Add Ingredients:** Open the lid and add your desired ingredients (e.g., coffee beans, spices, nuts) into the grinding chamber. Do not exceed the maximum capacity of 50g.
2. **Secure Lid:** Place the transparent lid onto the grinder unit and twist or press down firmly until it is securely locked. The grinder will not operate if the lid is not properly secured due to the built-in safety switch.
3. **Connect Power:** Plug the detachable power cord into the grinder's port, then plug the other end into a standard electrical outlet.
4. **Start Grinding:** Press down on the lid to activate the grinding process. The grinder will operate as long as pressure is applied to the lid.
5. **Monitor Grind:** Observe the consistency through the transparent lid. Grinding times vary depending on desired fineness:

Table 5.1: Approximate Grinding Times for Coffee Beans

Grinding Time	Resulting Grind	Recommended Use
---------------	-----------------	-----------------

Grinding Time	Resulting Grind	Recommended Use
5 seconds	Coarse	French Press, Percolator
10 seconds	Medium	Drip Coffee Makers
15 seconds	Fine	Espresso (may require longer for very fine)
20 seconds	Very Fine	Turkish Coffee (use with caution to avoid overheating)



Figure 5.2: Visual guide to grind consistency based on grinding time.

- **Stop Grinding:** Release pressure from the lid to stop the motor.
- **Pour Out:** Unplug the power cord, remove the lid, and carefully pour the ground ingredients out of the chamber. The detachable design makes pouring and cleaning convenient.



Figure 5.3: Advantages of the detachable cord and high efficiency.

6. Cleaning and Maintenance

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Unplug:** Always ensure the grinder is unplugged from the power outlet before cleaning.
2. **Empty Chamber:** Remove any remaining ground ingredients from the chamber.
3. **Use Brush:** Use the provided cleaning brush to remove stubborn particles from the blades and chamber walls.
4. **Wipe Clean:** Wipe the grinding chamber and lid with a clean, damp cloth. Dry thoroughly.
5. **Exterior:** Wipe the exterior of the grinder unit with a soft, dry cloth.
6. **Do Not Immerse:** Never immerse the motor base or power cord in water or place them in a dishwasher.

7. Troubleshooting

Table 7.1: Common Issues and Solutions

Problem	Possible Cause	Solution
Grinder does not start.	Lid not properly secured.	Ensure the lid is firmly pressed down and locked into place to activate the safety switch.
Grinder does not start.	Power cord not connected.	Check that the detachable power cord is securely plugged into both the grinder and the wall outlet.
Grinding effect is not good for small amounts of spices.	Blades cannot reach very small quantities effectively.	This is a design limitation for safety. Consider grinding a slightly larger quantity or using a mortar and pestle for very small amounts.
Motor seems strained or grinding is slow for hard items (e.g., fenugreek seeds).	Ingredients are too hard or quantity is too large for a single continuous grind.	Grind in short bursts. For very hard items, pre-chop if possible, and grind for longer cumulative durations (e.g., over 90 seconds in multiple cycles).
Ground coffee smells burnt.	Over-grinding or continuous operation for too long.	Reduce grinding time. Use short pulses rather than continuous grinding, especially for fine grinds. Allow the motor to cool between uses.

8. Specifications

Table 8.1: Product Specifications

Attribute	Value
Brand	NIXIUKOL
Model Number	HK-032
Voltage	240 Volts
Item Weight	750 g
Package Dimensions	21.6 x 13.4 x 13.2 cm
Recommended Uses	Grinding coffee beans, spices, pepper, herbs, nuts, grains
Motor Speed	28000 rpm
Noise Level	50 dB
Capacity	50g

9. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or contact NIXIUKOL customer service directly. Contact details can typically be found on the product packaging or the official NIXIUKOL website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08DJ1FRZ4>

More documents and user manuals: <https://manuals.plus/>