

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VINABTY](#) /

> [VINABTY RC5400SR Remote Control Instruction Manual for Marantz AV Receiver](#)

## VINABTY RC5400SR

# VINABTY RC5400SR Remote Control Instruction Manual

Model: RC5400SR

## INTRODUCTION

This manual provides instructions for the VINABTY RC5400SR replacement remote control, designed for use with Marantz AV Receiver Systems. This remote offers a direct replacement solution, requiring no complex programming. Simply insert batteries to begin operation.





Image: Front view of the VINABTY RC5400SR remote control, showcasing its button layout.

## SETUP

---

### Battery Installation

The VINABTY RC5400SR remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with your compatible Marantz AV Receiver System.







Image: Rear view of the VINABTY RC5400SR remote control with the battery compartment open, showing where to insert two AAA batteries.

## OPERATING INSTRUCTIONS

---

This remote control is designed to replicate the functions of the original Marantz AV Receiver remote. The buttons are intuitively laid out for ease of use.

### Key Functions:

- **POWER:** Turns the AV Receiver on or off.
- **Input Selectors (TV, VCR1, DSS/VCR2, DVD, TUNER, CD, TAPE, AUX, AMP, CDR/MD):** Selects the desired audio/video input source on your receiver.
- **VOLUME UP/DOWN (MAIN VOL):** Adjusts the main volume level of the AV Receiver.
- **MUTE:** Temporarily silences the audio output.
- **DISPLAY:** Changes the information displayed on the AV Receiver's front panel or on-screen display.
- **MENU / OSD:** Accesses the AV Receiver's on-screen menu for settings and adjustments.
- **Navigation Buttons (Arrow keys and OK):** Used to navigate through menus and confirm selections.
- **Numeric Keypad (0-9):** For direct input of channel numbers or other numerical selections.
- **Sound Modes (AUTO, DSP, DTS, STEREO, 6.1CH IN, etc.):** Selects various audio processing modes.
- **Playback Controls (PLAY, PAUSE, STOP, FAST FORWARD, REWIND, SKIP):** Controls playback functions for connected media devices.
- **BASS / TREBLE:** Adjusts bass and treble levels.

For specific functions related to your Marantz AV Receiver model, refer to your receiver's original user manual.



Image: Angled view of the VINABTY RC5400SR remote control, highlighting the various function buttons.

## MAINTENANCE

### Cleaning the Remote

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

### Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both

batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and receiver. Remote out of range.	Check battery polarity and replace batteries if necessary. Ensure a clear line of sight to the AV Receiver's IR sensor. Move closer to the receiver (within 10 meters).
Buttons are unresponsive or sticky	Dirt or debris under the buttons.	Clean the remote control as described in the Maintenance section.
Limited range	Weak batteries. Interference from other electronic devices.	Replace batteries. Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) or other IR devices are interfering.

## SPECIFICATIONS

- **Brand:** VINABTY
- **Model Number:** RC5400SR
- **Compatible Devices:** Marantz AV Receiver Systems (e.g., RC5400SR, RC 5400 SR)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** ABS
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Maximum Range:** 10 Meters
- **Number of Buttons:** Approximately 50

## WARRANTY AND SUPPORT

This VINABTY RC5400SR remote control comes with a 90-day warranty. If you encounter any issues or require assistance, please contact the seller or manufacturer for support. Ensure you retain your proof of purchase for warranty claims.