

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LIORQUE](#) /

› [LIORQUE Digital Kitchen Timer, Magnetic Countdown Countup Timer with Large LED Display, 2 Brightness Levels, 3 Volume Levels, Productivity Timers for Classroom Cooking Fitness Silver](#)

LIORQUE YGH5250

LIORQUE Digital Kitchen Timer Instruction Manual

Model: YGH5250

1. PRODUCT OVERVIEW

The LIORQUE Digital Kitchen Timer (Model: YGH5250) is a versatile and user-friendly device designed for precise time management in various settings, including kitchens, classrooms, offices, and fitness routines. It features a large LED display, magnetic backing for convenient placement, and intuitive twist operation for setting time. This manual provides comprehensive instructions for setup, operation, maintenance, and troubleshooting.



Figure 1: Front view of the LIORQUE Digital Kitchen Timer, highlighting its large LED display.

2. KEY FEATURES

- **Easy Twist Operation:** Rotate the outer ring to quickly adjust time in 5-second increments. Press the center button to start or stop.
- **Magnetic Count Up/Down Timer:** Functions as both a countdown timer (from 99m55s to 0) and a stopwatch (from 0 to 99m55s). Strong magnet allows attachment to metal surfaces like refrigerators or whiteboards.
- **Large LED Display/Oversize Digits:** Features a 3-inch black screen with bright white numbers for excellent readability from a distance.
- **Adjustable Volume Levels:** Offers 3 alarm volume settings (0dB, 60-75dB, 80-90dB) including a mute option where the screen flashes as a visual alert.
- **Brightness Modes:** Two brightness settings: Normal Mode for constant illumination and Power Saving Mode

where the display dims after 5 seconds and turns off after another 5 seconds of inactivity to conserve battery.

- **Multifunctional Use:** Ideal for cooking, studying, exercise, classroom activities, meetings, and general time management.



Figure 2: Visual representation of the timer's core features including its LED display, rotatable ring, count-up/down functionality, and magnetic design.

3. SETUP

3.1 Battery Installation

The LIORQUE Digital Kitchen Timer requires 3 AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the back of the timer.
2. Slide open the battery cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover securely.



Figure 3: Rear view of the timer, showing the battery compartment and switches for brightness and volume control.

3.2 Initial Power On

Once batteries are installed, the timer display will light up. If the display does not light up, ensure batteries are correctly inserted or replace them with new ones.

4. OPERATING INSTRUCTIONS

4.1 Setting the Timer (Countdown)

1. Ensure the timer is in countdown mode (default or by rotating from 00:00).
2. Rotate the outer ring clockwise to increase the time. Each click adjusts the time by 5 seconds. Rotate quickly for larger increments.
3. Rotate the outer ring counter-clockwise to decrease the time.
4. The maximum countdown time is 99 minutes and 55 seconds.
5. Press the center ST/SP (Start/Stop) button to begin the countdown.
6. To pause the countdown, press the ST/SP button again. Press it once more to resume.



Figure 4: Setting the countdown time by rotating the outer ring.

4.2 Using as a Stopwatch (Count Up)

1. From a stopped state (display showing 00:00), press the center ST/SP button to start counting up.
2. To pause the stopwatch, press the ST/SP button again. Press it once more to resume.
3. The maximum count-up time is 99 minutes and 55 seconds.



Figure 5: Starting the count-up function from 00:00.

4.3 Resetting the Timer

To reset the timer to 00:00, press and hold the center ST/SP button for 3 seconds.



Figure 6: Resetting the timer to zero.

4.4 Adjusting Volume and Brightness

On the back of the timer, you will find switches to adjust the alarm volume and display brightness:

- **Volume Control:** Slide the switch to select High (80-90dB), Low (60-75dB), or Mute (0dB). In mute mode, the display will flash when the timer ends.
- **Brightness Control:** Slide the switch to select Normal Mode (constant brightness) or Power Saving Mode (display dims and turns off after inactivity).

2 Modalità di Illuminazione

Luce Costante e Modalità di Risparmio Energetico



Figure 7: Back of the timer with switches for adjusting brightness and volume levels.



Figure 8: Visual guide to the three volume settings: High (80-90dB), Medium (60-75dB), and Mute (0dB).

5. MAINTENANCE

To ensure the longevity and optimal performance of your LIORQUE Digital Kitchen Timer, follow these maintenance guidelines:

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Battery Care:** If the timer will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Storage:** Store the timer in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

6.1 Display Not Lighting Up

- Check if the batteries are installed correctly with the correct polarity.
- Replace the batteries with new AAA batteries.
- Ensure the brightness switch on the back is not set to the lowest or off position (if applicable).

6.2 Alarm Not Sounding

- Check the volume switch on the back of the timer. Ensure it is not set to Mute (0dB).
- If in Mute mode, the display will flash when the timer ends.

6.3 Difficulty Setting Time

- Ensure you are rotating the outer ring smoothly.
- If the display is unresponsive, try resetting the timer by holding the ST/SP button for 3 seconds.

7. SPECIFICATIONS

Attribute	Detail
Brand	LIORQUE
Model Number	YGH5250
Color	Silver
Material	Acrylonitrile Butadiene Styrene
Product Dimensions	1.38"D x 3.66"W x 1.54"H
Item Weight	4.7 ounces (132 Grams)
Screen Size	1.38 Inches
Number of Settings (Volume)	3
Batteries Required	3 AAA batteries (included)

Country of Origin	China
-------------------	-------

8. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Official product video demonstrating the LIORQUE Kitchen Timer's features and operation.

9. WARRANTY AND SUPPORT

LIORQUE stands behind the quality of its products. For warranty information, technical support, or any inquiries regarding your Digital Kitchen Timer, please refer to the contact information provided on the product packaging or visit the official LIORQUE website. Please retain your proof of purchase for warranty claims.