

- Manuals.plus /
- > [Globo](#) /
 - > Globo LED E14 4.5W RGB CCT Lamp Bulb (Model 106754SH) Instruction Manual

Globo 106754SH

Globo LED E14 4.5W RGB CCT Lamp Bulb

Model: 106754SH | Brand: Globo

INTRODUCTION

This manual provides detailed instructions for the Globo LED E14 4.5W RGB CCT Lamp Bulb, model 106754SH. This versatile LED bulb features dimmable functionality, color changing capabilities (RGB), and adjustable color temperature (CCT from 3000K to 6000K). It is designed for use in standard E14 sockets.





Image: Front view of the Globo LED E14 4.5W RGB CCT Lamp Bulb, showing its white casing and E14 screw base.

SAFETY INFORMATION

- Always disconnect power at the main switch before installing, removing, or performing any maintenance on the bulb.
- Do not use this bulb with incompatible dimmer switches. Using an incompatible dimmer may cause flickering or damage to the bulb.
- Ensure the fixture provides adequate ventilation for the bulb.
- This bulb is for indoor use only unless specified otherwise by the fixture.
- Do not disassemble the bulb. There are no user-serviceable parts inside.
- Keep out of reach of children.

PACKAGE CONTENTS

- 1x Globo LED E14 4.5W RGB CCT Lamp Bulb (Model 106754SH)

SETUP

1. **Power Off:** Ensure the power supply to the light fixture is completely turned off at the main circuit breaker or wall

switch before beginning installation.

- 2. **Insert Bulb:** Carefully screw the Globo LED E14 bulb into a compatible E14 socket. Ensure it is securely tightened but do not overtighten.
- 3. **Restore Power:** Once the bulb is securely installed, restore power to the light fixture.

OPERATING INSTRUCTIONS

This Globo LED bulb offers advanced lighting features:

- **Dimmable Functionality:** The bulb is designed to be dimmable. Its dimming capabilities are controlled by a compatible dimmer switch installed in your light fixture's circuit. Refer to your dimmer switch's instructions for operation.
- **Color Changing (RGB):** The bulb can produce a wide range of colors. This feature is typically controlled by a compatible smart home system, a dedicated remote control, or a specific fixture control unit.
- **Color Temperature (CCT) Adjustment:** You can adjust the white light color temperature from warm white (3000K) to cool white (6000K). This adjustment is also managed through a compatible control system or remote, depending on your setup.

Please note that the specific method for controlling dimming, color changing, and CCT adjustment depends on the light fixture and control system you are using with this bulb. This bulb provides the capability, but the control mechanism is external.

MAINTENANCE

- **Cleaning:** To clean the bulb, ensure the power is off and the bulb is cool. Wipe gently with a soft, dry, lint-free cloth. Do not use liquid or abrasive cleaners, as they may damage the bulb's surface or internal components.
- **Replacement:** The LED bulb has a long lifespan. Replace the bulb only when its light output significantly diminishes or it ceases to function.

TROUBLESHOOTING

- **Bulb Not Lighting:**
 - Check if the power supply to the fixture is on.
 - Ensure the bulb is screwed in correctly and making proper contact with the socket.
 - Test the bulb in another working E14 fixture if available.
- **Bulb Flickering:**
 - Verify that your dimmer switch is compatible with LED bulbs. Incompatible dimmers can cause flickering.
 - Ensure the bulb is securely tightened in the socket.
- **Color/CCT Issues:**
 - If the color or color temperature is not changing as expected, try cycling the power off and on to reset the bulb.
 - Check the battery or functionality of your remote control or smart home device.

SPECIFICATIONS

Brand	Globo
-------	-------

Model Number	106754SH
Light Type	LED
Base Type	E14
Wattage	4.5W (LED), 0.7W (RGB)
Voltage	230V
Luminous Flux	300 lm
Color Temperature (CCT)	3000K - 6000K
Special Features	Dimmable, Color Changing (RGB)
Material	Metal, Plastic
Energy Efficiency Class	A
Color Rendering Index (CRI)	37
Dimensions (Diameter x Height)	37 mm x 106 mm



Image: Diagram showing the dimensions of the Globo LED E14 bulb, indicating a height of 4.2 inches (10 cm).

WARRANTY AND SUPPORT

For detailed warranty information regarding your Globo LED E14 4.5W RGB CCT Lamp Bulb, please refer to the documentation provided at the time of purchase or visit the official Globo website. Warranty terms and conditions may vary by region and retailer.

For technical assistance, troubleshooting not covered in this manual, or any other support inquiries, please contact Globo customer service through their official channels. Contact information can typically be found on the product packaging or the Globo website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08DKJ6NG2>

More documents and user manuals: <https://manuals.plus/>