

[Manuals.plus](#) /

› [YESTEL](#) /

› YESTEL T5 10.1 Inch Android 10 Tablet User Manual

YESTEL T5

YESTEL T5 10.1 Inch Android 10 Tablet User Manual

Model: T5 | Brand: YESTEL

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your YESTEL T5 10.1 Inch Android 10 Tablet. Please read through these instructions carefully to ensure optimal performance and longevity of your device. Keep this manual for future reference.

2. WHAT'S IN THE BOX

Upon unboxing, verify that all items listed below are present:

- 1 x YESTEL T5 Android 10.0 Tablet
- 1 x T5 Tablet Cover
- 1 x US Charger
- 1 x USB-C Cable
- 1 x 2-in-1 Capacitive Pen
- 1 x Cleaning Cloth
- 1 x User Manual (this document)
- 1 x 3.5mm AUX Earphone



Image 2.1: The YESTEL T5 tablet and its included accessories: protective case, charger, USB-C cable, capacitive pen, cleaning cloth, user manual, and earphones.

3. PRODUCT OVERVIEW

Familiarize yourself with the physical components and ports of your YESTEL T5 tablet.



Image 3.1: Diagram of the YESTEL T5 tablet highlighting physical features like power button, volume controls, reset button, Type-C port, 3.5mm audio jack, Micro SD slot, front camera, rear camera, and flash.

Key Features:

- **Display:** 10.1-inch Full HD (1280 x 800 pixels) screen.
- **Processor:** Octa-Core for efficient performance.
- **Memory & Storage:** 3GB RAM and 64GB internal storage, expandable via Micro SD card.
- **Cameras:** 5.0MP Front Camera and 8.0MP Rear Camera with flash.
- **Audio:** Dual speakers for enhanced sound experience.
- **Connectivity:** 5G/2.4G Dual Band WiFi, Bluetooth, GPS, and 4G LTE support for cellular data and calls.
- **Battery:** 6000mAh battery for extended usage.

4. SETUP

4.1 Initial Power On and Charging

1. Connect the tablet to the provided charger and USB-C cable.
2. Plug the charger into a power outlet. Allow the tablet to charge for at least 30 minutes before first use, or until the battery indicator shows sufficient charge.
3. Press and hold the Power button (refer to Image 3.1) for a few seconds until the YESTEL logo appears.
4. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account login.

4.2 Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle the Wi-Fi switch to the **On** position.
3. Select your desired network from the list of available networks.
4. Enter the password if prompted, then tap **Connect**.

4.3 Inserting a Micro SD Card or SIM Card

The tablet supports expandable storage via a Micro SD card and cellular connectivity via a SIM card.

1. Locate the SIM/Micro SD card tray on the side of the tablet (refer to Image 3.1).
2. Use the provided SIM ejector tool to gently press into the small hole on the tray until it pops out.
3. Carefully place your Micro SD card and/or SIM card into the designated slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the tablet until it clicks into place.

Your browser does not support the video tag.

Video 4.1: An official YESTEL video demonstrating the features of the T5 tablet, including its display, processor, Wi-Fi capabilities, and SIM card installation. This video highlights the tablet's functionality for various tasks.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

The YESTEL T5 runs on Android 10, offering an intuitive user interface.

- **Home Screen:** Swipe left or right to access different home screens.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to access notifications and quick settings toggles (Wi-Fi, Bluetooth, etc.).
- **Multitasking:** Tap the square icon (or swipe up and hold from the bottom if using gesture navigation) to view recently used apps.

Android 10.0 system+Octa-Core processor

3GB RAM + 64GB ROM
Support Netflix, Sky go, Now TV, etc.

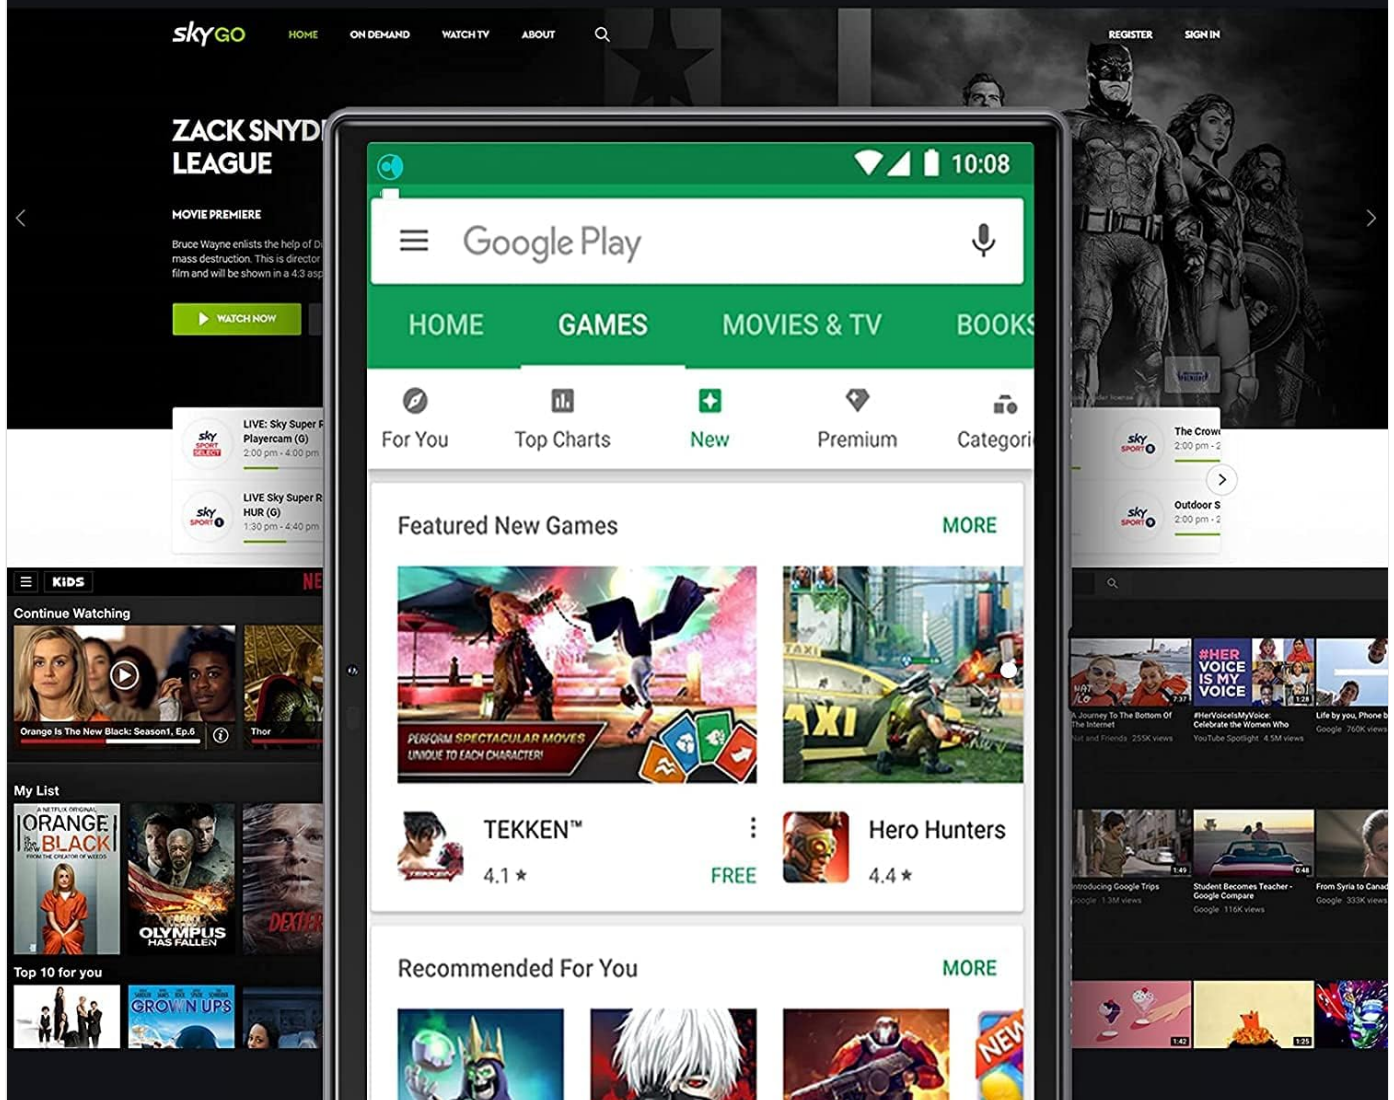


Image 5.1: The YESTEL T5 tablet screen showing the Google Play Store, indicating access to a wide range of applications.

5.2 Camera Usage

Your tablet is equipped with a 5.0MP front camera and an 8.0MP rear camera for photos and videos.

1. Open the **Camera** application.
2. Tap the camera switch icon to alternate between the front and rear cameras.
3. Tap the shutter button to take a photo or the video icon to record a video.
4. Access various camera modes and settings (e.g., flash, HDR) from the camera interface.



Image 5.2: A close-up view of the YESTEL T5 tablet's camera, highlighting its placement and design.

5.3 Battery Management

The 6000mAh battery provides ample power for daily use. To optimize battery life:

- Adjust screen brightness to a comfortable level.
- Close unused applications running in the background.
- Turn off Wi-Fi, Bluetooth, or GPS when not in use.
- Enable Battery Saver mode in **Settings > Battery**.

6. SPECIFICATIONS

Detailed technical specifications for the YESTEL T5 tablet:

Feature	Specification
Brand	YESTEL (Manufacturer) / HOPLAZA (Brand)
Model Name	T5
Operating System	Android 10
Screen Size	10.1 Inches
Display Resolution	1280 x 800 pixels
Processor	Octa-Core (MediaTek)
RAM Memory	3 GB
Storage Capacity	64 GB (expandable via Micro SD)
Front Camera	5 MP
Rear Camera	8 MP
Battery Capacity	6000 mAh Lithium Polymer
Connectivity	Bluetooth, GPS, Wi-Fi (2.4G/5G Dual Band), 4G LTE Cellular
Ports	USB Type-C, 3.5mm AUX
Item Weight	0.45 Kilograms

7. MAINTENANCE

Proper care ensures the longevity of your tablet:

- **Cleaning:** Use the provided cleaning cloth or a soft, lint-free cloth to wipe the screen and body. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the tablet in a cool, dry place away from direct sunlight and extreme temperatures.
- **Protection:** Use the included tablet cover to protect against scratches and minor impacts.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security. Go to **Settings > System > System update**.

8. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

Problem	Solution
Tablet does not turn on	Ensure the battery is charged. Connect to the charger and wait a few minutes before attempting to power on again. If unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Wi-Fi connection issues	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal and have entered the correct password.
Applications are slow or crashing	Close unused background apps. Clear app cache (Settings > Apps & notifications > select app > Storage & cache > Clear cache). Restart the tablet.
Screen is unresponsive	Restart the tablet by holding the power button. If the issue persists, perform a factory reset (this will erase all data, back up important files first).

9. WARRANTY AND SUPPORT

Your YESTEL T5 tablet comes with a **2-year warranty**. YESTEL also provides **Lifetime Technical Consultant** support for any inquiries or assistance you may need.

For warranty claims or technical support, please refer to the contact information provided on the YESTEL official website or the support card included in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question