

[Manuals.plus](#) /

› [FUNLAB](#) /

› FUNLAB Switch Pro Controller User Manual

FUNLAB FLSPC003-PB

FUNLAB Switch Pro Controller User Manual

Model: FLSPC003-PB

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your FUNLAB Switch Pro Controller. Please read this manual carefully before use to ensure optimal performance and longevity of your device.



Image: Front view of the FUNLAB Switch Pro Controller. It is a black wireless gamepad with standard button layout including two analog sticks, a D-pad, ABXY buttons, and shoulder buttons.

SETUP

Pairing with Nintendo Switch

1. Ensure your Nintendo Switch console is powered on and updated to the latest system software.
2. From the HOME Menu, select **Controllers**, then **Change Grip/Order**.
3. On the FUNLAB Pro Controller, press and hold the **SYNC Button** (usually a small button on the top edge or back) for a few seconds until the player LEDs begin to flash.
4. Once the player LEDs stop flashing and remain lit, the controller is successfully paired.
5. Subsequent pairings should connect automatically when the controller is powered on and within range of the console.

Connecting to PC

The controller is compatible with PC. For PC connection, use a USB-C cable to connect the controller to your computer. Drivers may install automatically. For wireless PC connection, ensure your PC has Bluetooth capability and follow standard Bluetooth pairing procedures for game controllers.

OPERATING INSTRUCTIONS

Button Layout and Functions

- **Analog Sticks:** Two precise analog sticks for 360-degree movement and camera control.
- **D-Pad:** Directional pad for precise directional input.
- **ABXY Buttons:** Standard action buttons with intuitive layout and tactile feedback.
- **Shoulder Buttons (L/R, ZL/ZR):** For various in-game actions.
- **Home Button:** Returns to the console's HOME Menu. *Note: The Home button's placement may be close to the + button.*
- **Screenshot Button:** Captures screenshots of your gameplay.
- **Turbo Function:** Allows for rapid, repeated button presses. Consult specific game instructions for optimal use.
- **Vibration Feature:** Provides strong and immersive haptic feedback during gameplay.
- **Motion Control:** Supports motion sensing for compatible games.

MAINTENANCE

Charging the Controller

- Connect the provided USB-C charging cable to the controller's charging port.
- Connect the other end of the cable to a USB power source, such as the Nintendo Switch dock's USB port or a compatible USB wall adapter.
- A full charge typically takes approximately 3 hours.
- The controller offers a commendable battery life, lasting through long gaming sessions (approximately 8 hours on a full charge).
- *Note: A charging brick is not included. If charging from an outlet, ensure your charger outputs approximately 400mA.*

Cleaning and Storage

- Wipe the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Issue	Possible Cause / Solution
Controller does not connect/pair.	• Ensure the controller is charged. • Verify the Switch console is powered on and in pairing mode. • Press and hold the SYNC button on the controller until LEDs flash. • Move closer to the console to ensure proper Bluetooth range. • Restart both the controller and the Switch console.
Controller does not wake the Switch from sleep mode.	This controller model does not support waking the Switch from sleep mode. You will need to manually power on the Switch console.
Vibration feels different from original Pro Controller.	This controller features standard vibration (similar to a PlayStation 2 controller) and does not include HD Rumble functionality found in some original controllers.

Issue	Possible Cause / Solution
Buttons are unresponsive or sticky.	• Ensure the controller is fully charged. • Clean around the buttons with a soft, dry cloth. • If the issue persists, contact customer support.

SPECIFICATIONS

- **Brand:** FUNLAB
- **Model Name:** FF Bluetooth Remote Gamepad with 7 LED Colors/Paddle Buttons/Turbo/Motion Control
- **Item Model Number:** FLSPC003-PB
- **Compatible Devices:** Nintendo Switch, PC
- **Controller Type:** Gamepad
- **Connectivity Technology:** Bluetooth
- **Color:** Black
- **Power Source:** Battery Powered
- **Item Weight:** 12.5 ounces
- **Package Dimensions:** 6.14 x 5.55 x 2.6 inches

WARRANTY AND SUPPORT

For warranty information, technical support, or further inquiries, please refer to the contact details provided with your product packaging or visit the official FUNLAB website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question