

Galanz GLDW12TS2A5A

Galanz GLDW12TS2A5A Built-in Dishwasher User Manual

Model: GLDW12TS2A5A

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Galanz GLDW12TS2A5A Built-in Dishwasher. Please read this manual thoroughly before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This includes:

- Read all instructions before using the dishwasher.
- Use the dishwasher only for its intended function.
- Do not touch the heating element during or immediately after use.
- Do not allow children to play in or on the dishwasher.
- Ensure proper grounding for electrical connections.
- Do not operate the dishwasher if it has a damaged power cord or plug.

PRODUCT OVERVIEW

The Galanz GLDW12TS2A5A is a 24-inch built-in dishwasher designed for efficient dish cleaning. It features 12 place settings, 6 wash cycles, and 3 additional options.

Exterior View



Image: Front view of the Galanz GLDW12TS2A5A Built-in Dishwasher, showcasing its stainless steel finish and integrated handle.

Interior and Capacity

12 Place Settings and Stainless Steel Tub



Image: The dishwasher interior with racks loaded to demonstrate its 12 place setting capacity. The stainless steel tub is visible.

Water Softener Feature

Water Softener

• Without Water Softener



• With Water Softener

Image: A visual comparison showing a metal surface with mineral deposits (without water softener) versus a clean surface (with water softener), highlighting the benefit of the integrated water softener.

Flexible Rack System

① Adjustable Upper Basket

Raise the rack to accommodate large pots or serving dishes.

② Removable Silverware Basket

Perfect to fit all your needs.

③ Lower Basket

Loading a variety of dish and cookware combinations.

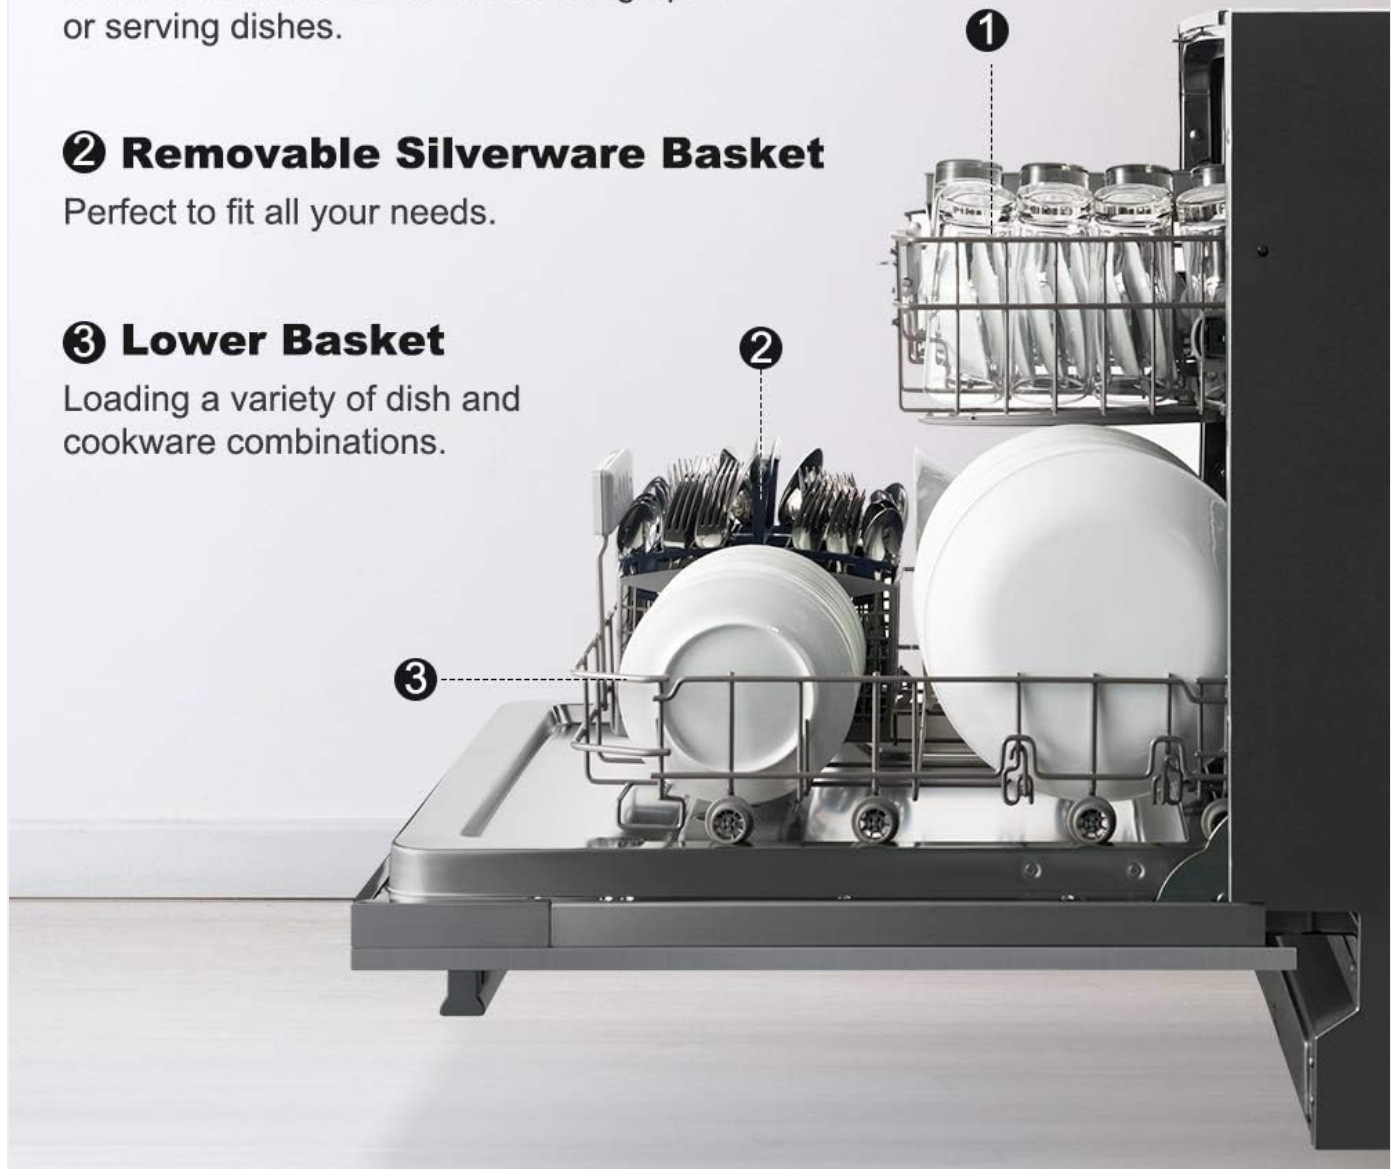


Image: An illustration of the dishwasher's flexible rack system, pointing out the adjustable upper basket, removable silverware basket, and the lower basket for various dish and cookware sizes.

Control Panel and Cycles



- Heavy
- Normal
- Delicate
- Light
- Express
- Rinse

6 Washer Cycles

Image: A close-up of the top-mounted control panel, displaying the indicator lights for Rinse Aid, Salt, and the six wash cycles: Heavy, Normal, Delicate, Light, Express, and Rinse.

SETUP AND INSTALLATION

The Galanz GLDW12TS2A5A is designed for built-in installation. Professional installation is recommended. Ensure the installation area meets the required dimensions and electrical specifications.

Installation Dimensions



Ultra-Quiet



Delay Wash Option



Stainless Steel

Image: The Galanz GLDW12TS2A5A dishwasher seamlessly integrated into a kitchen cabinet setup, demonstrating its built-in form factor.

- **Dimensions (W x D x H):** 23.62" x 22.68" x 32.28"
- **Voltage:** 120 Volts / 60Hz
- Ensure adequate space and proper water/drain connections are available.

Refer to the detailed installation guide provided with your appliance for specific plumbing and electrical connection instructions.

OPERATING INSTRUCTIONS

This section details how to operate your dishwasher for optimal cleaning performance.

Loading the Dishwasher



Image: An overhead view of the dishwasher's interior, demonstrating proper loading of various dishes, glasses, and cutlery in the baskets.

- Scrape off large food particles before loading.
- Place larger items in the lower basket and smaller items, glasses, and cups in the upper basket.
- Utilize the removable cutlery basket for silverware.
- Adjust the upper basket height to accommodate taller items if needed.

Selecting a Wash Cycle

The dishwasher offers 6 wash cycles to suit different cleaning needs:

- **Heavy:** For heavily soiled dishes and pots.
- **Normal:** Standard cycle for everyday dishes.
- **Delicate:** For fragile items and lightly soiled dishes.
- **Light:** For lightly soiled dishes.
- **Express:** A quicker wash for lightly soiled items.
- **Rinse:** For rinsing dishes that will be washed later.

Additional Options

Enhance your wash cycle with these options:

- **24h Delay:** Delays the start of the wash cycle by up to 24 hours.
- **Sanitize:** Increases the rinse temperature for improved drying and sanitization. Available with any cycle except Rinse.
- **Half Load:** Reduces energy and water consumption when washing a smaller load.

Indicator lights will illuminate when the dishwasher is low on softener, rinse aid, or detergent, prompting you to refill.

CARE AND MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Cleaning the Exterior:** Wipe the stainless steel exterior with a soft, damp cloth and mild detergent. Avoid abrasive cleaners.
- **Cleaning the Interior:** Periodically clean the interior with a dishwasher cleaner or a mixture of vinegar and baking soda.
- **Filter Maintenance:** Regularly check and clean the dishwasher filters to prevent blockages and ensure efficient cleaning.
- **Rinse Aid Dispenser:** Refill the rinse aid dispenser when the indicator light illuminates to ensure spot-free drying.
- **Water Softener:** If your water supply is hard, ensure the water softener is adequately supplied with salt (if applicable to your model) to prevent mineral buildup.


TROUBLESHOOTING GUIDE

Before contacting service, review these common issues and solutions:

- **Dishwasher not starting:** Check if the door is fully closed and latched. Ensure the power cord is securely plugged in and the circuit breaker has not tripped.
- **Dishes not clean:** Verify that dishes are loaded correctly and not blocking spray arms. Check detergent levels and ensure filters are clean. Select an appropriate wash cycle.
- **Water not draining:** Inspect the drain hose for kinks or blockages. Clean the filter system.
- **Excessive noise:** Ensure dishes are not rattling against each other or the spray arms. Check for foreign objects in the pump area.
- **Spots or film on dishes:** Refill the rinse aid dispenser. Check water hardness and adjust water softener settings if necessary.

For issues not resolved by this guide, please contact customer support.

TECHNICAL SPECIFICATIONS

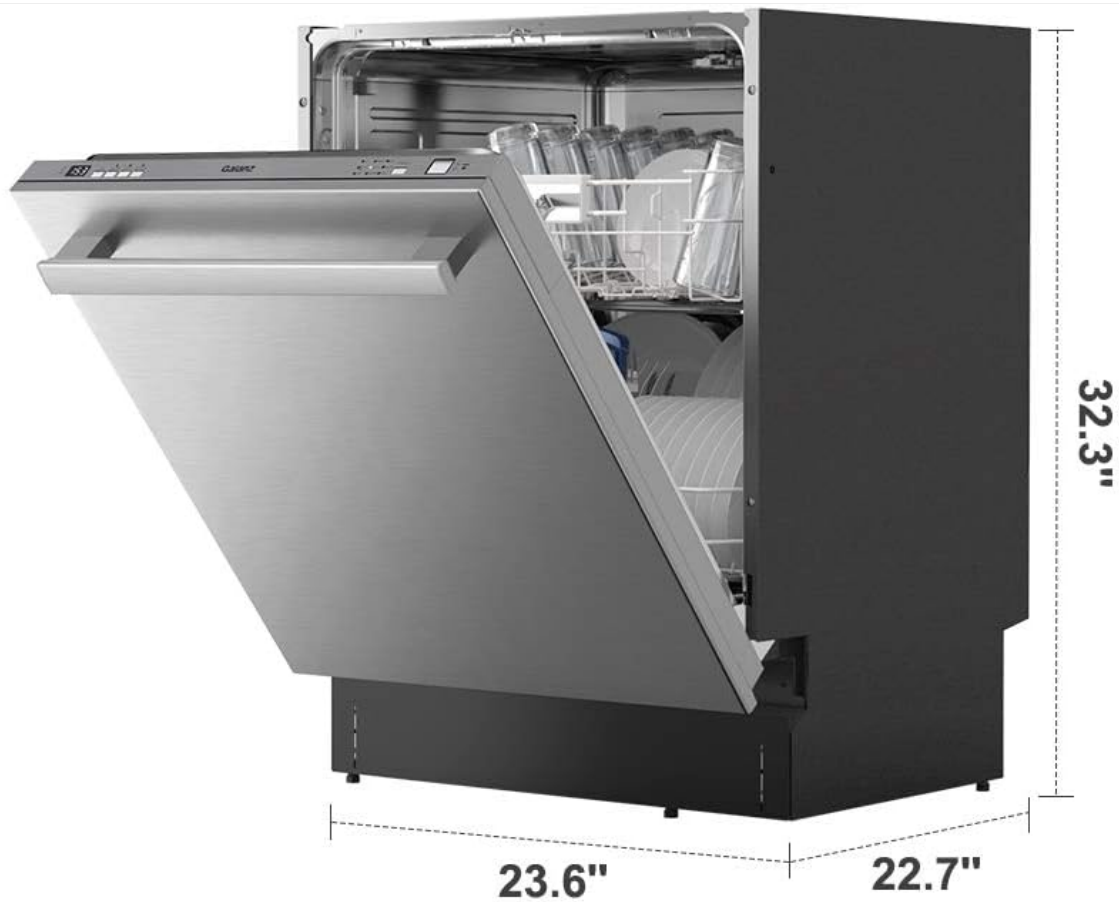

Dimension	23.6" X 22.7" X 32.3" (W X D X H)
Annual Energy Consumption	270 kwh
Capacity	12 Place Settings
Voltage	120Volts/ 60Hz
Weight	96.8 lbs
Installation Type	Built-In

Image: A graphic displaying the key dimensions (width, depth, height) and other specifications such as annual energy consumption, capacity, voltage, and weight of the dishwasher.

Feature	Specification
Model Name	GLDW12TS2A5A
Brand	Galanz
Installation Type	Built-In
Finish Type	Stainless Steel
Product Dimensions (W x D x H)	23.62" x 22.68" x 32.28"
Item Weight	96.8 pounds
Capacity	12 Place Settings
Voltage	120 Volts / 60Hz
Annual Energy Consumption	270 kWh (Energy Star Approved)

Noise Level	49 Decibels (A)
Wash Cycles	6 (Heavy, Normal, Delicate, Light, Express, Rinse)
Additional Options	24h Delay, Sanitize, Half Load
Included Components	1 x Dishwasher, 2 x Basket, 1 x Fork Shelf, 1 x Power Cord
UPC	190873003663

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

Galanz products are manufactured to high-quality standards. For specific warranty details regarding your GLDW12TS2A5A dishwasher, please refer to the warranty card included with your purchase or visit the official Galanz website. Keep your proof of purchase for warranty claims.




Customer Support


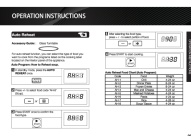
If you have any questions, require technical assistance, or need to schedule service, please contact Galanz customer support. Contact information can typically be found on the Galanz website or in the documentation provided with your appliance.

For online resources, visit the [Galanz Store on Amazon](#).



Related Documents - GLDW12TS2A5A

	Galanz GLDW09TS2A5A Dishwasher User Manual Comprehensive user manual for the Galanz GLDW09TS2A5A built-in dishwasher. Includes important safety instructions, component descriptions, setup guides, operating procedures, maintenance tips, troubleshooting, specifications, and warranty information.
	Galanz Dishwasher Installation Manual - GLDW12TS2A5A & GLDW09TS2A5A Comprehensive installation guide for Galanz dishwashers, models GLDW12TS2A5A and GLDW09TS2A5A. Covers safety, preparation, tools, and step-by-step installation procedures.
	Galanz Arcus User Manual and Warranty Guide Comprehensive user manual and warranty information for the Galanz Arcus home appliance, providing detailed operating instructions, safety precautions, maintenance tips, and troubleshooting guidance.

	<p>Galanz GLW57MS2B16 Wine Cooler Instruction Manual</p> <p>Comprehensive instruction manual for the Galanz GLW57MS2B16 wine cooler, covering safety, installation, operation, maintenance, troubleshooting, and warranty information.</p>
 A black and white photograph of a Galanz GT12SSDAN18 toaster oven. The oven is a compact, rectangular unit with a glass door and a control panel on the right side. The Galanz logo is visible in the top left corner of the image.	<p>Galanz GT12SSDAN18 Toaster Oven User Manual - Safety, Operation & Warranty Guide</p> <p>User manual for the Galanz GT12SSDAN18 toaster oven. Includes safety, installation, operation instructions for toast, air fry, bake, rotisserie, broil, pizza, convection, dehydrate, and warranty information.</p>
 A photograph of a Galanz microwave oven operation instructions page. The page is titled "OPERATION INSTRUCTIONS" and contains various sections including "Safety Precautions", "Basic Controls", "Cooking Instructions", and "Troubleshooting". It includes a table of cooking times for different foods and a diagram of the microwave's control panel.	<p>Galanz Microwave Oven Operation Instructions and Warranty</p> <p>Comprehensive guide to operating a Galanz microwave oven, including auto reheat, popcorn function, child lock, troubleshooting, cleaning, and warranty information.</p>