

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [USARMT](#) /

› [USARMT A6653 Smart TV Remote Control Instruction Manual for Seiki TVs](#)

USARMT A6653

USARMT A6653 Smart TV Remote Control Instruction Manual

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your USARMT A6653 Smart TV Remote Control. This remote is specifically designed to be compatible with various Seiki Smart TV models, including SC32FK700N, SC40FK700N, SC40FS703N, SC42FK950N, SC49UK700N, SC50UK700N, SC55UK700N, SC60UK850N, SC65UK700N, SC70UK850N, and SC75UK950N. Please read this manual thoroughly before use.

SETUP

The USARMT A6653 remote control is preprogrammed and does not require any additional setup or pairing with your Seiki Smart TV. Simply install the batteries, and the remote will be ready for use.

Battery Installation

Your remote control requires two AAA batteries (not included). Follow these steps to install them:

- Locate the battery compartment on the back of the remote control.
- Press down on the tab and slide the battery cover off.
- Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is ready to operate your compatible Seiki Smart TV.



This image shows the rear view of the remote control with the battery cover removed, illustrating the correct orientation for inserting two AAA batteries into the compartment.

OPERATING

Basic Functions

The USARMT A6653 remote control provides full functionality for your compatible Seiki Smart TV. Point the remote directly at the TV's infrared sensor for optimal performance.

- **Power Button (Red):** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels or input numerical values.
- **List Button:** Accesses the channel list or other programmed lists.
- **Netflix Button:** Direct access to the Netflix application.
- **YouTube Button:** Direct access to the YouTube application.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and confirm selections.
- **Menu Button:** Opens the TV's main menu.
- **Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Closes the current menu or application.
- **VOL +/- Buttons:** Adjusts the volume level.
- **Mute Button:** Mutes or unmutes the TV audio.
- **CH +/- Buttons:** Changes the TV channel.

- **INFO Button:** Displays information about the current program or input.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward)** Controls media playback.
- **CC (Closed Caption) Button:** Toggles closed captions on or off.
- **TTS (Text-to-Speech) Button:** Activates or deactivates text-to-speech functionality.
- **Vchip Button:** Accesses V-Chip settings for parental controls.
- **S.Mode (Sound Mode) Button:** Cycles through various sound modes.
- **Aspect Button:** Changes the screen aspect ratio.
- **MTS/Audio Button:** Selects Multi-channel Television Sound or audio tracks.
- **Sleep Button:** Sets the TV's sleep timer.





This image displays the front of the remote control, highlighting the layout of all functional buttons, including power, input, number pad, navigation, volume, channel, and dedicated app buttons for Netflix and YouTube.

MAINTENANCE

Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components. Ensure no liquid enters the remote's openings.

Battery Replacement

Replace batteries when the remote's performance diminishes or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Common Issues and Solutions

- **Remote is not responding:**
 - Ensure fresh AAA batteries are correctly installed with the proper polarity (+/-).
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Verify that the TV is powered on.
 - Point the remote directly at the TV.
- **Specific buttons are not working:**
 - Clean the remote's surface, especially around the non-functional buttons, to remove any debris that might be preventing proper contact.
 - If only certain buttons fail, and batteries are new, the remote may be damaged and require

replacement.

- **TV is not responding to commands:**

- Confirm that the remote control is compatible with your specific Seiki Smart TV model (refer to the compatibility list in the introduction).
- If you have multiple Seiki TVs, ensure you are using the correct remote for the intended TV.

SPECIFICATIONS

Technical Details

Feature	Detail
Product Dimensions	6 x 2 x 0.5 inches
Item Weight	3 ounces
Connectivity Technology	Infrared
Compatible Devices	Television (Seiki Smart TV models listed)
Max Number of Supported Devices	1
Special Feature	Ergonomic design
Model Number	A6653 (Internal: 303948960796)

WARRANTY AND SUPPORT

Customer Support and Returns

For any questions or assistance regarding your USARMT A6653 remote control, customer support inquiries are typically responded to within one business day. The product is backed by a 30-day hassle-free return policy, allowing for returns or replacements if you encounter issues within this period. Please refer to your purchase documentation for specific contact information and return procedures.