

Timex TW2U39000VQ

Timex Men's Chicago Chronograph 45mm Watch Instruction Manual

Model: TW2U39000VQ

- Introduction
- Components
- Setup
- Chronograph
- Indiglo
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

This manual provides detailed instructions for the operation and care of your Timex Men's Chicago Chronograph 45mm Watch. The Timex Chicago Chronograph collection is designed with both strength and refinement, featuring intricate textures on the blue dial, gold-tone accents, applied indices, and a brown natural leather strap.

Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

2. WATCH COMPONENTS OVERVIEW

Familiarize yourself with the key components of your Timex Chicago Chronograph watch:

- **Main Dial:** Displays the primary time (hours, minutes).
- **Sub-dials:** Three smaller dials for chronograph functions and the running second hand for time of day.
- **Crown:** Located at the 3 o'clock position, used for setting time and date.
- **Pushers:** Two buttons located above and below the crown, used to operate the chronograph functions.
- **Date Window:** Displays the current date, located at the 4 o'clock position.



Figure 1: Front view of the Timex Chicago Chronograph watch, showcasing the blue dial, sub-dials, and brown leather strap.



Figure 2: Side view of the watch, highlighting the crown and the two pushers used for chronograph control.

3. SETTING TIME AND DATE

To ensure your watch displays the correct time and date, follow these steps:

1. Setting the Time:

- Pull the crown out two clicks to the second position.
- Turn the crown in either direction until the hour and minute hands display the current time.
- Push the crown back in to its original position to start the watch.

2. Setting the Date:

- Pull the crown out one click to the first position.
- Turn the crown to advance the hour hand. The date will change after the hour hand passes 12 o'clock twice (indicating a full 24-hour cycle).
- Continue turning until the correct date is displayed.
- Push the crown back in to its original position.

4. OPERATING THE CHRONOGRAPH

Your Timex Chicago Chronograph features a precise stopwatch function. The large second hand on the main

dial is dedicated to the chronograph, while the running second hand for the time of day is located on the sub-dial at 6 o'clock. The sub-dial at 10 o'clock measures elapsed minutes (up to 30 minutes), and the sub-dial at 2 o'clock measures elapsed 1/10th of a second.

Your browser does not support the video tag.

Video: This official Timex video demonstrates how to use the chronograph functions, including starting, stopping, taking split times, and resetting the chronograph hands.

4.1. Starting and Stopping the Chronograph

1. To **start** the chronograph, press the **top pusher**. The chronograph second hand will begin to move.
2. To **stop** the chronograph, press the **top pusher** again. The elapsed time will be displayed.
3. If the chronograph is left running, it will automatically stop after 4 hours to conserve battery life.

4.2. Taking Split Times

While the chronograph is running, you can record intermediate (split) times without stopping the main timing:

1. To take a split time, press the **bottom pusher** while the chronograph is running. The hands will pause, allowing you to read the elapsed time. The chronograph continues to measure time in the background.
2. To resume the chronograph and catch up to the ongoing time, press the **bottom pusher** again. The hands will quickly advance to the current elapsed time.

4.3. Resetting the Chronograph

After stopping the chronograph, you can reset it to zero:

1. Ensure the chronograph is stopped (press the top pusher if it's running).
2. Press the **bottom pusher**. All three chronograph hands will return to their starting (zero) positions.

5. INDIGLO BACKLIGHT FEATURE

Your Timex watch is equipped with the Indiglo backlight for illumination in low-light conditions.

5.1. Activating Indiglo

- To illuminate the dial, simply press in on the **crown**. The backlight will activate for a few seconds.

5.2. Night Mode

Night Mode keeps the Indiglo backlight active for several seconds whenever the crown or any pusher is pressed, for a duration of four hours.

- To **activate Night Mode**, press and hold the **crown** for approximately 4 seconds. The dial will flash to indicate Night Mode is active.
- To **deactivate Night Mode**, press and hold the **crown** again for approximately 4 seconds.

6. CARE AND MAINTENANCE

Proper care will help maintain the appearance and functionality of your Timex watch.

- **Cleaning:** Wipe the watch case and crystal with a soft, damp cloth. For the leather strap, avoid excessive moisture and harsh chemicals.
- **Water Resistance:** This watch is water resistant to 50 meters (165 feet). It is suitable for short periods of recreational swimming but is **not recommended for diving or snorkeling**. Do not press any buttons

underwater unless your watch is rated for 200 meters water resistance.

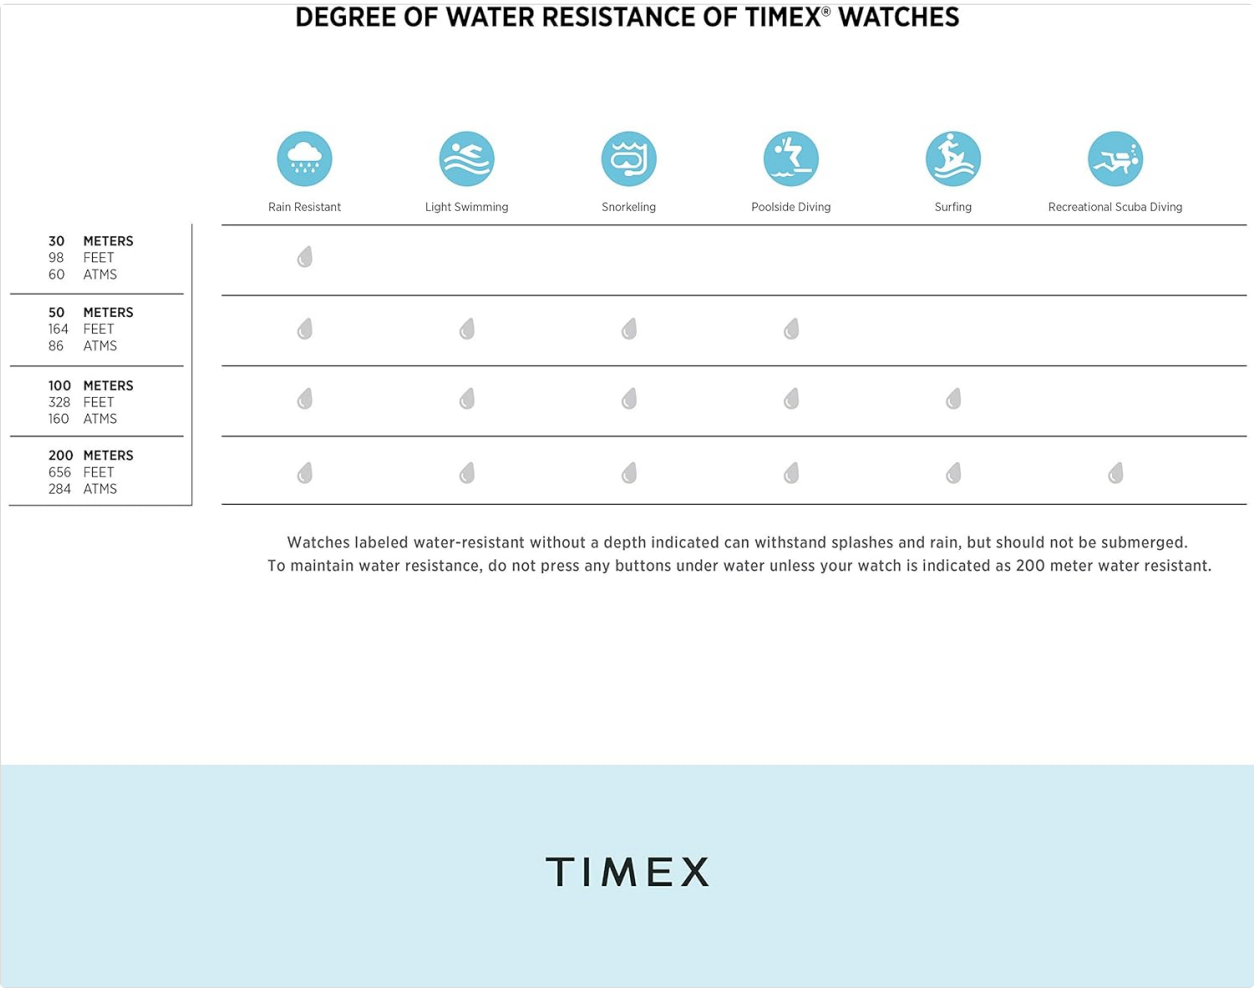


Figure 3: Water resistance guidelines for Timex watches. This model is suitable for light swimming but not diving.

- **Battery:** The watch uses 1 Lithium Metal battery (included). Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained.
- **Temperature Extremes:** Avoid exposing your watch to extreme temperatures, as this can affect battery life and movement accuracy.

7. TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common solutions:

7.1. Chronograph Hands Not Aligning to Zero

If, after resetting, the chronograph hands (main second hand, minute sub-dial at 10 o'clock, or 1/10th second sub-dial at 2 o'clock) do not return precisely to the 12 o'clock (zero) position, they may need recalibration:

1. **Calibrating the Chronograph Minute Hand (10 o'clock sub-dial):**
 - Pull the crown out one click to the first position.
 - Press and hold the **bottom pusher** to quickly advance the minute hand. Tap the bottom pusher for incremental adjustments.
 - Align the minute hand to the 12 o'clock (zero) position.
2. **Calibrating the Chronograph Second Hand (main dial) and 1/10th Second Hand (2 o'clock sub-dial):**

- Pull the crown out two clicks to the second position.
- Press and hold the **top pusher** to quickly advance the second hand and 1/10th second hand. Tap the top pusher for incremental adjustments.
- Align both hands to the 12 o'clock (zero) position.

3. Once all chronograph hands are aligned, push the crown back to its original position.

7.2. Watch Not Running or Losing Time

- Check if the crown is fully pushed in. If it is pulled out, the watch will not run.
- The battery may need replacement. Consult a professional watch repair service.

8. SPECIFICATIONS


- **Model Number:** TW2U39000VQ
- **Case Diameter:** 45mm
- **Case Material:** Two-tone brass
- **Dial Color:** Blue
- **Strap Material:** Genuine leather (brown)
- **Strap Width:** 20mm
- **Crystal Material:** Mineral glass
- **Water Resistance:** 50 meters (165 feet)
- **Movement:** Quartz Chronograph
- **Battery Type:** 1 Lithium Metal battery (included)
- **Features:** Chronograph (30-minute, 1/20th second), Date window, Indiglo backlight
- **Package Dimensions:** 4.09 x 4.06 x 3.11 inches
- **Item Weight:** 2.4 ounces






9. WARRANTY AND SUPPORT

Timex watches are manufactured to high standards and come with a limited warranty. For specific warranty details, registration, and customer support, please refer to the official Timex website or contact their customer service directly.

Keep your proof of purchase for warranty claims.

Related Documents - TW2U39000VQ

	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
---	--

	<p>Timex T100 User Guide: Operation, Features, and Maintenance</p> <p>Official user guide for the Timex T100 watch, detailing how to set time, date, use the chronograph, timer, alarms, Indiglo night-light, and information on water resistance and warranty.</p>
	<p>Timex W-191-AS Watch User Manual and Instructions</p> <p>Detailed instructions and user guide for the Timex W-191-AS digital watch, covering all features including time/date setting, chronograph, timer, interval timer, alarms, and INDIGLO night-light functionality. Includes warranty information.</p>
	<p>Timex Watch User Manual: Features, Operation, and Care</p> <p>Comprehensive user manual for Timex watches, detailing features like chronograph, alarm, timer, time zones, INDIGLO night-light, and water resistance. Includes setup instructions and safety information.</p>
	<p>Timex W-209 Watch User Manual: Features, Operation, and Warranty</p> <p>Comprehensive guide to operating your Timex W-209 watch, covering time setting, chronograph, timer, alarms, occasions, INDIGLO night-light, water resistance, battery, and international warranty information.</p>
	<p>Timex Kids Digital Watch User Guide</p> <p>Comprehensive user guide for the Timex Kids Digital Watch (W33 791095007), covering operations, features, water resistance, and maintenance in multiple languages.</p>