

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [CUCKOO](#) /

> [CUCKOO CRP-G1018M Electric Pressure Rice Cooker User Manual](#)

CUCKOO CRP-G1018M

CUCKOO CRP-G1018M Electric Pressure Rice Cooker User Manual

Model: CRP-G1018M

[Overview](#)

[Safety](#)

[Components](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. PRODUCT OVERVIEW

The CUCKOO CRP-G1018M is a 3.5 Litres Electric Pressure Rice Cooker designed for efficient and versatile cooking. This multi-cooker features 13 menu presets and operates at 1180 Watts, providing a range of cooking options for various meals.



Image: Front view of the CUCKOO CRP-G1018M Electric Pressure Rice Cooker.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Always ensure the lid is properly closed and locked before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main body in water or other liquid.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance has 12 safety features designed for safe operation.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your CUCKOO Electric Pressure Rice Cooker.

- **Main Body:** Houses the heating element and control panel.
- **Inner Pot:** Thick and non-stick, where food is cooked.
- **Lid:** Features a pressure valve and sealing gasket.
- **Control Panel:** Buttons and display for selecting functions and monitoring cooking.
- **Measuring Cup:** For accurate ingredient measurement.
- **Rice Spatula:** For serving cooked rice.
- **Power Cord:** Detachable cord for power supply.



Image: Interior view of the rice cooker, showing the inner pot and lid components.

4. INITIAL SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box.
2. **Cleaning:** Before first use, wash the inner pot, lid gasket, and any accessories (measuring cup, spatula) with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main body with a damp cloth. Do not immerse the main body in water.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Connect the power cord to the rice cooker and then plug it into a grounded 220V AC electrical outlet.

5. OPERATING INSTRUCTIONS

The CUCKOO CRP-G1018M offers a variety of cooking functions. Follow these general steps for operation.

5.1 General Cooking Steps

1. **Prepare Ingredients:** Measure your ingredients (e.g., rice and water) using the provided measuring cup. Refer to specific recipe guidelines for ratios.
2. **Add to Inner Pot:** Place the prepared ingredients into the non-stick inner pot.
3. **Insert Inner Pot:** Carefully place the inner pot into the main body of the rice cooker. Ensure it is seated

correctly.

4. **Close Lid:** Close the lid securely until it locks into place. Ensure the pressure release valve is in the sealed position (if applicable).
5. **Select Menu:** Use the control panel to select your desired cooking function (e.g., White Rice, Brown Rice, GABA, Mixed Rice, Stew). The cooker features 13 menu presets.
6. **Start Cooking:** Press the "Start" button to begin the cooking cycle. The cooker will automatically adjust pressure and temperature.
7. **Pressure Release (if needed):** Once cooking is complete, the cooker will typically release pressure automatically or switch to a "Keep Warm" mode. Follow specific recipe instructions for manual pressure release if required.
8. **Serve:** Open the lid carefully, away from your face, to avoid steam. Serve the cooked food using the rice spatula.



Image: A hand interacting with the control panel of the rice cooker.

5.2 Versatile Menu Options

This multi-cooker offers a wide range of functions beyond basic rice cooking, including:

- **Rice:** GABA/Brown Rice, Glutinous/White Rice, Mixed Rice, Dried Rice.
- **Specialty Dishes:** Nu Rung Ji (scorched rice), Kheer, Steamed Veggies, Stew, Chicken, Sambar, Mix Veg.
- **Reheat Function:** Optimal for warming leftovers.

VERSATILE MENU OPTIONS

All-in-one functionality to make a variety of different dishes and meals



WHITE RICE



BROWN RICE



OATMEAL



KHEER



STEAMED VEGGIES



STEW



CHICKEN



SAMBHAR



MIX VEG



Image: Visual representation of the versatile menu options available on the CUCKOO rice cooker.

5.3 Smart 3D Heating Technology

The CRP-G1018M utilizes Smart 3D Heating to ensure even cooking and the right texture for your food. This technology distributes heat uniformly throughout the inner pot.

SMART 3D HEATING

Cook Evenly For The Right Texture



Image: Illustration of the Smart 3D Heating system for even cooking.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your rice cooker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot should be hand washed with warm, soapy water and a soft sponge. Avoid abrasive cleaners or metal scrubbers that can damage the non-stick coating. Rinse thoroughly and dry.
3. **Lid and Gasket:** Remove the inner lid and gasket. Wash them with warm, soapy water. Ensure the gasket is clean and free of food debris to maintain a proper seal. Reinstall correctly after drying.
4. **Exterior:** Wipe the exterior of the main body with a damp cloth. Do not immerse the main body in water.
5. **Steam Vent:** Periodically check and clean the steam vent to ensure it is not blocked.

Product Care Instructions: Hand Wash for removable parts.

7. TROUBLESHOOTING GUIDE

If you encounter issues with your rice cooker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker.
Rice is undercooked or too hard.	Insufficient water; lid not properly sealed; incorrect cooking mode.	Add correct amount of water. Ensure lid is locked and pressure valve is sealed. Select appropriate cooking mode.
Rice is overcooked or mushy.	Too much water; incorrect cooking mode.	Reduce water amount for next use. Select appropriate cooking mode.
Steam leaks from lid.	Lid not closed properly; gasket dirty or damaged.	Ensure lid is securely locked. Clean or replace the lid gasket if necessary.
Error code displayed.	Internal malfunction.	Unplug the cooker, wait a few minutes, then plug it back in. If the error persists, contact customer support.

For issues not listed here, please contact CUCKOO customer support.

8. PRODUCT SPECIFICATIONS

Brand	CUCKOO
Model Number	CRP-G1018M
Capacity	3.5 Litres
Wattage	1180 Watts
Voltage	220 Volts (AC)
Product Dimensions (DxWxH)	33D x 21W x 34H Centimeters
Item Weight	3 Kilograms
Colour	White & Pink
Material	Plastic (Exterior), Stainless Steel (Lid)
Special Feature	Airtight, 13 Menu Presets, 3D Heating, Fuzzy Logic Technology
Care Instructions	Hand Wash (removable parts)

CUCKOO
KOREA

THE KOREA'S FAVOURITE

Enjoy your meal with Cuckoo Pressure Cooker



Image: Dimensions of the CUCKOO CRP-G1018M rice cooker.

9. WARRANTY AND CUSTOMER SUPPORT

Your CUCKOO CRP-G1018M Electric Pressure Rice Cooker comes with a **1 Year Warranty** from the date of purchase.

For service, assistance, or guidance from an expert technician, please contact CUCKOO customer support:

Toll Free: [1800 212 1978](tel:18002121978)

Email: support@cuckooindia.in

Get Service and Assistance Guidance from our Expert Technician Nationwide

Our Toll Free: **1800 212 1978**

Email: **support@cuckooindia.in**



Image: CUCKOO customer service contact information.