

[manuals.plus](#) /› [Hisense](#) /› [Hisense WF1G6021BW Front Load Washing Machine User Manual](#)

Hisense WF1G6021BW

Hisense WF1G6021BW Front Load Washing Machine User Manual

Model: WF1G6021BW

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your new Hisense WF1G6021BW front load washing machine. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper installation, usage, and maintenance will ensure optimal performance and extend the lifespan of your washing machine.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play with or operate the washing machine.
- Do not touch the appliance with wet hands.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Keep the area around the washing machine clear of flammable materials.

3. PRODUCT OVERVIEW

The Hisense WF1G6021BW is a slim, front-loading washing machine designed for efficient and gentle laundry care. It features a 6 kg capacity, 1200 rpm spin speed, and a user-friendly LED display.

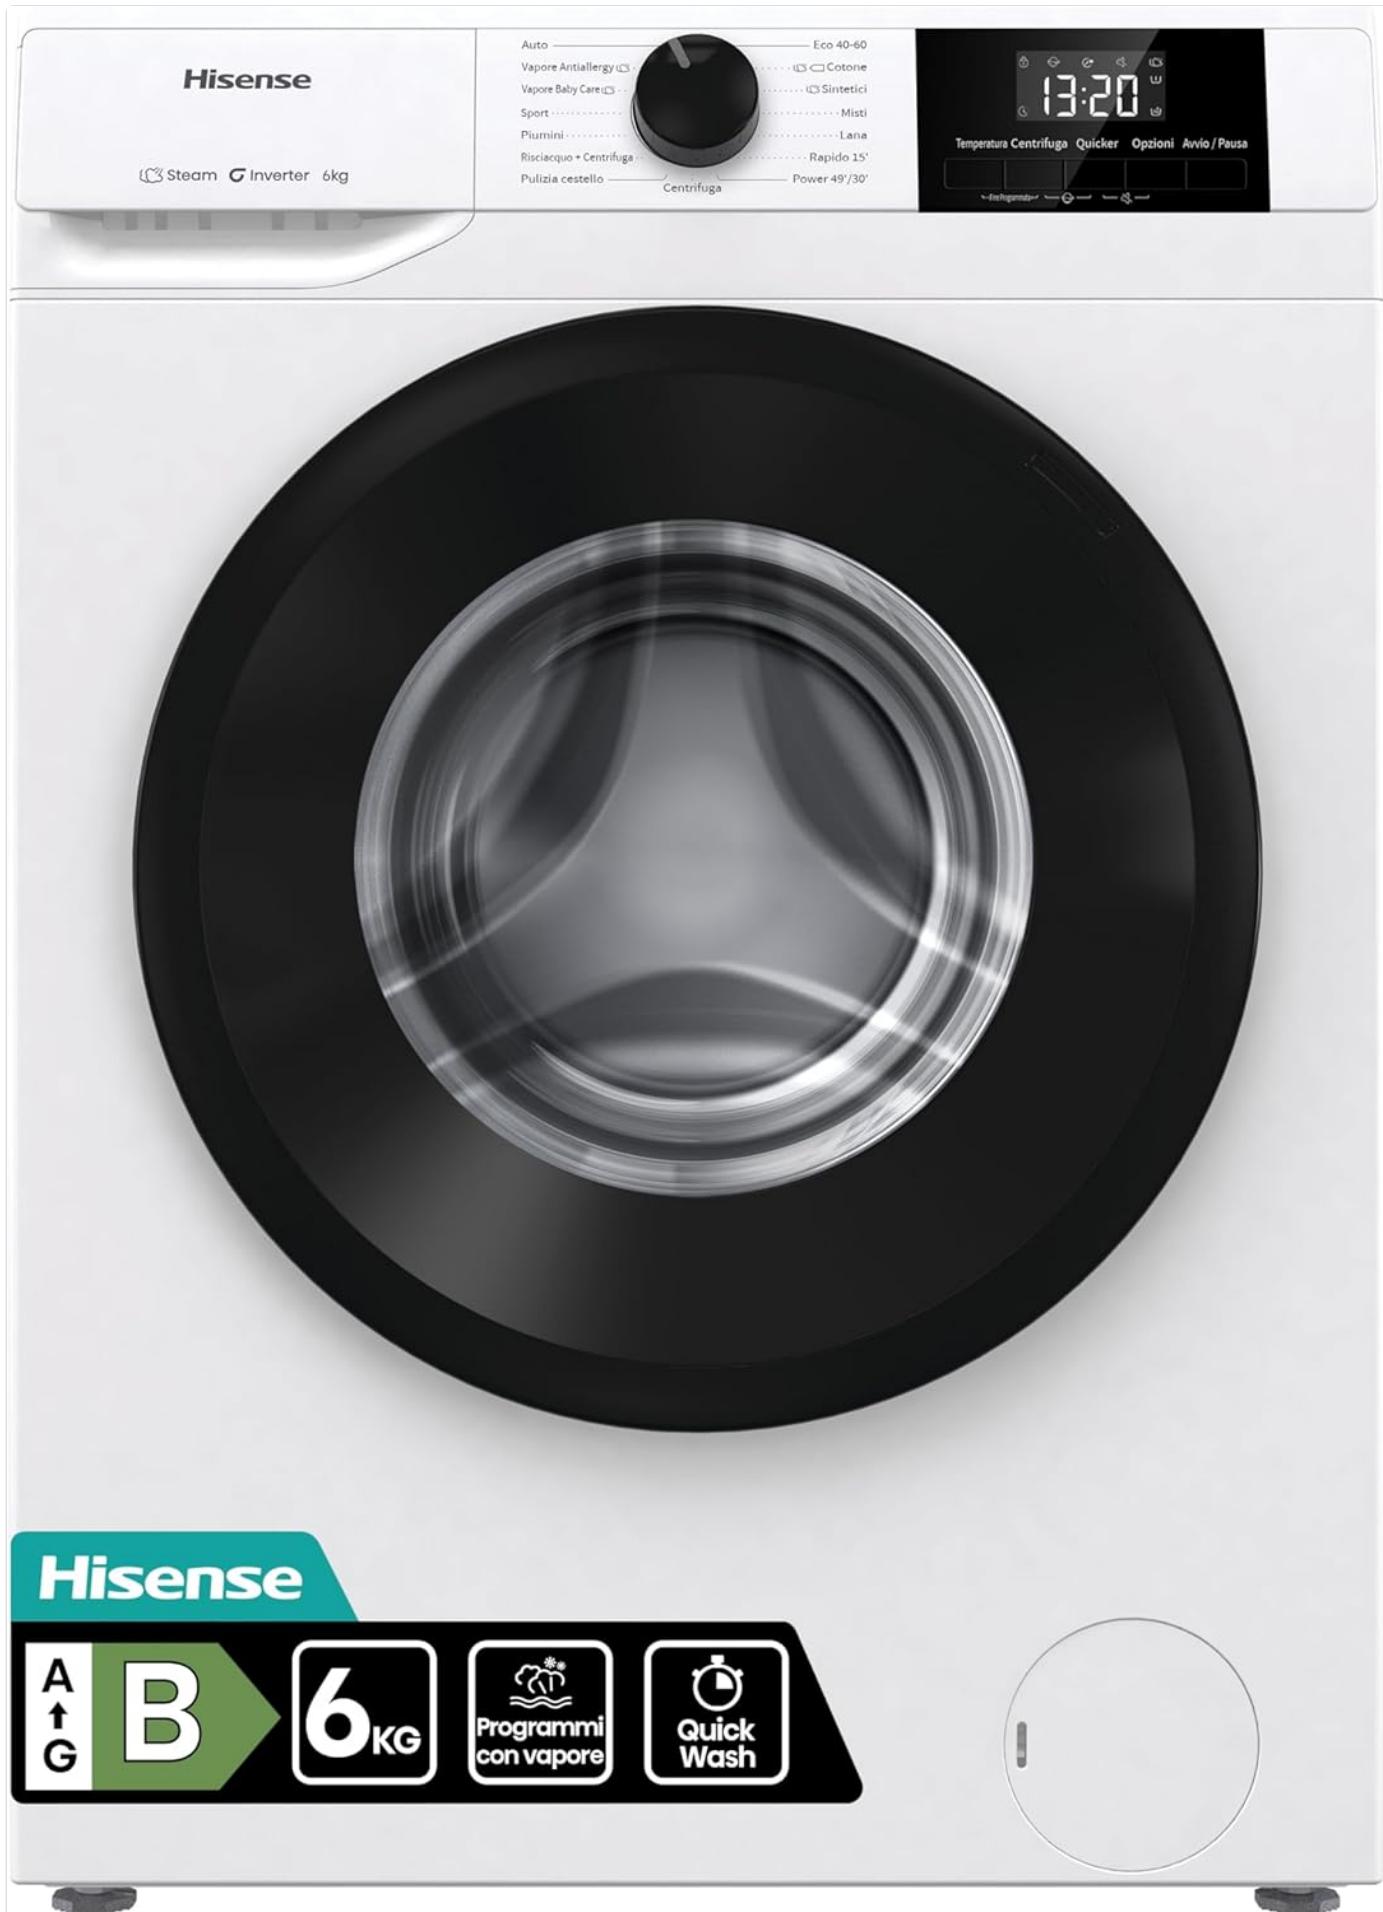


Figure 3.1: Front view of the Hisense WF1G6021BW washing machine. This image shows the main body, the control panel at the top, the detergent dispenser on the left, and the large circular door for loading laundry.

Key Features:

- **6 kg Capacity:** Ideal for small to medium households.
- **1200 rpm Spin Speed:** High spin speed helps reduce drying time.
- **15 Automatic Programs:** A variety of programs for different fabric types and soil levels.
- **LED Display:** Provides clear information on program status, time remaining, and selected options.
- **Quick Wash Program:** Cleans clothes in as little as 15 minutes.
- **Delayed Start Function:** Allows you to set the wash cycle to start at a later time.
- **Snowflake Drum Design:** Hisense's unique drum design for gentle washing and protection of delicate fabrics.
- **Steam Programs:** Includes Anti-Allergy and Baby Care steam options for enhanced hygiene.



Figure 3.2: Visual representation of key features including 6kg capacity, Energy Class B, Steam Programs, Quick Wash, Allergy Care Program, and 15 automatic wash programs.

Control Panel:

The control panel consists of a program selector knob, an LED display, and touch buttons for various functions.

15 programmi di lavaggio automatici

15 programmi: Il tuo bucato, a modo tuo



Figure 3.3: Close-up of the control panel, showing the program selector dial, LED display, and touch controls for temperature, spin speed, quick wash, and start/pause functions.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your washing machine. It is recommended to have the appliance installed by a qualified technician.

4.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transport bolts located at the rear of the machine. Keep these bolts for future transport.

4.2 Location Requirements

- Place the washing machine on a firm, level floor.
- Ensure there is adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or extreme temperatures.

Hisense | WF1G6021BW



Figure 4.1: Diagram showing the dimensions of the Hisense WF1G6021BW washing machine: 85cm height, 60cm width, and 47cm depth.

4.3 Water Connection

- Connect the inlet hose to a cold water tap with a 3/4-inch thread.
- Ensure all connections are tight to prevent leaks.

4.4 Drainage Connection

- The drain hose can be placed into a standpipe or hooked over the edge of a sink.
- Ensure the drain hose is securely fastened to prevent it from dislodging during operation.

4.5 Leveling

- Adjust the adjustable feet at the bottom of the machine until it is perfectly level.
- A level machine reduces vibration and noise during operation.

4.6 Power Connection

- Plug the power cord into a grounded electrical outlet.
- Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Before First Use

- Run a short cycle without laundry and detergent to clean the drum.

5.2 Loading Laundry

- Open the door and load laundry loosely into the drum. Do not overload.
- Close the door firmly.



Figure 5.1: The washing machine with its door open, ready for loading laundry. The drum is visible inside.

5.3 Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add detergent to the main wash compartment and fabric softener to its designated compartment.
- Close the dispenser drawer gently.

5.4 Selecting a Program

- Turn the program selector knob to choose one of the 15 available wash programs.
- Available programs include: Auto, Anti-Allergy Steam, Baby Care Steam, Sport, Duvets, Rinse + Spin, Drum Clean, Eco 40-60, Cotton, Synthetics, Mixed, Wool, Rapid 15', Power 30'/49', Spin.

5.5 Adjusting Settings

- Use the touch buttons on the control panel to adjust temperature, spin speed, or activate functions like Quick Wash or Delayed Start.
- The LED display will show the selected settings and remaining time.



Figure 5.2: Illustration of the "Power 30'/49" quick wash program, highlighting its ability to wash clothes rapidly.

5.6 Starting and Ending a Cycle

- Press the Start/Pause button to begin the wash cycle.
- The machine will automatically stop when the cycle is complete. An audible signal may sound.
- Open the door and remove your laundry.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Detergent Dispenser

- Remove the dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser with a brush.

6.2 Cleaning the Drum

- Use the "Drum Clean" program periodically to prevent odors and maintain hygiene.

6.3 Cleaning the Door Seal

- Wipe the rubber door seal after each wash to remove lint and moisture, preventing mold and odors.

6.4 Cleaning the Drain Pump Filter

- Locate the drain pump filter at the bottom front of the machine.
- Open the cover, drain any residual water, and unscrew the filter.
- Clean the filter of any lint or foreign objects and reassemble.

7. TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, program not selected, Start/Pause not pressed.	Check power, ensure door is closed, select program, press Start/Pause.
No water intake	Water tap closed, inlet hose kinked, water supply cut off.	Open water tap, straighten hose, check water supply.
Water not draining	Drain hose kinked, drain pump filter blocked.	Straighten drain hose, clean drain pump filter.
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust feet to level, remove transport bolts, redistribute laundry.

8. SPECIFICATIONS

Parameter	Value
Model Name	WF1G6021BW
Brand	Hisense
Capacity	6 kg
Maximum Spin Speed	1200 rpm
Energy Efficiency Class	B
Product Dimensions (D x W x H)	47 cm x 60 cm x 85 cm
Access Position	Front Load

Parameter	Value
Color	White
Control Type	Touch
Operating Mode	Automatic



HISENSE

WF1G6021BW



0 kWh / 100



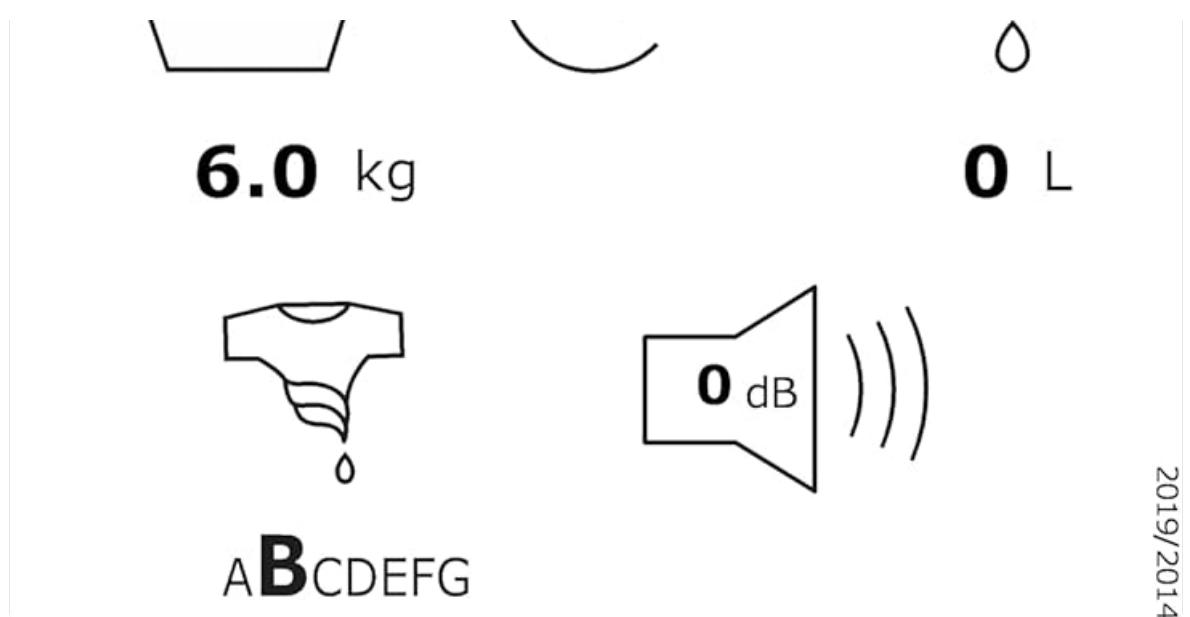


Figure 8.1: The EU Energy Label for the Hisense WF1G6021BW, indicating its energy efficiency class B, 6.0 kg capacity, and other energy consumption details. For more details, refer to the official EPREL database via the QR code or link.

Official EPREL Product Information: <https://eprel.ec.europa.eu/qr/0>

Scheda informativa del prodotto						
REGOLAMENTO DELEGATO (UE) 2019/2014						
Marchio o nome del fornitore: HISENSE						
Indirizzo del fornitore Partizanska 12, 3320 Velenje, SI						
Identificativo del modello: WF1G6021BW						
Parametri di prodotto generali:						
Parametro	Valore	Parametro	Valore			
Capacità nominale (kg)	6,0	Dimensioni in cm	Altezza	85		
			Larghezza	60		
			Profondità	47		
Indice di efficienza energetica w	0,0	Classe di efficienza energetica	B			
Indice di efficienza di lavaggio	0,000	Efficacia di risciacquo (g/kg)	0,00			
Consumo di energia in kWh per ciclo, basato sul programma eco 40-60. Il consumo effettivo di energia dipende dalle modalità d'uso dell'apparecchiatura,	0,000	Consumo di acqua in litri per ciclo, basato sul programma eco 40-60. Il consumo effettivo di acqua dipende dalle modalità d'uso dell'apparecchiatura e della durezza dell'acqua.	0			
Temperatura massima all'interno dei tessuti trattati (°C)	Capacità nominale Metà Un quarto	0 0 0	Umidità residua ponderata (%)	0,0		
Velocità della centrifuga (h:min)	Capacità nominale Metà Un quarto	1200 1200 1200	Classe di efficienza della centrifuga-asciugatura	B		
Durata del programma (h:min)	Capacità nominale Metà Un quarto		Tipo di apparecchiatura	A libera installazione		
Emissioni di rumore aereo durante la fase di centrifuga (dB (A) re 1 pW)	0	Classe di emissioni di rumore aereo nella fase di centrifuga				
Modalità stand-by (W)	-	Modalità stand-by (W)	-			
Avvio ritardato (W)	-	Modalità stand-by in rete (W)	-			
Durata minima della garanzia offerta dal fornitore: 24 mesi						
Questo prodotto è stato progettato per liberare ioni d'argento durante il ciclo di lavaggio		No				
Informazioni aggiuntive:						
http://global.hisense.com/						

Figure 8.2: Detailed product data sheet for the Hisense WF1G6021BW, providing comprehensive technical specifications and compliance information.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Hisense WF1G6021BW washing machine comes with a minimum manufacturer's warranty of **24 months** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

9.2 Customer Support

For technical assistance, spare parts, or warranty service, please contact Hisense customer support. You can find more information and contact details on the official Hisense global website:

<http://global.hisense.com/>

© 2023 Hisense. All rights reserved.

Related Documents - WF1G6021BW

	<p><u>Hisense WF1Q8041BW Washing Machine - Specifications and Features</u></p> <p>Comprehensive technical specifications and features for the Hisense WF1Q8041BW washing machine, including energy efficiency, capacity, programs, dimensions, and safety features.</p>
	<p><u>Hisense WDQA1014EVJM Washing-Drying Machine Specifications</u></p> <p>Detailed technical specifications, features, and general information for the Hisense WDQA1014EVJM washing-drying machine, including energy efficiency, capacity, programs, and dimensions.</p>
	<p><u>Hisense WD3S1043BW3 Washing-Drying Machine: Features, Specifications, and Overview</u></p> <p>Comprehensive overview of the Hisense WD3S1043BW3 washing-drying machine, detailing its key features like Auto Wash, Steam Wash, Hygiene Guard, energy efficiency ratings, control options, and full technical specifications.</p>
	<p><u>Hisense WF5S2845BW User Operation Manual</u></p> <p>Official user operation manual for the Hisense WF5S2845BW front load washing machine, providing comprehensive guidance on installation, operation, maintenance, and troubleshooting.</p>

	<p><u>Hisense WD3S1043BW3 Washing-Drying Machine: Technical Specifications and Features</u></p> <p>Detailed specifications, features, programs, and technical data for the Hisense WD3S1043BW3 washing-drying machine, including capacity, energy efficiency, and operational functions.</p>
	<p><u>Hisense WF5S1245BB 12kg Washing Machine - Features & Specifications</u></p> <p>Detailed specifications and features of the Hisense WF5S1245BB washing machine, including energy efficiency, wash programs, ConnectLife features, and technical data. Learn about its 12kg capacity, 1400 rpm spin speed, and auto dosing capabilities.</p>