



Manuals.plus /

› Hisense /

› Hisense WF3S8043BW3 Washing Machine User Manual

Hisense WF3S8043BW3

Hisense WF3S8043BW3 Washing Machine User Manual

Model: WF3S8043BW3 | Brand: Hisense

1. INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Hisense WF3S8043BW3 Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

The Hisense WF3S8043BW3 is an 8 kg capacity washing machine with a 1400 rpm spin speed, featuring steam function, WiFi connectivity via ConnectLife, Power JetWash, Anti-Allergy program, Aqua Stop, Auto Wash, and Quick Wash functions. It is designed to provide excellent washing performance while being energy efficient.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety precautions to prevent electric shock, fire, explosion, injury, or damage to the appliance.

- Ensure the appliance is properly grounded.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that have been contaminated with flammable substances.
- Always unplug the machine before cleaning or performing maintenance.
- Do not open the detergent dispenser or door during a wash cycle, especially when hot water or steam is present.
- Refer to the Troubleshooting section for minor issues before contacting service.

3. INSTALLATION AND SETUP

3.1 Unpacking

Carefully remove all packaging materials and transport bolts from the rear of the machine. Keep packaging materials out of reach of children.

3.2 Positioning

Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and maintenance. Adjust the leveling feet to ensure stability and prevent vibration during operation.

3.3 Water Connection

Connect the water inlet hose to a cold water tap. Ensure all connections are tight to prevent leaks. The machine includes a fill hose and a drain hose.

3.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the appliance (230 Volts).



Figure 1: Front view of the Hisense WF3S8043BW3 washing machine, showing the main control panel and drum.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a program selector dial, a digital display, and various function buttons. Refer to the image below for a detailed view.



Figure 2: Close-up of the Hisense WF3S8043BW3 washing machine's control panel, showing the program dial and digital display.

4.2 Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; the maximum capacity is 8 kg. Close the door firmly.



Figure 3: The Hisense WF3S8043BW3 washing machine with its front-loading door open, revealing the stainless steel drum.

4.3 Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent, fabric softener, and other additives to their respective compartments. Refer to the detergent packaging for dosage recommendations.



Figure 4: The detergent dispenser drawer of the Hisense WF3S8043BW3 washing machine, showing compartments for detergent and additives.

4.4 Program Selection

Turn the program selector dial to choose the desired wash program. Available programs include:

- **Auto Wash:** Automatically detects laundry and adjusts cycles for customized washing, ideal for small mixed loads.
- **Power JetWash:** Utilizes a powerful water jet for deep cleaning and stubborn dirt removal.
- **Quick Wash:** Several quick wash programs to save time.
- **Anti-Allergy Program:** Designed for thorough cleaning and allergen removal.
- **Steam Function:** For enhanced cleaning and wrinkle reduction.
- **Wool:** Specific cycle for woolens.
- Other standard programs (e.g., Cotton, Synthetics, Delicates).

4.5 Starting a Wash Cycle

Press the Start/Pause button to begin the selected wash cycle. The display will show the remaining time.

4.6 ConnectLife (WiFi Connectivity)

Your Hisense WF3S8043BW3 washing machine supports WiFi connectivity via the ConnectLife app. Download the app and follow the in-app instructions to connect your appliance for remote control and monitoring.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent residue buildup.

5.2 Cleaning the Drum and Door Seal

The Hygiene Guard feature, with its antibacterial rubber seal and Pure Jet function, helps keep the door and seal clean. Wipe the drum and door seal after each wash to remove any moisture or lint.

5.3 Cleaning the Filter

Locate and clean the drain pump filter regularly to prevent blockages. Refer to the diagram in your full manual for exact location and procedure.

5.4 Descaling

Depending on water hardness, descaling may be necessary. Use a suitable descaling agent designed for washing machines and follow the product instructions.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure door is latched; select a program; press Start/Pause.
No water intake	Water tap closed; water inlet hose kinked; water supply cut off.	Open water tap; straighten hose; check water supply.
Water not draining	Drain hose kinked or blocked; drain pump filter clogged.	Straighten or clear drain hose; clean drain pump filter.
Excessive vibration/noise	Transport bolts not removed; machine not level; laundry unevenly distributed.	Remove transport bolts; adjust leveling feet; redistribute laundry.

7. SPECIFICATIONS

Key technical specifications for the Hisense WF3S8043BW3 Washing Machine:

Feature	Value
Brand	Hisense
Model Number	WF3S8043BW3
Capacity	8 Kilograms
Spin Speed	1400 rpm
Noise Level	72 dB
Installation Type	Freestanding
Special Features	Smart Connectivity, Reload Function, High Efficiency, Child Safety, Hygienic Steam
Color	White / Black door
Loading Type	Front Load
Voltage	230 Volts
Material	Metal
Included Components	Power cable, Fill hose, Drain hose
Product Dimensions (L x W x H)	51 x 59.5 x 84.5 cm
Item Weight	58 Kilograms
Energy Efficiency Class	A-30%

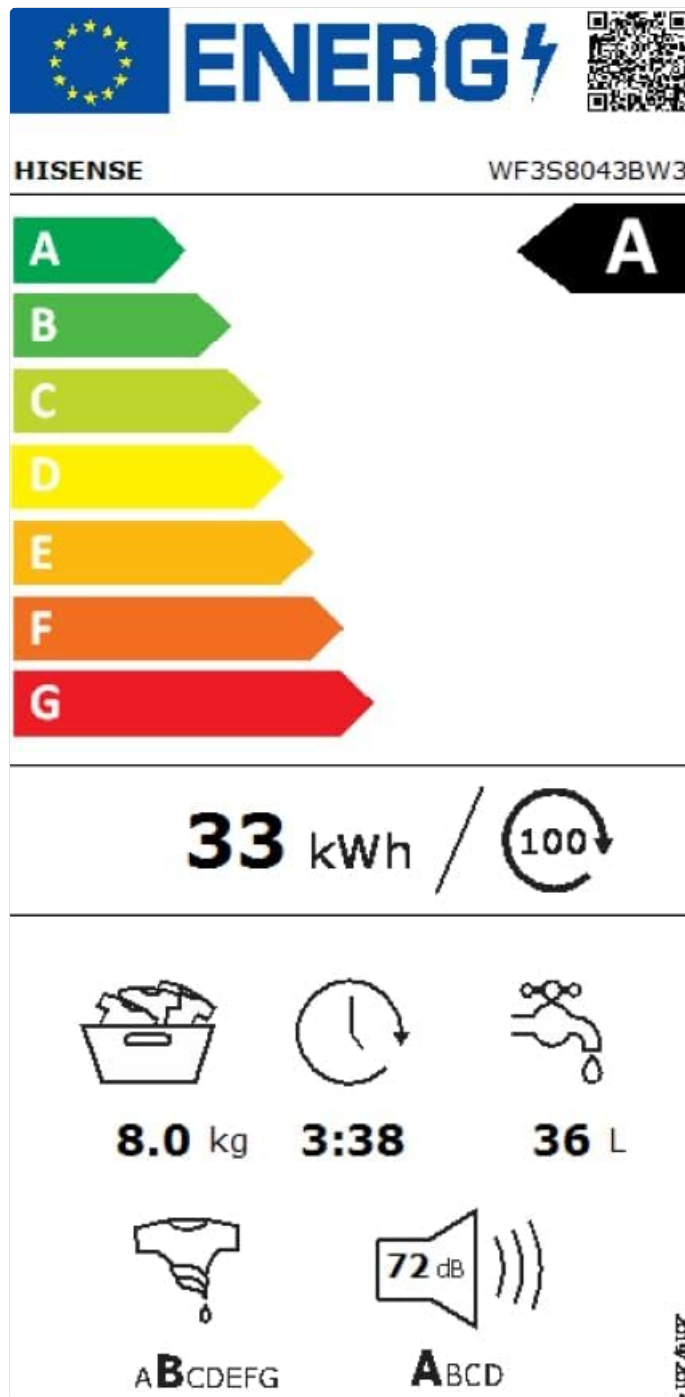


Figure 5: Energy label for the Hisense WF3S8043BW3, indicating its A-30% energy efficiency rating.

8. WARRANTY AND SUPPORT

The manufacturer provides a warranty for this product. Please refer to your purchase documentation or the official Hisense website for detailed warranty terms and conditions.

For technical support, spare parts, or service inquiries, please contact Hisense customer service. You can find contact information on the official Hisense website or through your retailer.

Manufacturer: HISENSE

Warranty Period: 24 Months (as per provided data)

For more information, visit the official Hisense global website: global.hisense.com

