

[Manuals.plus](#) /

> [SEIKI](#) /

> SEIKI Smart TV Remote Control User Manual for Models SC-32HK700N, SC-40FK700N, SC-49UK700N, SC-55UK700N, SC-65UK700N

## SEIKI SC-32HK700N, SC-40FK700N, SC-49UK700N, SC-55UK700N, SC-65UK700N

# SEIKI Smart TV Remote Control User Manual

Compatible with SEIKI Smart TV Models: SC-32HK700N, SC-40FK700N, SC-49UK700N, SC-55UK700N, SC-65UK700N

## INTRODUCTION

---

This manual provides instructions for the setup, operation, and maintenance of your SEIKI Smart TV Remote Control. This remote is designed for seamless compatibility with various SEIKI Smart TV models, offering dedicated access to popular streaming services.

## PRODUCT OVERVIEW AND FEATURES

---

The SEIKI Smart TV Remote Control is an infrared (IR) remote designed for ease of use with your compatible SEIKI Smart TV. It features dedicated buttons for quick access to popular applications.

- **Compatibility:** Works with most SEIKI Smart TV models, including SC-32HK700N, SC-40FK700N, SC-49UK700N, SC-55UK700N, SC-65UK700N.
- **Preprogrammed:** No setup or programming required. Ready to use after battery installation.
- **Dedicated Keys:** Includes direct access buttons for Netflix, YouTube, and Home functions.
- **Ergonomic Design:** Features an ergonomic design for comfortable handling.





*Figure 1: Back view of the SEIKI Smart TV Remote Control. This image shows the textured black surface and the battery compartment cover located towards the bottom.*

### Battery Installation

The remote control requires batteries for operation. Batteries are not included with the remote control and must be purchased separately. Ensure correct polarity when inserting batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two (2) AAA batteries (not included), matching the (+) and (-) terminals as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



*Figure 2: Close-up of the battery compartment on the back of the remote control. The image shows the cover with a small tab for opening.*

### Initial Use

Once batteries are installed, the remote control is preprogrammed and ready for immediate use with compatible SEIKI Smart TVs. No additional setup or pairing is required.

Point the remote control directly at the infrared receiver on your SEIKI Smart TV. Ensure there are no obstructions between the remote and the TV.

## Key Functions

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** For direct channel input.
- **Volume Up/Down:** Adjusts the TV's volume level.
- **Channel Up/Down:** Changes TV channels sequentially.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Pad (Up/Down/Left/Right/OK):** Used to navigate menus and select options.
- **Back/Return Button:** Returns to the previous menu or screen.
- **Home Button:** Accesses the Smart TV's main home screen.
- **Netflix Button:** Launches the Netflix application directly.
- **YouTube Button:** Launches the YouTube application directly.
- **Menu Button:** Opens the TV's main settings menu.
- **Exit Button:** Closes current menus or applications.

## MAINTENANCE

---

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

### Battery Replacement

Replace batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Remote not responding.	<ul style="list-style-type: none"><li>◦ Dead or incorrectly inserted batteries.</li><li>◦ Obstruction between remote and TV.</li><li>◦ Remote is out of range.</li><li>◦ TV's IR receiver is blocked or faulty.</li></ul>	<ul style="list-style-type: none"><li>◦ Replace batteries with new ones, ensuring correct polarity.</li><li>◦ Remove any objects blocking the line of sight to the TV.</li><li>◦ Move closer to the TV.</li><li>◦ Check TV manual for IR receiver location and ensure it's clear.</li></ul>

Problem	Possible Cause	Solution
Specific buttons not working.	<ul style="list-style-type: none"><li>◦ Button stuck or damaged.</li><li>◦ Software glitch on TV.</li></ul>	<ul style="list-style-type: none"><li>◦ Gently press the button multiple times.</li><li>◦ Remove and reinsert batteries from the remote.</li><li>◦ Restart the TV by unplugging it from the power outlet for 30 seconds, then plugging it back in.</li></ul>
Remote works intermittently.	<ul style="list-style-type: none"><li>◦ Low battery power.</li><li>◦ Interference from other electronic devices.</li></ul>	<ul style="list-style-type: none"><li>◦ Replace batteries.</li><li>◦ Ensure no other devices are causing IR interference.</li></ul>

## SPECIFICATIONS

---

- **Brand:** SEIKI
- **Compatible Devices:** Television (SEIKI Smart TVs)
- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Max Number of Supported Devices:** 1
- **Special Feature:** Ergonomic design
- **Item Weight:** Approximately 3 Ounces
- **UPC:** 303948960826
- **ASIN:** B08DN57LL8

## WARRANTY AND SUPPORT

---

This product is typically covered by a 30-Day Hassle-Free Return Policy. For specific warranty details, please refer to your purchase documentation or contact the seller directly.

For customer questions or support, responses are generally provided within 1 business day. Please refer to your purchase platform or seller contact information for assistance.