

Netatmo NOC Parent

Netatmo Smart Outdoor Camera with Siren

User Manual

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Netatmo Smart Outdoor Camera with Siren. Please read this manual carefully before using the product to ensure proper functionality and safety.

The Netatmo Outdoor Camera is designed to protect your home by providing real-time alerts upon detection of people, pets, or vehicles. It features a built-in 105-dB alarm and an integrated floodlight for enhanced security.

2. WHAT'S IN THE BOX

Verify that all components are present in the package:

- Smart Outdoor Camera with Siren
- Mounting kit
- Wall mount
- MicroSD card (pre-installed)

3. SETUP AND INSTALLATION

The Netatmo Smart Outdoor Camera with Siren is designed for easy installation, typically replacing an existing outdoor light fixture.


3.1. Preparation

- Ensure power to the existing light fixture is turned off at the circuit breaker.
- Gather necessary tools: screwdriver, drill (if needed), ladder.

3.2. Mounting the Camera

Follow these steps to mount your camera:

1. Remove your existing outdoor light fixture.
2. Attach the provided wall mount to the electrical box using the mounting kit. Ensure it is securely fastened.
3. Connect the camera's wires to your home's electrical wiring according to local electrical codes. Typically, this involves connecting live, neutral, and ground wires. If unsure, consult a qualified electrician.
4. Secure the Netatmo Smart Outdoor Camera to the wall mount.

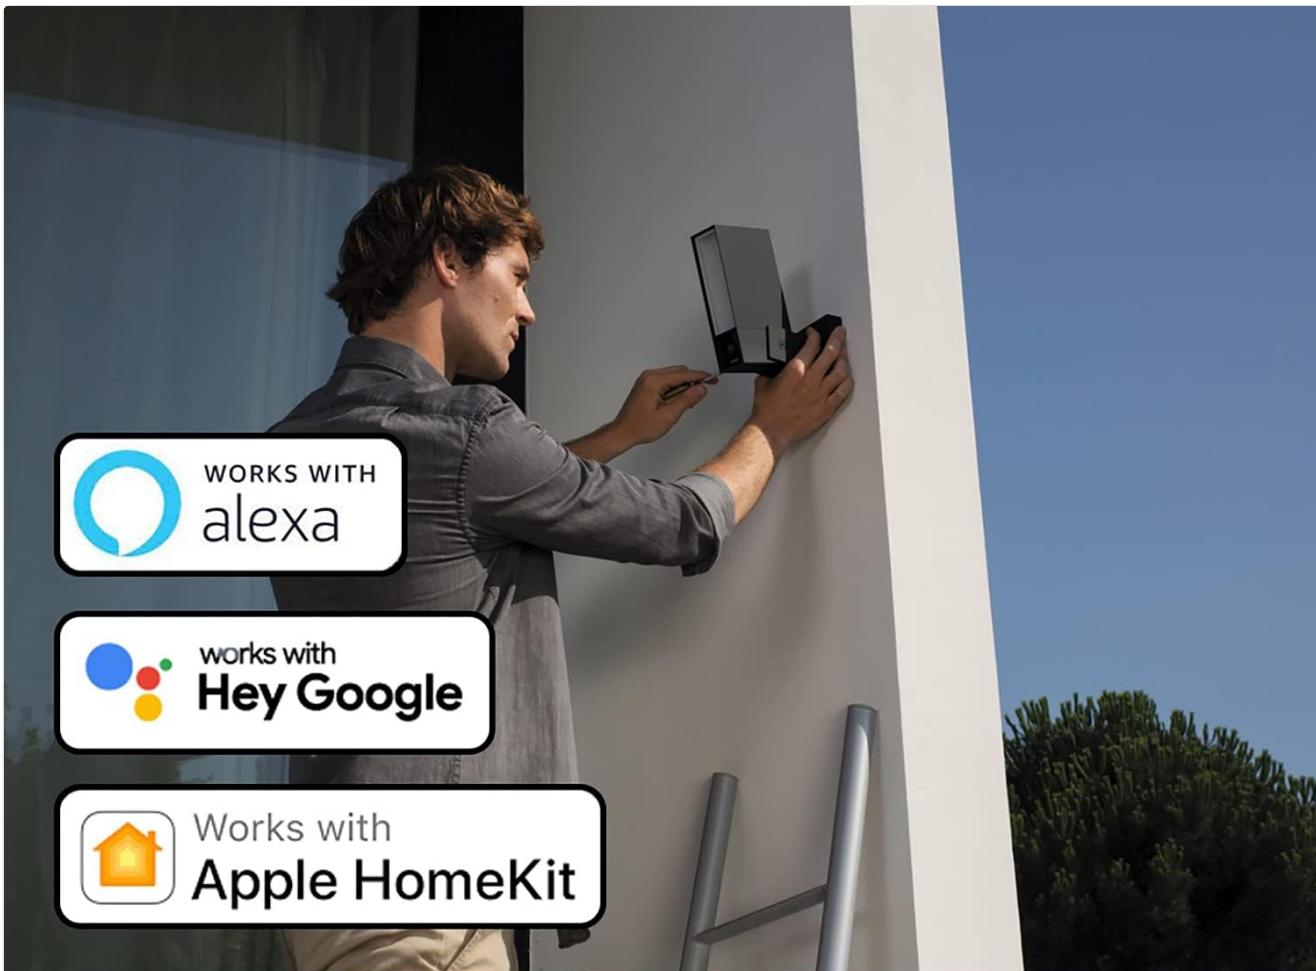

EFFORTLESS SETUP IN MINUTES

Simply install the security camera in place of an outdoor light fixture.

Image: A man installing the Netatmo Smart Outdoor Camera on an exterior wall, demonstrating the ease of setup. The camera is shown next to logos for Alexa, Google Assistant, and Apple HomeKit.

3.3. Initial Power-Up and App Configuration

1. Restore power to the circuit breaker. The camera's floodlight may briefly illuminate.
2. Download the Netatmo Security app from your smartphone's app store (iOS or Android).
3. Open the app and follow the on-screen instructions to create an account or log in.
4. Add your new Smart Outdoor Camera by following the app's pairing process. This typically involves connecting to the camera's temporary Wi-Fi network and then configuring it to connect to your home Wi-Fi network.

4. OPERATING INSTRUCTIONS

4.1. Live View and Event Monitoring

Once configured, you can access the camera's live feed and review recorded events through the Netatmo Security app.

- Open the Netatmo Security app.

- Select your camera to view the live stream.
- Scroll through the timeline to review past events and recordings.

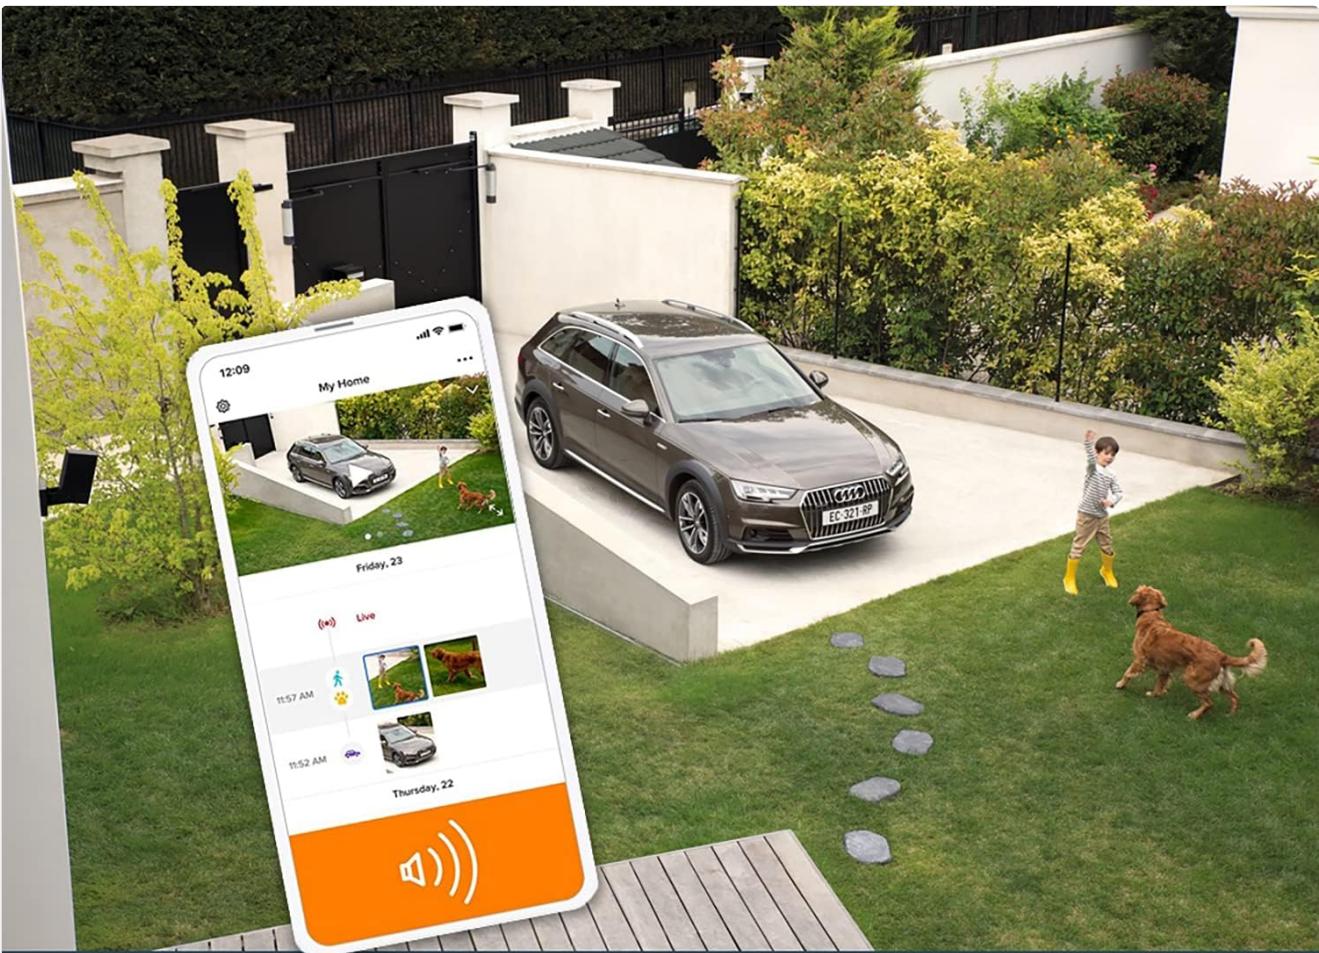


Image: The Netatmo Smart Outdoor Camera positioned next to a smartphone showing the Netatmo app interface. The app displays a live view of a driveway with a car and dogs, along with a timeline of detected events.

4.2. Smart Alerts and Customization

The camera distinguishes between people, animals, and vehicles, sending precise alerts to your smartphone.

- **Alert-Zones:** In the app settings, define specific areas you wish to monitor. The camera will only send alerts for motion detected within these zones.
- **Detection Settings:** Adjust sensitivity and types of detections (people, animals, vehicles) that trigger notifications.



RECEIVE CUSTOM ALERTS

Distinguishes between people, cars and animals and will only provide updates on what you choose to monitor.

Image: A smartphone screen displaying the Netatmo app, illustrating how users can receive custom alerts. The image highlights the camera's ability to distinguish between people, cars, and animals, providing updates only on what the user chooses to monitor.

4.3. Deterring Intruders with the Siren and Floodlight

- **105-dB Alarm:** When an intrusion is detected, you can manually activate the powerful 105-dB siren from the app to deter unwanted visitors.
- **Integrated Floodlight:** The smart floodlight can be set to automatically turn on when motion is detected, illuminating the area and acting as a deterrent. It also provides lighting for your path.



PROTECT YOUR PROPERTY

Receive instant alerts to let you know what is happening outside your home.

Image: An outdoor scene showing the Netatmo Smart Outdoor Camera mounted on a wall, with a graphic indicating a 105-decibel alarm. An individual in a hooded sweatshirt is depicted attempting to open a door, illustrating the camera's function to protect property and provide instant alerts.



SECURITY DAY AND NIGHT

The smart floodlight switches on when needed to deter unwanted visitors

Image: A split image showing the Netatmo Smart Outdoor Camera during the day and at night. The night view shows the integrated floodlight illuminated, emphasizing its role in providing security day and night and deterring unwanted visitors.

5. FEATURES AND CONNECTIVITY

- **No Subscription Fees:** All features, updates, and video storage are accessible without additional costs.
- **Local Storage:** Your video data is stored securely on the included encrypted MicroSD card.
- **24/7 Monitoring:** Stream live HD images at any time, including night vision.
- **Smart Home Integration:** Compatible with Amazon Alexa, Apple HomeKit, Google Assistant, and IFTTT for voice control and integration with other connected devices.



FREE VIDEO STORAGE

Store your videos at no additional cost and stream them whenever you want.

Image: A person walking towards a house at night, illuminated by the Netatmo camera's floodlight. An overlay graphic of a video play icon signifies the feature of free video storage, allowing users to store and stream videos without additional cost.

6. MAINTENANCE

To ensure optimal performance and longevity of your Netatmo Smart Outdoor Camera, follow these maintenance guidelines:

- **Cleaning:** Periodically wipe the camera lens and floodlight cover with a soft, damp cloth to remove dust and debris. Do not use harsh chemicals or abrasive materials.
- **Software Updates:** Ensure your Netatmo Security app and camera firmware are always up to date. Updates are typically managed through the app and provide performance improvements and new features.
- **MicroSD Card:** While the MicroSD card is designed for continuous recording, it is good practice to periodically check its status via the app. If issues arise, the app will notify you.

7. TROUBLESHOOTING

If you encounter issues with your Netatmo Smart Outdoor Camera, refer to the following common solutions:

Problem	Possible Cause	Solution
Camera offline in app	No power; Wi-Fi connectivity issue	Check circuit breaker. Verify Wi-Fi signal strength at camera location. Restart your router. Reconfigure Wi-Fi via the app if necessary.
No alerts received	Incorrect alert settings; App notifications disabled	Check Alert-Zones and detection settings in the Netatmo Security app. Ensure app notifications are enabled in your phone's settings.
Poor video quality	Dirty lens; Low Wi-Fi bandwidth	Clean the camera lens. Ensure adequate Wi-Fi bandwidth and signal strength.
Siren not activating	Siren feature disabled; App issue	Verify siren settings in the app. Restart the app or camera.

For further assistance, please visit the Netatmo support page.

8. SPECIFICATIONS

Attribute	Detail
Model Name	NOC Parent
Indoor/Outdoor Usage	Outdoor
Power Source	Corded Electric
Connectivity Technology	Wi-Fi, Ethernet
Video Capture Resolution	720p
Dimensions (L x W x H)	1.97 x 4.33 x 7.87 inches
Item Weight	3.3 pounds
Voltage	12 Volts
Wattage	5 watts
International Protection Rating	IP54
Special Feature	Easy to Install

9. WARRANTY AND SUPPORT

Netatmo products are designed for durability and reliability. For specific warranty information, please refer to the warranty card included with your product or visit the official Netatmo website.

For technical assistance, troubleshooting, or general inquiries, please visit the [Netatmo Store on Amazon](#) or the official Netatmo support page.

This product was first available on *July 27, 2020*.

