

[Manuals.plus](#) /

› [Mellerware](#) /

› Mellerware Crunchy Air Fryer User Manual

Mellerware ES9730010L

Mellerware Crunchy Air Fryer Instruction Manual

Model: ES9730010L

1. INTRODUCTION

Thank you for choosing the Mellerware Crunchy Air Fryer. This compact and efficient appliance is designed to provide a healthier alternative to traditional frying, allowing you to enjoy crispy and delicious meals with significantly less oil. With its intuitive digital touch screen and predefined programs, cooking becomes fast, easy, and convenient. This manual provides essential information for safe operation, maintenance, and optimal performance of your new air fryer.



Figure 1: Mellerware Crunchy Air Fryer highlighting its compact size (1.5L capacity for 1-2 servings) and 7 predefined cooking programs. The appliance is also certified BPA-free.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.
- This appliance is for household use only.

3. PRODUCT OVERVIEW

3.1 Components

The Mellerware Crunchy Air Fryer consists of the main unit, a removable non-stick basket, and an intuitive digital touch control panel.



Figure 2: Main components of the Mellerware Crunchy Air Fryer, including the main unit and the removable cooking basket.

3.2 Control Panel

The top of the air fryer features a digital touch screen for easy operation.

- **Temperature Control:** Adjust cooking temperature between 80°C and 200°C.
- **Timer Control:** Set cooking time up to 60 minutes.
- **Predefined Programs:** Select from 7 pre-set cooking functions for common dishes.
- **Power Button:** To turn the appliance on/off.



Figure 3: Detailed view of the digital touch screen, illustrating temperature control and display.

REGULADOR DE TEMPERATURA 80-200°C



Figure 4: The control panel also features a 60-minute timer and icons for the 7 predefined cooking menus, making it super easy to use.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the removable basket and non-stick grill plate with warm soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 20 cm (8 inches) above the appliance for proper air circulation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **First Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10 minutes at 180°C to burn off any manufacturing residues. A slight odor may be present, which is normal and will dissipate.

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. **Prepare Food:** Place your ingredients in the air fryer basket. Do not overfill the basket to allow for proper air circulation and even cooking.
2. **Insert Basket:** Slide the basket back into the main unit until it clicks into place.
3. **Power On:** Press the power button on the digital touch screen to turn on the appliance.
4. **Set Temperature and Time:**
 - **Manual Setting:** Use the temperature and timer adjustment buttons to set your desired cooking temperature (80-200°C) and time (up to 60 minutes).
 - **Predefined Programs:** Select one of the 7 predefined cooking programs by tapping the corresponding icon. The air fryer will automatically set the optimal temperature and time for that food type.
5. **Start Cooking:** Press the start button (usually indicated by a play/pause icon) to begin the cooking process.
6. **Shaking/Flipping (Optional):** For some foods, especially fries or smaller items, it is recommended to shake or flip the contents halfway through the cooking time for even browning. Carefully pull out the basket, shake or flip the food, and reinsert the basket. The air fryer will resume cooking automatically.
7. **End of Cooking:** The air fryer will automatically shut off and beep when the set cooking time has elapsed.
8. **Remove Food:** Carefully pull out the basket using the handle. Use heat-resistant tongs or utensils to remove the cooked food from the basket.
9. **Power Off:** Press the power button to turn off the appliance if it hasn't already. Unplug the air fryer from the wall outlet.

5.2 Healthy Cooking Benefits

The Mellerware Crunchy Air Fryer utilizes rapid hot air circulation to cook food, significantly reducing the need for oil. This allows you to enjoy your favorite fried foods with up to 85% less fat, contributing to a healthier diet.



Figure 5: The air fryer allows for cooking with significantly less oil, promoting healthier meals.

5.3 Recommended Uses

This air fryer is versatile and ideal for a variety of foods:

- Potatoes (fries, wedges)
- Healthy snacks

- Vegetables (roasted, grilled)
- Meats (chicken, pork, beef)
- Fish
- Skewers
- Granola

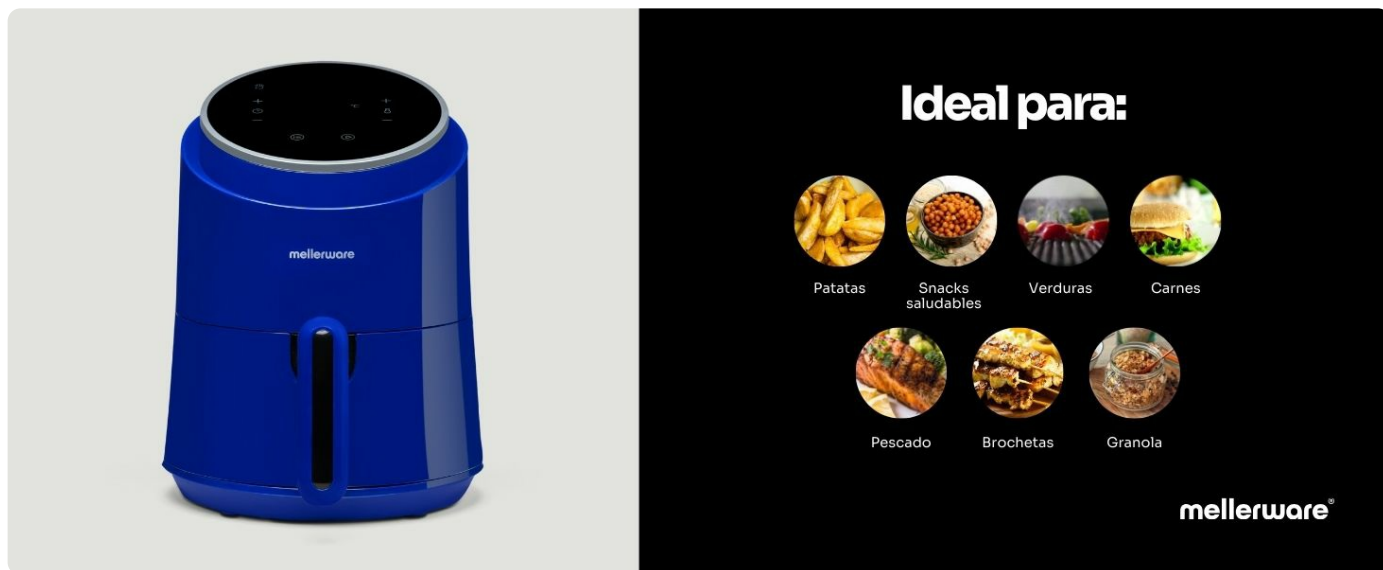


Figure 6: The Mellerware Crunchy Air Fryer is suitable for a wide range of ingredients, from potatoes to meats and vegetables.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Mellerware Crunchy Air Fryer.

1. **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Cleaning the Basket and Grill Plate:**
 - The non-stick basket and grill plate are dishwasher safe. However, to prolong the life of the non-stick coating and prevent potential issues like oxidation or Teflon wear, hand washing with warm soapy water and a non-abrasive sponge is recommended.
 - For stubborn food residues, soak the basket in warm soapy water for about 10-15 minutes before cleaning.
 - Do not use metal utensils or abrasive cleaning materials, as these can damage the non-stick coating.
3. **Cleaning the Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove any food debris from the heating element.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer. Store it in a cool, dry place.

TEMPORIZADOR
60 MIN

7
MENÚS
PREDEFINIDOS

Súper fácil de usar

Figure 7: The non-stick basket is designed for easy cleaning, including being dishwasher safe.

7. TROUBLESHOOTING

If you encounter any issues with your Mellerware Crunchy Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly after each use. For fatty foods, place a piece of aluminum foil at the bottom of the basket to catch excess oil.
Food is not crispy.	Too much moisture in food; not enough oil (for some recipes); incorrect temperature/time.	Pat food dry before air frying. For some items, a light spray of oil can help achieve crispiness. Increase cooking time or temperature slightly.

8. SPECIFICATIONS

Feature	Detail
Brand	Mellerware
Model Number	ES9730010L
Color	1.5L Black
Product Dimensions	29.7 x 23.4 x 31.2 cm
Weight	2.88 kg
Capacity	1.5 Liters
Power	1230 Watts
Voltage	205 Volts
Special Features	Digital Display, Timer
Temperature Range	80°C - 200°C
Timer Range	Up to 60 minutes
Predefined Programs	7
Basket Material	Non-stick, BPA/PFOA free
Dishwasher Safe Parts	Basket (hand wash recommended for longevity)

CESTILLO ANTIADHERENTE



Figure 8: Compact design and dimensions of the Mellerware Crunchy Air Fryer.

9. WARRANTY AND SUPPORT

Mellerware products are manufactured to the highest quality standards. For any questions, technical assistance, or warranty claims, please contact Mellerware customer support. Refer to the product packaging or the official Mellerware website for contact details specific to your region.

Please retain your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08DP35DVQ>

More documents and user manuals: **<https://manuals.plus/>**