

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KLARSTEIN](#) /
- › [KLARSTEIN Alessia 90cm Cooker Hood User Manual](#)

KLARSTEIN Alessia

KLARSTEIN Alessia 90cm Cooker Hood User Manual

Model: Alessia

INTRODUCTION

Thank you for choosing the KLARSTEIN Alessia 90cm Cooker Hood. This manual provides essential information for the safe installation, operation, and maintenance of your appliance. Please read these instructions carefully before use and keep them for future reference.



HEADROOM

Comfortable and free working on the stove

Figure 1: The KLARSTEIN Alessia cooker hood features an elegant design, combining stainless steel and black safety glass.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply matches the voltage specified on the rating plate.
- Installation must be performed by a qualified technician in accordance with local regulations.
- Do not operate the appliance with a damaged cord or plug.
- Regularly clean grease filters to prevent fire hazards.
- Do not flambé under the cooker hood.
- Ensure adequate ventilation in the room when the hood is used simultaneously with gas or other fuel-burning appliances.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance

by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and undamaged.

- 1 x KLARSTEIN Alessia Cooker Hood
- 2 x Chimney Covers
- 1 x Exhaust Hose
- 1 x Non-return Flap
- 1 x Mounting Kit (wall bracket, dowels, screws)
- 1 x Multilingual Instruction Manual

SETUP AND INSTALLATION

The Alessia cooker hood is designed for wall mounting. It can operate in extraction mode (venting air outside) or recirculation mode (filtering air and returning it to the kitchen).

Installation Steps:

1. **Preparation:** Ensure the installation area is suitable and there is sufficient clearance above the cooking surface. The recommended distance between the cooker hood and the hob is typically 65-75 cm.
2. **Mounting the Wall Bracket:** Mark the drilling points on the wall according to the provided template. Drill holes, insert dowels, and securely attach the wall bracket using the screws from the mounting kit.
3. **Attaching the Hood:** Carefully lift the cooker hood and hang it onto the wall bracket. Ensure it is securely seated.
4. **Ducting (Extraction Mode):** Connect the exhaust hose to the hood's outlet and route it to an external vent. Install the non-return flap.
5. **Charcoal Filter Installation (Recirculation Mode):** If using recirculation mode, install the optional active charcoal filters (Article 10032844) as per their instructions. These filters are not included and must be purchased separately.
6. **Chimney Covers:** Install the two chimney covers, adjusting their height as needed.
7. **Electrical Connection:** Connect the power cord to a suitable electrical outlet.



TUTTO SOTT' OCCHIO

illuminazione LED del piano cottura
attivabile con classe di efficienza A

Figure 2: The inclined design of the cooker hood provides comfortable headroom for cooking activities.



Figure 3: The cooker hood supports both extraction and recirculation modes. For recirculation, an optional carbon filter is required.

OPERATING INSTRUCTIONS

The KLARSTEIN Alessia cooker hood features a touch control panel for easy operation.



Figure 4: The clearly laid out touch control panel for simple operation.

Control Panel Functions:

- **Power Button:** Press to turn the hood ON or OFF.
- **Speed Selection:** The hood offers three power levels (low, medium, high) to adapt to different cooking needs. Press the speed buttons to cycle through the settings.
- **LED Lighting:** Press the light button to activate or deactivate the integrated LED lighting. This provides illumination for your cooking surface.



Figure 5: Integrated LED lighting provides clear visibility of the cooking surface.

For optimal performance, select a higher speed setting when cooking with strong odors or producing a lot of steam. Use lower settings for lighter cooking.

MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficient operation of your cooker hood.

Cleaning the Grease Filters:

- The aluminum grease filters should be cleaned regularly, ideally every 2-4 weeks depending on usage.
- To remove, push the latch on the filter and pull downwards.
- Filters can be washed by hand in warm soapy water or in a dishwasher on a low-temperature cycle.
- Ensure filters are completely dry before re-installing.



Figure 6: Washable aluminum grease filters for easy cleaning and maintenance.

Replacing Charcoal Filters (Recirculation Mode Only):

- If operating in recirculation mode, the active charcoal filters (Article 10032844) need to be replaced approximately every 3-6 months, depending on usage.
- Refer to the charcoal filter's specific instructions for replacement.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft cloth and a mild, non-abrasive cleaning agent.
- Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the finish.

TROUBLESHOOTING

Before contacting customer support, please check the following common issues:

Problem	Possible Cause	Solution
Hood does not operate	No power supply; Power cord not plugged in; Fuse blown.	Check power connection; Check household fuse/circuit breaker.
Insufficient suction	Grease filters clogged; Charcoal filters saturated (recirculation mode); Exhaust duct blocked; Incorrect speed setting.	Clean grease filters; Replace charcoal filters; Check exhaust duct for obstructions; Select a higher speed setting.
Lights not working	LED bulb faulty; Electrical connection issue.	Contact customer support for LED replacement; Check power supply.
Excessive noise	Loose components; Improper installation; Obstruction in fan.	Check all mounting screws; Ensure exhaust duct is properly installed; Inspect fan for foreign objects.

TECHNICAL SPECIFICATIONS

Brand	KLARSTEIN
Model	Alessia
Dimensions (W x H x D)	Approx. 90 x 29 x 29 cm (without chimney cover)
Airflow Capacity	Up to 350 m ³ /h
Power Consumption	65 Watts
Energy Efficiency Class	B
Number of Speed Settings	3
Noise Level	54-64 dB
Lighting Efficiency Class	A
Grease Filtering Efficiency Class	D
Fluid Dynamic Efficiency Class	D
Annual Energy Consumption	29 kWh/year
Power Supply	220-240 V ~ 50/60 Hz
Material	Stainless Steel, Safety Glass
Control Type	Touch
Filter Type	Mesh (Aluminum Grease Filter)
Weight	Approx. 7.8 kg (product only) / 13.4 kg (packaged)



ARIA PURA

Con filtri anti-unti in alluminio lavabile

Figure 7: The Alessia cooker hood is designed for energy-efficient operation, rated Class B.

WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or spare parts, please contact your retailer or the KLARSTEIN customer service department. Keep your proof of purchase for any warranty claims.

You can find more information and contact details on the official KLARSTEIN website: www.klarstein.com