



[Manuals.plus](#) /

› [ELECHOMES](#) /

› Elechomes K07-U45CM-01 Milk Frother and Steamer User Manual

ELECHOMES K07-U45CM-01

Elechomes K07-U45CM-01 Milk Frother and Steamer User Manual

Model: K07-U45CM-01

INTRODUCTION

Thank you for choosing the Elechomes K07-U45CM-01 Milk Frother and Steamer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

SAFETY PRECAUTIONS

Always observe the following safety guidelines to prevent injury or damage to the appliance:

- Do not immerse the frother jug or the power base in water or any other liquid.
- This appliance is not suitable for dishwasher cleaning. Always hand wash.
- Ensure the appliance is placed on a stable, flat, heat-resistant surface away from water sources.
- Keep out of reach of children.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Only use the provided frothing and mixing whisks.

Thoughtful Design

Ergonomic design handle and angled spout, allow you to control the flow of milk better.



Image illustrating the thoughtful design and a crucial safety warning: Never immerse the jug or base in water. Always hand wash.

PRODUCT OVERVIEW

The Elechomes K07-U45CM-01 Milk Frother and Steamer is designed for ease of use and versatility in preparing various milk-based beverages.

Components Included:

- 1 x Frother Cup
- 1 x Frothing Whisk (for creating foam)
- 1 x Mixing Whisk (for heating milk without frothing)
- 1 x Power Base with Cord
- 1 x User Manual (this document)



Front view of the Elechomes K07-U45CM-01 Milk Frother, showcasing its sleek white design and power button.

Elechomes

Other Brands



2 Kind of paddles for Frothing & Mixing



1 paddle



3 modes for warm & cold frothing and milk heating



1 mode for warm frothing



Ergonomic design handle



Without handle



360° power base



Power line hinder pouring

Illustration highlighting key features such as the two types of whisks (frothing and mixing), three operating modes, ergonomic handle, and 360-degree rotatable power base.

Powerful Motor & Fast Foaming

Make delicious foam at home, easier to make soft, creamy, smooth coffees.



Soft and Creamy
Smooth Foam Taste

An internal view demonstrating the powerful motor and fast foaming mechanism of the frother, designed for soft, creamy, and smooth foam.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, clean the frother cup and whisks according to the "Maintenance" section. Wipe the power

base with a damp cloth.

3. **Assemble:** Place the desired whisk (frothing or mixing) onto the spindle at the bottom of the frother cup.
4. **Position:** Place the frother cup onto the power base. Ensure it is seated correctly.
5. **Connect:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

The Elechomes Milk Frother features a simple one-button control for three distinct modes.

Preparation:

- Pour milk into the frother cup. For frothing, do not exceed the 100ml (3.4 oz) maximum fill line. For heating only, do not exceed the 200ml (6.8 oz) maximum fill line.
- For best frothing results, it is recommended to use whole milk with a fat content greater than 3%. The frother can also be used with skimmed milk, almond, coconut, rice, oat, or soy milk.
- Ensure the lid is securely placed on the frother cup before operation.

Operating Modes:

Use the single power button to select your desired function:

- **I. Single-click (Press once): Frothing and Heating**
This mode will froth and heat the milk simultaneously, ideal for lattes and cappuccinos. The milk will be heated to approximately $65\pm 10^{\circ}\text{C}$.
- **II. Double-click (Press twice): Only Heating**
This mode will heat the milk without frothing, suitable for hot chocolate or warm milk.
- **III. Triple-click (Press three times): Only Frothing (Cold Froth)**
This mode will froth the milk without heating, perfect for iced coffees or cold foam beverages.

The appliance will automatically shut off within approximately 2 minutes once the selected process is complete.

1 Button One Button Control

2 Whisks Frothing & Mixing

3 Modes Hot & Cold Frothing



Single-click
Frothing & Heating



Double-click
Heating



Triple-click
Frothing

Visual guide to the one-button control: Single-click for frothing & heating, Double-click for heating, and Triple-click for frothing (cold).

Linger Over a Coffee

Makes the best microfoam, a luscious, thick and silky frothed milk that is perfect for lattes.



Frothing
Hot Milk



Frothing
Cold Milk



Heating
Milk



The Elechomes frother can create frothing hot milk, frothing cold milk, or simply heat milk, allowing for a variety of cafe-style beverages.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your milk frother.

- **After Each Use:** Rinse the frother cup with cold water immediately after use to prevent milk residue from drying and

sticking.

- **Hand Wash Only:** The frother cup has a stainless steel non-stick coating on the inner wall, making it easy to clean. Use a soft sponge or cloth with mild detergent.
- **Do Not Immerse:** As a critical safety measure, never immerse the frother cup or the power base in water or any other liquid.
- **Drying:** After washing, wipe all parts dry thoroughly with a soft cloth.
- **Whisks:** The frothing and mixing whisks can be easily removed for cleaning. Rinse them under running water and dry.
- **Storage:** Store the frother in a clean, dry place when not in use.

Easy to Clean

Rinse the device with cold water and wipe it dry after each use.



Never immerse the jug or the base into water or other liquid. Do not wash it in the dishwasher.

Demonstration of hand washing the frother cup under running water. Remember to rinse and wipe dry after each use.

TROUBLESHOOTING

If you encounter any issues with your Elechomes Milk Frother, please review the following general advice. For specific problems not listed, or if issues persist, please contact customer support.

- **Frother not turning on:** Ensure the power cord is securely plugged into a working outlet and the frother cup is correctly seated on the power base.
- **Milk not frothing or heating properly:** Check that the correct whisk is installed for your desired function. Ensure milk levels are within the indicated minimum and maximum lines. For best frothing, use cold milk with adequate fat content.
- **Unusual noise during operation:** Ensure the whisk is properly attached to the spindle and there are no obstructions in the frother cup.

SPECIFICATIONS

Brand	ELECHOMES
Model	K07-U45CM-01
Manufacturer	Elechomes
Wattage	450 watts
Material	Superior ABS Plastic (exterior), Food Grade 304 Stainless Steel (interior)
Product Dimensions	17.02 x 15.6 x 22.61 cm
Item Weight	1.06 kg
Capacity (Frothing)	100 Milliliters (3.4 oz)
Capacity (Heating)	200 Milliliters (6.8 oz)
Special Features	Auto Shut-Off, 3 Operating Modes

WARRANTY AND SUPPORT

Elechomes is committed to your satisfaction. Your K07-U45CM-01 Milk Frother and Steamer comes with an **18-month service guarantee**.

If you experience any issues or have questions regarding your product, please do not hesitate to contact Elechomes customer support. We aim to resolve any concerns within 24 hours.

For support, please refer to the contact information provided on the Elechomes official website or your purchase documentation.