

## BEKO FSE1073N

# Beko FSE1073N Freestanding Freezer Instruction Manual

Model: FSE1073N | Brand: Beko

## 1. INTRODUCTION

---

Thank you for choosing the Beko FSE1073N Freestanding Freezer. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions thoroughly before using your freezer and keep them for future reference.

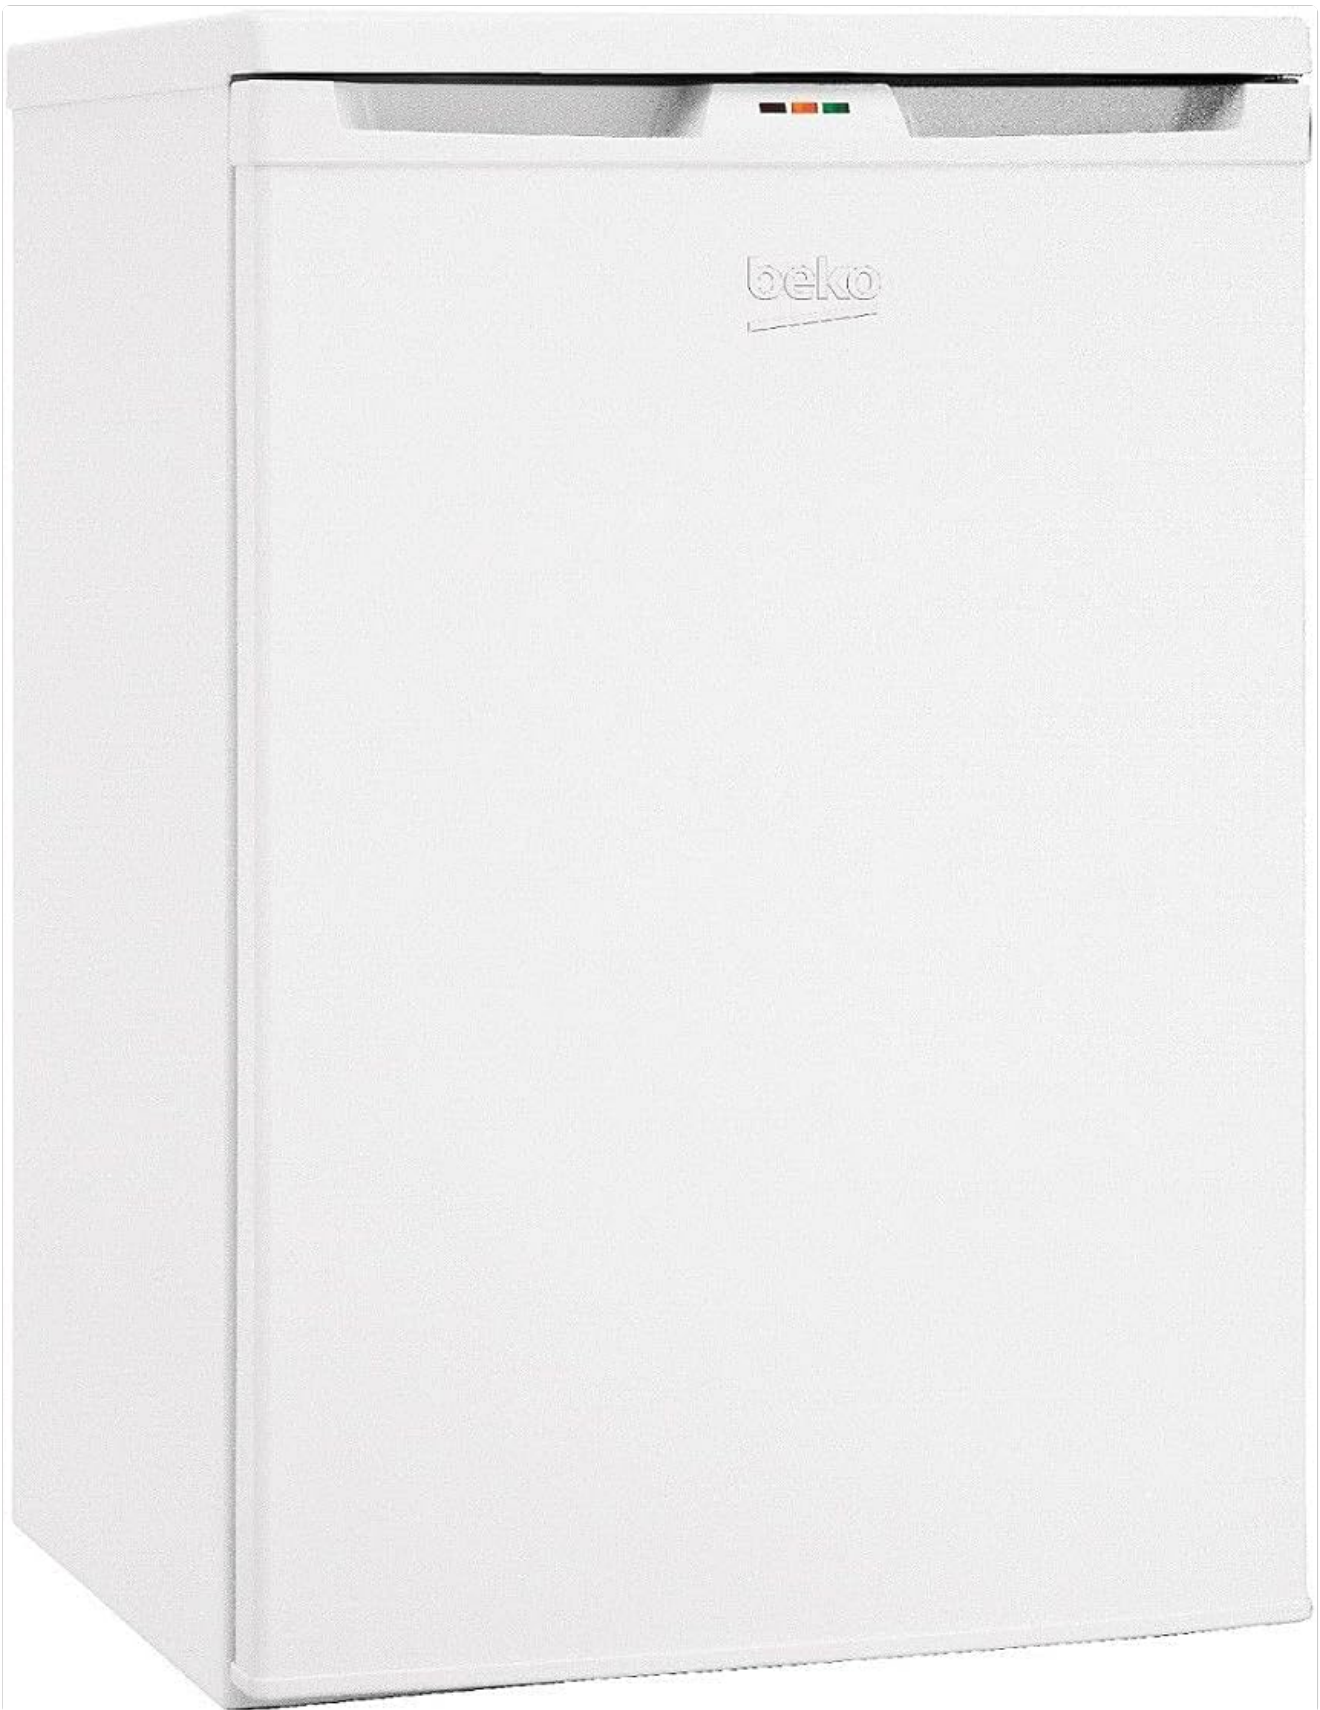


Image 1: Front view of the Beko FSE1073N Freestanding Freezer.

## 2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Please observe all safety warnings and precautions outlined in this section.

- **Electrical Safety:** Ensure the freezer is connected to a grounded outlet. Do not use extension cords or adapters. Disconnect power before cleaning or maintenance.

- **Flammable Materials:** Do not store explosive substances such as aerosol cans with flammable propellants in this appliance.
- **Ventilation:** Ensure adequate ventilation around the appliance to prevent overheating. Do not block ventilation openings.
- **Children's Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Disposal:** When disposing of the appliance, do so in accordance with local regulations for the disposal of refrigerants and flammable blowing gas.

## 3. SETUP AND INSTALLATION

---

### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the freezer for any damage incurred during transit. Report any damage to your retailer immediately.

### 3.2 Placement

Place the freezer on a firm, level surface away from direct sunlight, heat sources (e.g., ovens, radiators), and extreme cold. Ensure there is sufficient space around the appliance for proper air circulation (at least 10 cm at the back and sides).

### 3.3 Leveling

Adjust the leveling feet at the bottom of the freezer to ensure it is stable and level. This prevents vibrations and ensures proper door sealing.

### 3.4 Initial Power-On

After placement, wait at least 4 hours before plugging the freezer into the power outlet. This allows the refrigerant to settle. Once plugged in, allow the freezer to operate empty for 2-4 hours to reach its optimal operating temperature before loading food.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Temperature Control

The freezer's temperature is controlled by a thermostat, typically located inside the appliance. Adjust the dial or digital control to your desired setting. A colder setting (higher number) is recommended for initial freezing or when the ambient temperature is high.

### 4.2 Food Storage

Organize food efficiently within the freezer drawers. Ensure food is properly sealed to prevent freezer burn and odor transfer. Avoid overloading the freezer, as this can impede air circulation and freezing efficiency.

### FICHE DU PRODUIT

Fournisseur	Beko
Nom du modèle	FSE1073N
Catégorie	8
Classe d'Efficacité Energétique	A+
Prix du label écologique de l'UE	-
Consommation énergétique annuelle (kWh/an)*	181
Volume net du réfrigérateur [litre]	
Volume net du Compartiment fraîcheur (litre)	
(***)* Volume net [litre]	85
(**) Volume net [litre]	
(*) Volume net [litre]	N/A
Volume net compartiment Zéro étoile [Litre]	N/A
Anti-givre Conservation des produits frais	N/A
Anti-givre Compartiment Fraîcheur	N/A
Anti-givre Conservation du vin **	N/A
Anti-givre (****)	-
Anti-givre (**)	N/A
Anti-givre Clayettes porte-bouteilles	N/A
Anti-givre Autres compartiments	N/A
Temps d'Élévation de Température [h]	13
Pouvoir de Congélation [kg/24h]	10.5
Classe Climatique***	SN-T
Emissions acoustiques dans l'air dB(A) re 1pW	37
Encastré	-
Remarque	

\* Consommation énergétique "XYZ" kWh par an, sur la base des résultats de test standard pendant 24 heures. La consommation énergétique réelle dépendra de comment l'appareil est utilisé et d'où il est installé.

\*\*La température de conservation la plus froide du compartiment de conservation du vin, pouvant être déterminée par le consommateur, est de 5°C.

\*\*\*Selon la classe climatique déclarée, cet appareil a été fabriqué pour être utilisé suivant la plage de température ambiante présentée ci-dessous :

Classe climatique SN : + 10°C et + 32°C  
 Classe climatique N : + 16°C et + 32°C  
 Classe climatique ST : + 16°C et + 38°C  
 Classe climatique T : + 16°C et + 43°C

+: Oui  
 -: Non  
 S/O : Sans objet  
 préparé et déclaré conformément  
 à la norme UE 1060/2010

7225342711

Image 2: Interior view of the Beko FSE1073N freezer, showing storage drawers.

### 4.3 Freezing Fresh Food

To freeze fresh food, place it in the fastest freezing section (usually the top drawer or a designated fast-freeze compartment). Do not place warm food directly into the freezer; allow it to cool first.

## 5. MAINTENANCE AND CLEANING

## 5.1 Defrosting

The Beko FSE1073N is a manual defrost freezer. Frost buildup reduces efficiency. Defrost the freezer when the frost layer reaches approximately 5mm (1/4 inch) thick. To defrost:

1. Unplug the freezer from the power outlet.
2. Remove all food items and store them in a cool place or another freezer.
3. Leave the freezer door open to allow frost to melt naturally. Place towels at the bottom to absorb water. Do not use sharp objects or heating devices to speed up defrosting.
4. Once defrosted, clean and dry the interior thoroughly.
5. Plug the freezer back in and allow it to cool down before returning food.

## 5.2 Cleaning the Interior

Clean the interior regularly with a solution of mild detergent and warm water. Rinse with clean water and dry thoroughly. Avoid abrasive cleaners or solvents.

## 5.3 Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent. Dry with a soft, clean cloth. Periodically clean the condenser coils at the back of the freezer with a soft brush or vacuum cleaner to maintain efficiency.

## 6. TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer does not operate.	No power supply; power cord not plugged in; fuse blown.	Check power outlet and plug; check household fuse/circuit breaker.
Freezer is not cold enough.	Door not closed properly; excessive door opening; thermostat set too warm; heavy frost buildup; warm food recently added.	Ensure door is sealed; reduce door openings; adjust thermostat to a colder setting; defrost the freezer; allow warm food to cool before placing inside.
Excessive noise.	Freezer not level; contact with wall/cabinet; loose parts.	Adjust leveling feet; move freezer away from obstructions; check for loose components.
Water on the floor.	Drain hole blocked (if applicable); during defrosting.	Clear drain hole; this is normal during manual defrosting, ensure towels are used.

If the problem persists after checking these points, please contact Beko customer service or a qualified technician.

## 7. PRODUCT SPECIFICATIONS

Below are the key technical specifications for the Beko FSE1073N Freestanding Freezer:

Feature	Detail
---------	--------

<b>Feature</b>	<b>Detail</b>
<b>Brand</b>	BEKO
<b>Model Name</b>	FSE1073N
<b>Product Dimensions (D x W x H)</b>	54 cm x 59 cm x 84 cm
<b>Capacity</b>	85 Liters
<b>Noise Level</b>	37 Decibels
<b>Installation Type</b>	Freestanding
<b>Color</b>	White
<b>Voltage</b>	230 Volts
<b>Annual Energy Consumption</b>	181 kWh
<b>Number of Drawers</b>	3
<b>Door Material</b>	Stainless Steel
<b>Weight</b>	26.5 Kilograms
<b>Climate Class</b>	SN-T (Subnormal to Tropical)
<b>Freezing Capacity</b>	10.5 kg/24h
<b>Power Outage Storage Time</b>	13 hours

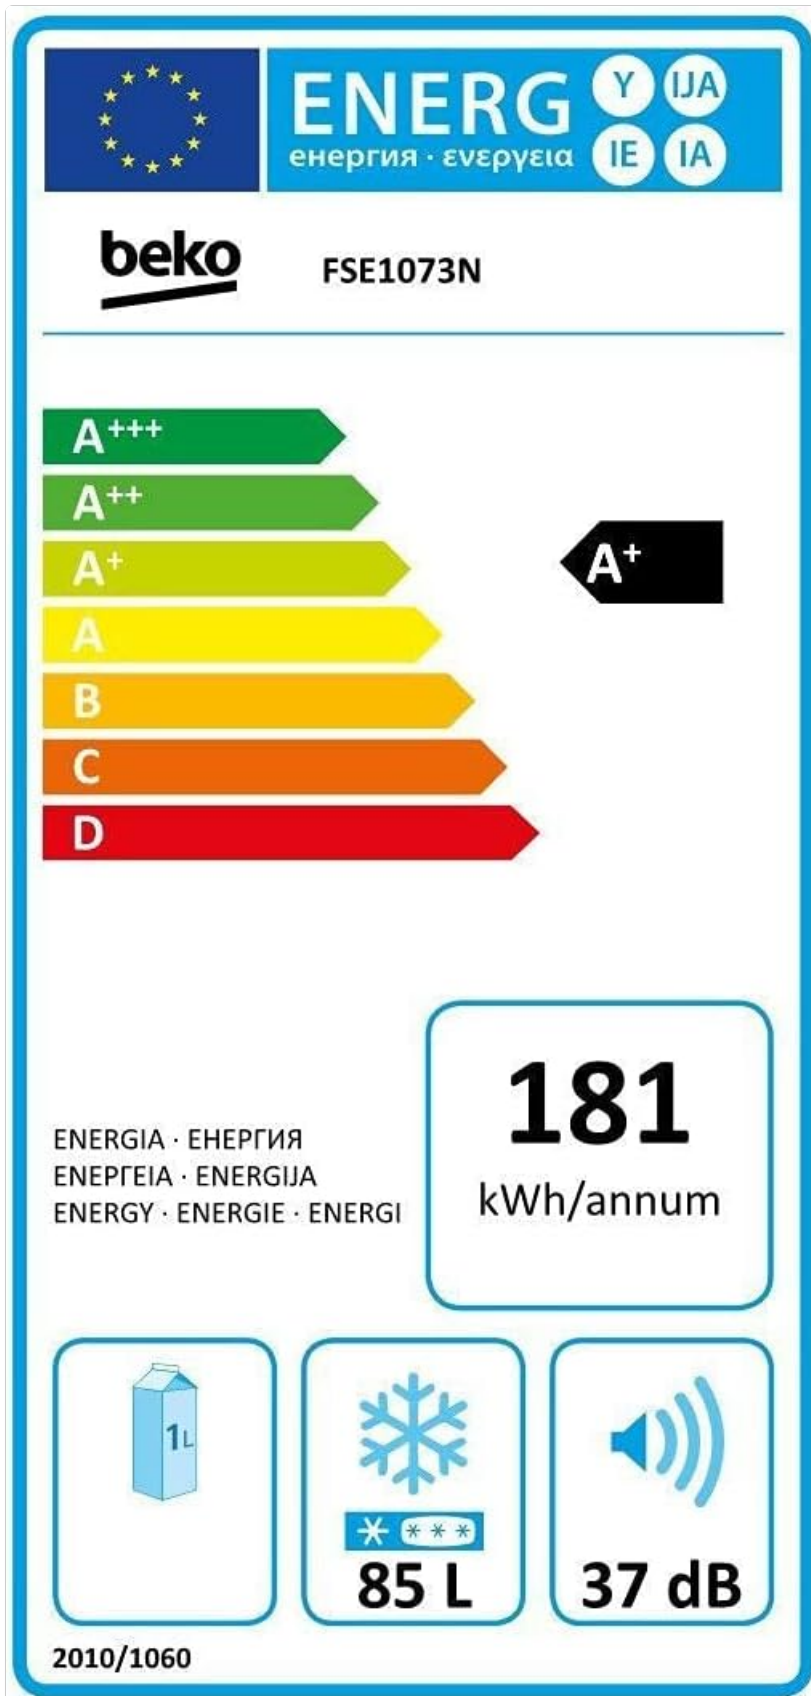


Image 3: Energy efficiency label for the Beko FSE1073N, showing A+ rating, 181 kWh/annum, 85L capacity, and 37 dB noise level.

## 8. WARRANTY AND SUPPORT

Your Beko FSE1073N freezer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, spare parts, or service inquiries, please contact Beko customer service through their official website or the contact information provided in your warranty documentation.

For more information, visit the official Beko website: [www.beko.com](http://www.beko.com)

