

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Candy](#) /

› [Candy MIG25BNT 900W 25L Built-in Microwave Oven User Manual](#)

Candy MIG25BNT

Candy MIG25BNT 900W 25L Built-in Microwave Oven User Manual

Model: MIG25BNT | Brand: Candy

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) Door (bent), (2) Hinges and latches (broken or loosened), (3) Door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Always supervise children when the microwave is in use, especially when the Child Lock function is not active.

PRODUCT OVERVIEW

The Candy MIG25BNT is a 900W, 25-liter built-in microwave oven designed for seamless integration into your kitchen. It features a sleek stainless steel design, a digital display, and offers various cooking functions including microwave, grill, and combination modes.



Figure 1: Front view of the Candy MIG25BNT Built-in Microwave Oven. This image shows the black finish, digital display, and control panel.

Key Features:

- **Built-in Design:** Seamlessly integrates into kitchen cabinetry.
- **Grill Function:** Allows for grilling and browning of food.
- **Automatic Cooking Programs:** 13 pre-set programs for various dishes.
- **Quick Start Function:** Instant 30-second cooking at maximum power.
- **Rapid Defrost:** Defrost food quickly by weight or time.
- **Child Lock:** Prevents accidental operation by children.
- **Digital Display:** Clear interface for settings and time.

INSTALLATION AND SETUP

This microwave oven is designed for built-in installation. Proper installation is crucial for safe and efficient operation. It is recommended that installation be performed by a qualified technician.

Installation Requirements:

- Ensure the cabinet opening dimensions match the microwave's specifications. The appliance dimensions are approximately 59.5 cm (width) x 40.1 cm (height) x 38.8 cm (depth).
- Provide adequate ventilation space around the appliance as specified in the detailed installation guide (not included in this general manual).
- The electrical outlet must be easily accessible and properly grounded.

- Do not block any ventilation openings on the oven.

Refer to the separate installation template and instructions provided with the packaging for detailed steps on mounting the microwave into your cabinet.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel before operating the microwave oven.

Control Panel Overview:

The microwave features a digital display and touch controls. Specific button functions will be detailed in the full product manual, but generally include:

- **Time/Weight Adjustment:** Dials or buttons to set cooking time or food weight.
- **Power Level:** Select microwave power (up to 8 levels).
- **Start/Pause:** To begin or temporarily stop cooking.
- **Stop/Clear:** To cancel a program or clear settings.
- **Grill:** Activates the grill function.
- **Combination Cooking:** Combines microwave and grill functions.
- **Auto Menu:** Accesses pre-set automatic cooking programs.
- **Defrost:** Initiates the defrost function.
- **Child Lock:** Activates or deactivates the child safety lock.

Basic Microwave Cooking:

1. Place food in a microwave-safe container inside the oven.
2. Close the oven door securely.
3. Select the desired power level (e.g., 900W for maximum power).
4. Set the cooking time using the time adjustment controls.
5. Press the Start button to begin cooking.

Grill Function:

The grill function is ideal for browning and crisping food. Use heat-resistant dishes.

1. Place food on the grill rack (if provided) in a heat-resistant dish.
2. Close the oven door.
3. Press the Grill button.
4. Set the desired grilling time.
5. Press the Start button.

Automatic Cooking Programs:

The oven features 13 automatic cooking programs. Select the desired program from the menu, and the oven will automatically set the appropriate cooking time and power level based on the food type and weight.

1. Place food in the oven.

2. Press the Auto Menu button.
3. Select the desired program number or icon.
4. Enter the food weight if prompted.
5. Press the Start button.

Quick Start Function:

For quick reheating, press the Quick Start button (often labeled "Start" or "30 Sec"). Each press adds 30 seconds of cooking time at maximum power.

Defrost Function:

The rapid defrost function allows you to defrost food by weight or time.

1. Place frozen food in the oven.
2. Press the Defrost button.
3. Select defrost by weight or time.
4. Enter the weight or time.
5. Press the Start button.

Child Lock:

To activate the Child Lock, typically press and hold a specific button (e.g., "Stop/Clear" or a dedicated lock button) for a few seconds until an indicator appears on the display. Repeat the process to deactivate.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** Wipe the oven cavity after each use with a damp cloth. For stubborn food splatters, boil a cup of water with lemon slices inside the oven for a few minutes to loosen residue, then wipe clean.
- **Exterior Cleaning:** Clean the exterior surfaces, including the control panel and door, with a soft, damp cloth. For stainless steel surfaces, use a non-abrasive stainless steel cleaner.
- **Door Seals:** Regularly inspect and clean the door seals and sealing surfaces to ensure proper closure and prevent microwave energy leakage.
- **Turtable:** The glass turntable and roller ring can be removed and washed in warm soapy water or in a dishwasher.
- **Do Not Use:** Abrasive cleaners, steel wool, or harsh chemicals, as these can damage the oven surfaces.
- **Always Unplug:** Disconnect the appliance from the power supply before cleaning.

TROUBLESHOOTING

Before contacting customer service, try the following troubleshooting steps for common issues:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse/circuit breaker.
Food not heating.	Incorrect cooking time or power level set; Microwave-safe dish not used.	Adjust cooking time and power level; Use appropriate microwave-safe cookware.
Sparking inside oven.	Metal or foil in oven; Food residue on cavity walls.	Remove any metal objects; Clean oven interior thoroughly.
Display shows error code.	Internal malfunction.	Unplug the oven for a few minutes, then plug back in. If the error persists, contact service.

SPECIFICATIONS

Detailed technical specifications for the Candy MIG25BNT Microwave Oven:

- Model:** MIG25BNT
- Type:** Built-in Microwave Oven with Grill
- Capacity:** 25 Liters
- Microwave Power:** 900 Watts
- Power Levels:** 8
- Installation Type:** Integrated
- Dimensions (W x H x D):** 59.5 cm x 40.1 cm x 38.8 cm
- Weight:** 19 Kilograms
- Material:** Stainless Steel (interior and exterior)
- Color:** Black
- Control Type:** Digital Display, Touch Interface
- Special Features:** Compact Design, Grill Function, 13 Automatic Cooking Programs, Quick Start, Defrost, Child Lock.

WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, service requests, or to order spare parts, please contact Candy customer support. Contact information can typically be found on the manufacturer's website or in the warranty documentation.

When contacting support, please have your product model (MIG25BNT) and serial number ready.

