

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Keenstone](#) /

› [Keenstone 2-Slice Retro Stainless Steel Toaster \(Model WT-330\) Instruction Manual](#)

Keenstone WT-330

Keenstone 2-Slice Retro Stainless Steel Toaster

Model: WT-330

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

PRODUCT OVERVIEW

The Keenstone 2-Slice Retro Stainless Steel Toaster combines classic design with modern functionality, offering a reliable and stylish addition to your kitchen. It features extra-wide slots to accommodate various bread types and

multiple settings for customized toasting.

Key Features

- **Durable Construction:** Made with high-quality 18/8 stainless steel for durability and food safety.
- **Customizable Toasting:** 6 browning settings to achieve your preferred toast shade.
- **Versatile Functions:** Dedicated buttons for Bagel, Defrost, and Cancel.
- **Extra-Wide Slots:** 1.5-inch slots fit thicker bread slices, bagels, and pastries.
- **Easy Cleaning:** Removable crumb tray simplifies cleanup.

Components and Controls

Familiarize yourself with the main parts and controls of your toaster:



Overall view of the Keenstone 2-Slice Retro Toaster, showing its sleek black finish and two slots with bread inserted.

1.5" Extra Wide Slots

Perfect for Different Kinds of Slices



Detailed view of the toaster's control panel, highlighting the 'CANCEL', 'DEFROST', and 'BAGEL' buttons, along with the browning control dial (1-6).

Simple Designs Bring Convenient Life



Flat Lever Button



Removable Crumb Tray

Top-down view illustrating the 1.5-inch extra-wide slots, designed to accommodate various bread sizes including bagels and thicker slices.

SETUP

Before first use, please follow these steps:

1. Unpack the toaster and remove all packaging materials, including any protective films or stickers.
2. Place the toaster on a stable, flat, heat-resistant surface, away from curtains, walls, or any flammable materials.
3. Ensure the crumb tray is properly inserted at the bottom of the toaster.
4. For the first use, operate the toaster without bread on the highest setting (6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate.

OPERATING INSTRUCTIONS

Basic Toasting

1. Plug the toaster into a suitable electrical outlet.
2. Insert up to two slices of bread into the toasting slots.
3. Select your desired browning level using the shade control dial (1 for light, 6 for dark).
4. Press the toast lever down until it locks into place. The toaster will begin toasting.
5. Once toasting is complete, the toast will automatically pop up.

Special Functions


- **CANCEL:** Press the 'CANCEL' button at any time to stop the toasting cycle and eject the bread.
- **DEFROST:** Insert frozen bread, select your desired browning level, then press the 'DEFROST' button before lowering the toast lever. The toaster will automatically adjust the toasting time for frozen items.
- **BAGEL:** Insert a sliced bagel into the slots with the cut sides facing inwards. Select your desired browning level, then press the 'BAGEL' button before lowering the toast lever. This function toasts only the cut side of the bagel.



Image showing the toaster's multiple functions: Cancel (stop toasting), Defrost (toast frozen bread), and Bagel (bake only one side).

Delicious Toast to Everyone's Liking

6 Browning Settings for Delicious Bread

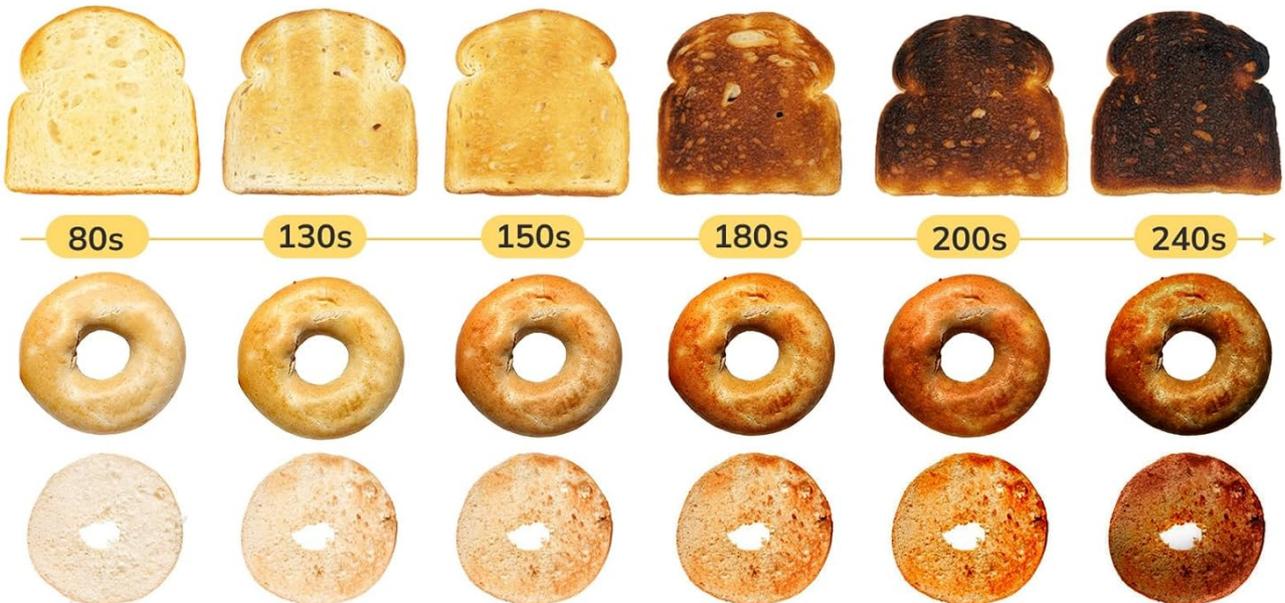

A visual guide demonstrating the 6 browning settings, from light (80s) to dark (240s), for both regular bread and bagels.

Official Product Video

Your browser does not support the video tag.

This video demonstrates the features and operation of the Keenstone black toaster, including inserting bread, selecting shade settings, and using the cancel function.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Remove Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Empty crumbs and wipe the tray clean with a damp cloth. Reinsert the tray securely.
3. **Clean Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can damage the finish.
4. **Clean Interior:** Never insert metal objects into the toasting slots to clean. If food is stuck, unplug the toaster

and carefully remove the food after it has cooled.

5. Do not immerse the toaster in water or any other liquid.



Illustration of how to remove the crumb tray for easy cleaning, showing accumulated crumbs.

TROUBLESHOOTING

If you encounter any issues with your toaster, refer to the following common problems and solutions:

- **Toaster does not turn on:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check your household circuit breaker or fuse box.

- **Toast does not pop up:**

- Ensure the toast lever is fully pressed down and locked into place at the start of the cycle.
- If the lever does not stay down, the toaster may not be receiving power.

- **Toast is too light or too dark:**

- Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
- Different types of bread may require different settings.

- **Smoke coming from toaster:**

- Unplug the toaster immediately.
- This may be due to food particles or crumbs accumulating in the toaster. Clean the crumb tray and check the slots for any lodged food.

If the problem persists, please contact Keenstone customer support.

SPECIFICATIONS

Brand	Keenstone
Model	WT-330
Color	Black
Material	Stainless Steel
Product Dimensions	7.1"D x 11.6"W x 7.5"H
Wattage	800 watts
Number of Slices	2
Number of Settings	6
Special Feature	Cancel Function
Style	Retro
Voltage	220 Volts
UPC	810142349383

WARRANTY AND SUPPORT

Keenstone products are manufactured to high-quality standards. For information regarding warranty coverage, product support, or service, please refer to the warranty card included with your purchase or visit the official Keenstone website. Please retain your proof of purchase for any warranty claims.

For further assistance, you may contact Keenstone customer service through their official channels.