

[Manuals.plus](#) /

› [GLOBO](#) /

› Globo Lighting Black Table Lamp Instruction Manual

GLOBO 58405S

GLOBO Lighting Black Table Lamp - Instruction Manual

Model: 58405S

1. INTRODUCTION

Thank you for purchasing the GLOBO 58405S Black Table Lamp. This manual provides essential information for the safe and efficient use of your new lighting product. Please read these instructions carefully before installation and operation, and retain them for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the lamp is placed on a stable, flat surface.
- Do not expose the lamp to water or excessive moisture.
- Do not attempt to disassemble or modify the lamp. There are no user-serviceable parts inside.
- Keep the lamp away from heat sources and direct sunlight.
- Disconnect the power supply before cleaning or performing any maintenance.
- The lamp contains a Li-metal CR2032 3V battery. Ensure proper disposal of batteries according to local regulations. Keep batteries out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- GLOBO 58405S Black Table Lamp (integrated LED)
- 1x Li-metal CR2032 3V battery (pre-installed or included separately)
- Instruction Manual (this document)

4. SETUP

4.1 Unpacking

Carefully remove all components from the packaging. Retain packaging materials for future transport or storage if needed.

4.2 Battery Installation (for Touchdimmer/Memory Function)

The lamp requires one CR2032 3V lithium metal battery, which may be pre-installed. If not, locate the battery compartment, typically on the underside of the base, and insert the battery with the correct polarity (+/-) as indicated.

4.3 Placement

Place the lamp on a flat, stable surface such as a desk or table. Ensure there is adequate space around the lamp for ventilation and to allow for adjustment of the lamp head.

4.4 Connecting to Power

Plug the lamp's power cord into a standard 230V electrical outlet.



Figure 1: The GLOBO 58405S Black Table Lamp. This image shows the lamp in an upright position with its adjustable arm and rectangular base, which features touch controls.

5. OPERATING INSTRUCTIONS

The GLOBO 58405S lamp features touch controls on its base for easy operation.

5.1 Power On/Off

Gently touch the power symbol () on the lamp base to turn the lamp on or off.

5.2 Dimming Function (Touchdimmer)

To adjust the brightness, touch and hold the dimming control area on the base. The light will gradually brighten or dim. Release your finger when the desired brightness level is reached.

5.3 Color Temperature Adjustment (CCT)

The lamp offers three color temperature settings: 3000K (Warm White), 4500K (Neutral White), and 6000K (Cool White). Touch the mode/color temperature control symbol (often represented by 'M' or a sun icon) to cycle through these settings.

5.4 Adjusting the Lamp Head

The lamp head and arm are adjustable. Gently pivot the lamp head and arm to direct the light as needed. Do not force the joints beyond their natural range of motion.

6. MAINTENANCE

6.1 Cleaning

Before cleaning, ensure the lamp is unplugged from the power outlet. Use a soft, dry cloth to wipe the lamp's surfaces. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.

6.2 LED Light Source

The lamp uses an integrated LED light source, which is designed for long-term use and is not user-replaceable. If the LED light source fails, the entire fixture should be replaced.

7. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

- **Lamp does not turn on:**

- Check if the power cord is securely plugged into the wall outlet.
- Ensure the wall outlet is functional by testing it with another appliance.
- Verify that the CR2032 battery is correctly installed and not depleted.

- **Dimming or color temperature adjustment not working:**

- Ensure your finger is making full contact with the touch control area.
- Replace the CR2032 battery if the touch functions are erratic.

- **Light flickers:**

- Check for loose connections.
- Ensure the lamp is not connected to a faulty dimmer switch (if applicable, though this lamp has its own

dimmer).

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	58405S
Product Dimensions (LxWxH)	48 x 11.5 x 56.5 cm
Item Weight	0.55 Kilograms
Lamp Type	Table Lamp
Light Source	Integrated LED (1xLED 5W 230V)
Luminous Flux (Source)	500 lm
Luminous Flux (Output)	400 lm
Color Temperature (CCT)	3000K - 4500K - 6000K (Adjustable)
Special Features	Dimmable, Color Fixing, Touchdimmer
Switch Type	Touch
Shade Material	Plastic
Shade Color	Black
Base Material	Metal
Finish Type	Polished
Batteries Required	Yes (1x Li-metal CR2032 3V, included)

9. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the warranty card included with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08DRQ61KW>

More documents and user manuals: <https://manuals.plus/>