

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Conair](#) /

› [Conair Unbound Cordless 3/4-inch Mini Multi-Styler CR300 User Manual](#)

Conair CR300

Conair Unbound Cordless 3/4-inch Mini Multi-Styler CR300 User Manual

Model: CR300

INTRODUCTION

This manual provides instructions for the safe and effective use of your Conair Unbound Cordless 3/4-inch Mini Multi-Styler. This rechargeable 2-in-1 device is designed for creating both straight and curly hairstyles without the need for a power cord during operation. Please read all instructions carefully before use.



Image: The Conair Unbound Cordless 3/4-inch Mini Multi-Styler, a compact blue and rose gold styling tool.

SAFETY INFORMATION

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- **Burn hazard:** Surfaces get extremely hot during use. Avoid contact with skin.
- **Electric shock risk:** Keep away from water. Do not use near bathtubs, sinks, or other water sources.
- **Fire risk:** Unplug when not in use. Do not leave unattended while plugged in.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Conair Unbound Cordless 3/4-inch Mini Multi-Styler
- USB Charging Cable
- Heat-Resistant Storage Pouch
- 2 Lithium-Ion Batteries (pre-installed or included separately)



Image: The retail packaging for the Conair Unbound Cordless 3/4-inch Mini Multi-Styler, showing the device and its accessories.

PRODUCT OVERVIEW

Familiarize yourself with the components of your multi-styler:

- **Ceramic Coated Plates:** For straightening hair.
- **Outer Barrel:** For curling and waving.
- **On/Off/Mode Selection Button:** Controls power and styling mode.
- **Curl Mode Indicator Light:** Illuminates when in curling mode.
- **Straight Mode Indicator Light:** Illuminates when in straightening mode.
- **Charging Indicator Light:** Shows charging status.
- **USB Charging Port:** For connecting the charging cable.



Image: A close-up view of the Conair Unbound Multi-Styler's side, highlighting the Curl Mode, Straight Mode, On/Off/Mode Selection button, and Charging Indicator lights.

SETUP

Initial Charging

Before first use, fully charge the device overnight. This ensures optimal battery performance and runtime.

Charging the Device

1. Connect the provided USB charging cable to the styler's charging port.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., wall adapter, computer USB port).
3. The Charging Indicator light will illuminate to show the device is charging.
4. Charge time will vary depending on the adapter and power source. A full charge provides up to 20 minutes of cord-free runtime.
5. When the battery is low, the LED light will blink.

UP TO 20 MINUTES OF
CORD-FREE RUNTIME*

Charge fully overnight before first use

**Depending on hair type*

Image: The Conair Unbound Multi-Styler with its USB charging cable connected to the charging port.

OPERATING INSTRUCTIONS


Turning On and Selecting Mode

1. Press and hold the On/Off/Mode Selection button for 2 seconds to turn on the device.
2. The styler will begin to heat up. Allow approximately 60 seconds for the device to reach operating temperature.
3. Press the On/Off/Mode Selection button again to toggle between styling modes:
 - **Straight Mode:** The Straight Mode indicator light will illuminate. The internal plates reach up to 400°F.
 - **Curl Mode:** The Curl Mode indicator light will illuminate. The outer barrel reaches up to 360°F.

Creating Straight Styles

1. Ensure the styler is in Straight Mode.
2. Take a small section of dry, detangled hair.
3. Place the hair section between the ceramic plates, close to the roots.

4. Gently glide the styler down the hair section from roots to ends.
5. Repeat as necessary until the desired straightness is achieved.

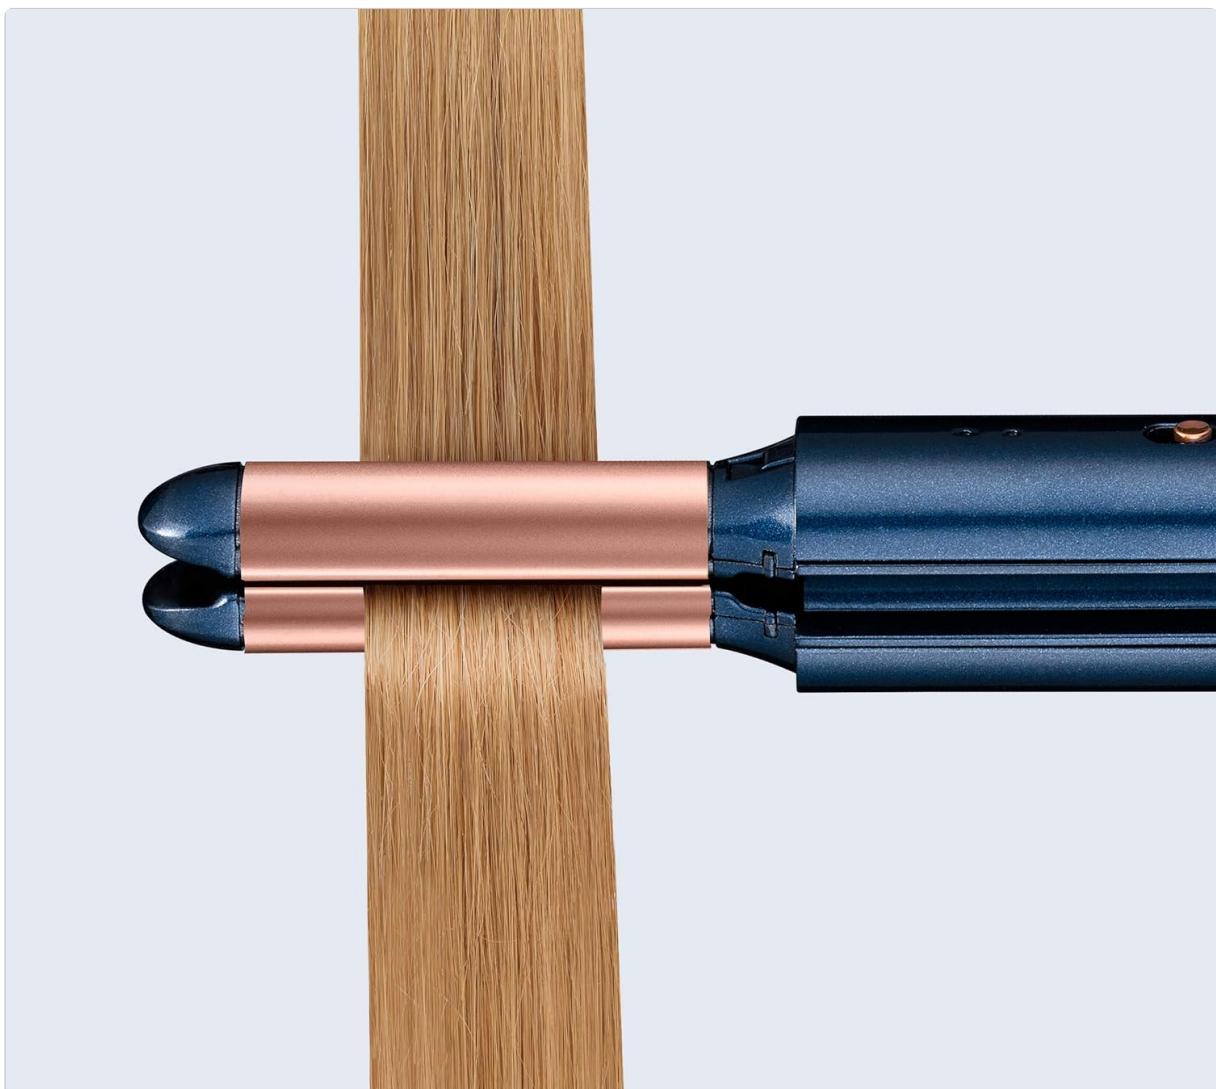

SMOOTH & SHINE: CLOSE PLATES, GLIDE THEM THROUGH HAIR AND RELEASE

Image: The Conair Unbound Multi-Styler being used to straighten a section of hair, with the ceramic plates closed around the hair.

Creating Curls or Waves

1. Ensure the styler is in Curl Mode.
2. Lock the ceramic plates closed.
3. Take a small section of dry, detangled hair.
4. Wrap the hair section around the heated outer barrel.
5. Hold for a few seconds, then release the hair.
6. Repeat as necessary to create curls or waves throughout your hair.



CURL OR WAVE: LOCK STYLER & WRAP HAIR AROUND BARREL

Image: The Conair Unbound Multi-Styler being used to curl a section of hair, with the hair wrapped around the closed outer barrel.

Automatic Shut-Off

The styler features an automatic shut-off function. It will turn off automatically after 15 minutes of inactivity to conserve battery life.

MAINTENANCE

Cleaning

Ensure the styler is turned off, unplugged (if charging), and completely cool before cleaning. Wipe the plates and barrel with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.

Storage

After use, allow the device to cool completely. Store it in the provided heat-resistant pouch in a dry, safe place, away from moisture and out of reach of children. The compact design allows for easy storage in a handbag or gym bag for travel.



Image: The Conair Unbound Multi-Styler placed inside a handbag, alongside other personal items, demonstrating its portability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the USB cable. Ensure the charging indicator light is on.
Device does not heat up sufficiently.	Not enough heat-up time; low battery.	Allow 60 seconds for heat-up. Ensure the device is fully charged. For thick hair, work in smaller sections.
Short battery runtime.	Incomplete initial charge; battery degradation over time.	Ensure the device is charged overnight before first use and fully charged for subsequent uses. Battery runtime may vary based on hair type and usage.

Problem	Possible Cause	Solution
Styler turns off unexpectedly.	Automatic shut-off activated; low battery.	The device has an auto-off feature after 15 minutes. Recharge the device if the battery is low.

SPECIFICATIONS

Feature	Detail
Model Number	CR300
Plate/Barrel Size	3/4-inch
Max. Straightening Temperature	400°F
Max. Curling Temperature	360°F
Battery Type	Lithium-Ion (2 included)
Cord-Free Runtime	Up to 20 minutes
Charging Interface	USB
Auto-Off Feature	Yes (after 15 minutes)
Dimensions	2 x 3.88 x 9.75 inches
Weight	6.38 ounces
Material	Ceramic
UPC	074108414649

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Conair website. Keep your proof of purchase for any warranty claims.