

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Keurig](#) /
- › [Keurig K-Mini Single Serve Coffee Maker Instruction Manual](#)

Keurig K-Mini

Keurig K-Mini Single Serve Coffee Maker Instruction Manual

Model: K-Mini

1. INTRODUCTION

Welcome to the Keurig K-Mini Single Serve Coffee Maker. This compact and efficient brewer is designed to deliver a fresh, delicious cup of coffee with minimal counter space. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new coffee maker.



The Keurig K-Mini Single Serve Coffee Maker, showcasing its sleek design and a freshly brewed cup.

2. SAFETY INFORMATION

Please read all safety instructions before using your Keurig K-Mini coffee maker.

- Always use fresh, cold water in the reservoir.
- Do not immerse the brewer in water or other liquids.
- Ensure the brewer is placed on a stable, flat surface.
- Keep out of reach of children.
- Unplug the brewer when not in use or before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Only use a plastic cup when brewing over ice to avoid glass breakage.

3. SETUP AND FIRST USE

Follow these steps for initial setup and your first brew.

3.1 Unboxing and Placement

1. Remove all packaging materials and tape from the brewer.
2. Place the brewer upright on a stable, level surface.
3. The K-Mini is less than 5 inches wide, making it suitable for various spaces.
4. The power cord is 26 inches long and features integrated cord storage at the back for a tidy countertop.

K·Mini™

SINGLE SERVE COFFEE MAKER



**TRAVEL MUG
FRIENDLY**
fits a 7.0" travel mug



The Keurig K-Mini's compact design and convenient cord storage.

3.2 Initial Cleansing Brew

Before brewing your first cup of coffee, perform a cleansing brew to rinse the internal components.

1. Plug the brewer into a grounded outlet.

2. Place a large mug (at least 10 oz) on the drip tray.
3. Lift the brewer handle.
4. Pour fresh water into the reservoir (6-12 oz). Do not insert a K-Cup pod.
5. Lower the handle.
6. Press the brew button. The brew button will flash, then illuminate steadily as the water heats. Once heated, the brew will begin.
7. Discard the hot water. The one-time setup process is now complete.

K·Mini™

SINGLE SERVE COFFEE MAKER



FAST & FRESH BREWED

- add water
- brew
- delicious coffee in minutes



The brew button on the Keurig K-Mini, used to start the brewing cycle.

Important: The cleansing brew is essential for proper machine function and to ensure optimal taste for your first coffee.

4. OPERATING INSTRUCTIONS

Brewing a perfect cup with your K-Mini is simple.

1. **Add Water:** Lift the reservoir lid and pour fresh water into the reservoir. The K-Mini features a single-cup reservoir,

so add water for each brew. You can brew any cup size between 6-12 oz.

2. **Insert Pod:** Lift the brewer handle and place a K-Cup pod into the K-Cup pod holder. Lower the handle completely to close the lid.
3. **Place Mug:** Place a mug on the drip tray. For travel mugs, remove the drip tray to accommodate mugs up to 7.0 inches tall.
4. **Brew:** Press the brew button. The button will flash while heating and then illuminate steadily. Your coffee will begin brewing shortly.
5. **Enjoy:** Once brewing is complete, remove and enjoy your fresh coffee.

K•Mini™

SINGLE SERVE COFFEE MAKER



ONE CUP RESERVOIR

add fresh water
for each brew



The removable drip tray allows for brewing into travel mugs.

K·Mini™

SINGLE SERVE COFFEE MAKER



The Keurig K-Mini brewing a fresh cup of coffee.

Video: Keurig K-Mini Coffee Maker Overview

Your browser does not support the video tag.

This video provides a visual guide to the features and basic operation of the Keurig K-Mini Coffee Maker.

5. MAINTENANCE

Regular cleaning and maintenance will ensure your Keurig K-Mini continues to perform optimally.

5.1 Cleaning the Exterior

- Wipe the exterior with a damp, soapy cloth.
- Dry thoroughly with a soft, non-abrasive cloth.
- Do not use abrasive cleaners or scouring pads.

5.2 Cleaning the Drip Tray

- The drip tray can accumulate spills. Remove it and wash with warm, soapy water.
- Rinse thoroughly and dry.

5.3 Descaling

Over time, calcium deposits (scale) can build up in your brewer. Descaling helps remove these deposits.

1. Turn off and unplug the brewer.
2. Pour 10 oz of white vinegar into the water reservoir.
3. Place a large mug on the drip tray.
4. Plug in and turn on the brewer.
5. Perform a cleansing brew (without a K-Cup pod).
6. Repeat the cleansing brew process with fresh water until the vinegar smell is gone.
7. For detailed descaling instructions, refer to the full Keurig descaling guide on the official Keurig website.

6. TROUBLESHOOTING

If you encounter issues with your Keurig K-Mini, try these common solutions.

Problem	Possible Cause	Solution
Brewer not turning on	Not plugged in, power outage.	Ensure the brewer is securely plugged into a grounded outlet. Check circuit breaker.
No water dispensing / Weak brew	Water reservoir empty, air in system, clogged needle.	Ensure sufficient water in the reservoir. Perform a cleansing brew to prime the pump. Clean the K-Cup pod holder needle (refer to Keurig support for instructions).
Coffee grounds in cup	K-Cup pod punctured incorrectly, reusable filter overfilled.	Ensure K-Cup pod is properly seated. If using a reusable filter, do not overfill and ensure it's correctly assembled.
Brew button flashing continuously	Water heating, or an error.	If water was just added, wait for it to heat (approx. 2 minutes). If it continues to flash, try unplugging the brewer for 30 seconds and plugging it back in.

7. SPECIFICATIONS

Feature	Detail
Brand	Keurig
Model	K-Mini
Capacity	6-12 ounces (single cup reservoir)
Color	Black/Yellow
Product Dimensions (D x W x H)	11.3"D x 4.5"W x 12.1"H

Feature	Detail
Special Feature	Portable, Cord Storage, Removable Drip Tray
Coffee Maker Type	Drip Coffee Machine, Single-Serve Brewer
Operation Mode	Fully Automatic
Coffee Input Type	K-Cup Pods
Filter Type	Reusable (if using a universal reusable K-Cup filter, not included)

K·Mini™

SINGLE SERVE COFFEE MAKER



PRODUCT DIMENSIONS

12.1" High
(16.8" High when open)

4.5" Wide

11.3" Deep

Weighs 4.6lbs



Product dimensions: 12.1" High (16.8" High when open), 4.5" Wide, 11.3" Deep, Weighs 4.6lbs.

8. WARRANTY AND SUPPORT

For warranty information, product registration, and additional support, please visit the official Keurig website or contact Keurig customer service. Keep your purchase receipt as proof of purchase.

[Visit Keurig Official Website](#)