

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TAURUS](#) /

› [Taurus Rapidissimo Clean Pro Steam Cleaner User Manual](#)

TAURUS Rapidissimo Clean Pro

Taurus Rapidissimo Clean Pro Steam Cleaner User Manual

Model: Rapidissimo Clean Pro

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Taurus Rapidissimo Clean Pro steam cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged from the power outlet before filling with water, cleaning, or performing maintenance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the steam cleaner out of reach of children and pets.
- Exercise extreme caution when using steam. Steam is hot and can cause burns. Keep hands, face, and other body parts away from the steam nozzle.
- Do not open the water tank cap while the appliance is pressurized or hot. Allow it to cool down completely before refilling.
- Use only tap water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the appliance and void the warranty.
- Do not direct steam at electrical appliances, power outlets, or other electrical components.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2. PRODUCT OVERVIEW AND COMPONENTS

The Taurus Rapidissimo Clean Pro is a powerful handheld steam cleaner designed for effective, chemical-free cleaning. It operates at 1050W and generates 3 bar pressure for thorough sanitization.



Image: The Taurus Rapidissimo Clean Pro steam cleaner shown with its full set of accessories, including various nozzles, brushes, and cloths.

Included Accessories:

- Extendable Hose
- Glass Accessory (Window Squeegee)
- Conical Nozzle
- Angled Nozzle
- Round Brush
- Mop Pad / Cloth
- Measuring Cup
- Funnel
- Upholstery Cloth
- Steam Head Attachment
- Scraper
- Crevice Nozzle

9

ACCESSORIES



Image: A detailed view of the nine distinct accessories provided with the steam cleaner, designed for various cleaning tasks.

3. SETUP

1. **Unpack the Appliance:** Carefully remove the steam cleaner and all accessories from the packaging.
2. **Fill the Water Tank:** Unscrew the safety cap of the water tank. Using the provided measuring cup and funnel, fill the tank with up to 350 ml of clean tap water. Do not overfill. Screw the safety cap back on tightly.
3. **Attach Desired Accessory:** Select the appropriate nozzle or brush for your cleaning task and securely attach it to the steam cleaner. For extended reach, connect the extendable hose first, then the desired accessory.
4. **Connect to Power:** Plug the power cord into a suitable grounded electrical outlet. The indicator light will illuminate, signaling that the unit is heating up.
5. **Heating Time:** The steam cleaner will be ready for use in approximately 3 minutes. The indicator light will change or turn off when the optimal pressure is reached.

4. OPERATING INSTRUCTIONS

Once the steam cleaner is heated and ready, you can begin cleaning. The unit provides 3 bar pressure and a steam flow of 30 g/min for effective cleaning.

1. **Initiate Steam:** Press and hold the steam trigger to release steam. For continuous steam, some models may have a lock button on the trigger.
2. **Cleaning Surfaces:** Direct the steam nozzle towards the surface you wish to clean. Move the nozzle slowly over the area to allow the steam to penetrate and loosen dirt.
3. **Using Accessories:**
 - *Round Brush:* Ideal for scrubbing stubborn dirt on tiles, grout, and oven racks.
 - *Conical/Angled Nozzle:* Perfect for reaching tight corners, crevices, and detailed cleaning.
 - *Glass Accessory:* Use for streak-free cleaning of windows, mirrors, and other glass surfaces.
 - *Mop Pad/Upholstery Cloth:* Attach to the steam head for cleaning larger flat surfaces like floors, countertops, upholstery, and car seats.
4. **Wipe Clean:** After steaming, wipe the treated surface with a clean, dry cloth to remove loosened dirt and moisture.
5. **Refilling:** If the steam output decreases significantly or stops, the water tank may be empty. Unplug the appliance and allow it to cool down for several minutes before carefully unscrewing the safety cap and refilling.



Image: A collage demonstrating the versatility of the steam cleaner, showing it cleaning oven racks, upholstery, and wall tiles.



Image: The steam cleaner being used on a sofa, illustrating its effectiveness against bacteria and viruses through steam.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

1. **Cleaning the Exterior:** After each use, ensure the appliance is unplugged and cooled. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
2. **Emptying the Water Tank:** After each use, unplug the appliance and allow it to cool completely. Carefully unscrew the safety cap and empty any remaining water from the tank. This helps prevent mineral buildup.
3. **Cleaning Accessories:** Wash removable accessories (brushes, cloths) with warm, soapy water and rinse thoroughly. Allow them to air dry completely before storing.
4. **Descaling:** Depending on your water hardness, mineral deposits may build up inside the tank over time. If you notice reduced steam output, descaling may be necessary. Consult the manufacturer's full manual for specific descaling instructions, typically involving a diluted vinegar solution.
5. **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach of children.

6. TROUBLESHOOTING

If you encounter issues with your steam cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or very little steam	Water tank is empty Appliance not heated sufficiently Mineral buildup (scale)	Refill water tank (after cooling) Wait for 3 minutes until indicator light signals readiness Perform descaling procedure (refer to full manual)
Water leaking from nozzle	Accessory not securely attached Overfilling the water tank Appliance not fully heated	Ensure accessory is firmly clicked into place Do not exceed the MAX fill line Wait for the appliance to reach full operating temperature
Indicator light not on	Appliance not plugged in Power outlet issue Appliance malfunction	Check power connection Test outlet with another appliance Contact customer support

If the problem persists after attempting these solutions, please contact Taurus customer support.

7. SPECIFICATIONS

- **Model Name:** Rapidissimo Clean Pro
- **Brand:** TAURUS
- **Wattage:** 1050 W
- **Steam Pressure:** 3 bar
- **Steam Flow:** 30 g/min
- **Water Tank Capacity:** 350 ml
- **Heating Time:** Approximately 3 minutes
- **Item Weight:** 1.6 Kilograms
- **Form Factor:** Handheld
- **Cable Length:** 3 meters (extra long)
- **Color:** Blue
- **Special Features:** Quick heating, improved performance, high steam flow

3,5 bar
PRESSURE



Image: A close-up of the steam cleaner's nozzle releasing powerful steam, highlighting its 3.5 bar pressure capability.

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Taurus website. Keep your proof of purchase for any warranty claims.

If you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Taurus customer support through their official channels. Contact information can typically be found on the product packaging or the manufacturer's website.