



Manuals.plus /

› Elechomes /

› Elechomes 1.7L Electric Glass Kettle User Manual (Model B08DV3X7C2)

Elechomes B08DV3X7C2

Elechomes 1.7L Electric Glass Kettle User Manual

Model: B08DV3X7C2

Brand: Elechomes

1. INTRODUCTION

Thank you for choosing the Elechomes 1.7L Electric Glass Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation. Scalding may occur if the lid is open during use.
- This appliance is for household use only.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Elechomes Electric Glass Kettle:



Image: Detailed view of the Elechomes Electric Kettle highlighting its key components such as the large angle lid opening, simple open button, safe handle, water level markings, detachable base, and hidden cord storage.

- **Glass Body:** Made from borosilicate glass for durability and heat resistance.
- **Lid:** Features a large angle opening for easy filling and cleaning.
- **Handle:** Ergonomically designed for a safe and comfortable grip.

- **Water Level Indicator:** Clear markings for minimum (0.5L) and maximum (1.7L) fill levels.
- **Spout with Filter:** Integrated mesh filter to prevent scale from pouring into your cup.
- **Power Base:** Detachable 360° rotational base with cord storage.
- **On/Off Switch:** Located on the handle for easy operation, with auto shut-off functionality.
- **LED Indicator Light:** Illuminates when the kettle is actively heating water.

4. SPECIFICATIONS

Feature	Specification
Brand	Elechomes
Model Name	B08DV3X7C2
Capacity	1.7 Liters
Material	Borosilicate Glass, Stainless Steel
Special Feature	Rapid Boil, Auto Shut-Off, Boil Dry Protection
Product Dimensions	9.21"L x 7.63"W x 10.7"H
Item Weight	2.9 pounds
Product Care Instructions	Hand wash, Wipe clean

5. SETUP

Before first use, please follow these steps:

1. Unpack the kettle and all accessories. Remove any packaging materials.
2. Place the power base on a dry, flat, and stable surface.
3. Fill the kettle with water to the MAX (1.7L) line.
4. Boil the water (see Operating Instructions).
5. Discard the boiled water. Repeat this process 2-3 times to remove any manufacturing residues.
6. Your kettle is now ready for use.

6. OPERATING INSTRUCTIONS

Using your Elechomes Electric Glass Kettle is simple:

1. **Fill the Kettle:** Press the button on the handle to open the lid. Fill the kettle with fresh, cold water. Ensure the water level is between the MIN (0.5L) and MAX (1.7L) markings. Do not overfill or underfill.
2. **Place on Base:** Close the lid securely. Place the kettle onto the power base. The kettle can be placed at any 360° angle.
3. **Power On:** Plug the power base into a standard electrical outlet. Press the On/Off switch located on the

handle downwards. The blue LED indicator light will illuminate, indicating that the kettle is heating the water.

4. **Boiling Process:** The water will begin to heat rapidly. Once the water reaches a rolling boil, the kettle will automatically shut off, and the LED light will turn off.
5. **Pour Water:** Carefully lift the kettle from its base and pour the hot water. The handle remains cool to the touch.
6. **Re-boil:** If you need to re-boil water, wait 15-20 seconds before pressing the On/Off switch again.



Image: The Elechomes Electric Kettle in operation, with water boiling and the blue LED light activated, indicating the heating process.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your kettle.

1. **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:
 - Fill the kettle with 1 part white vinegar and 2 parts water.
 - Boil the mixture.
 - Let it soak for 20-30 minutes, then discard the solution.
 - Rinse the interior thoroughly with fresh water several times.
 - For stubborn deposits, you can repeat the process or use a specialized descaling solution.
4. **Filter Cleaning:** The mesh filter in the spout can be removed for cleaning. Rinse it under running water and gently brush away any deposits. Reattach it securely after cleaning.
5. **Storage:** When not in use, store the kettle in a clean, dry place. You can wrap the power cord around the base for neat storage.

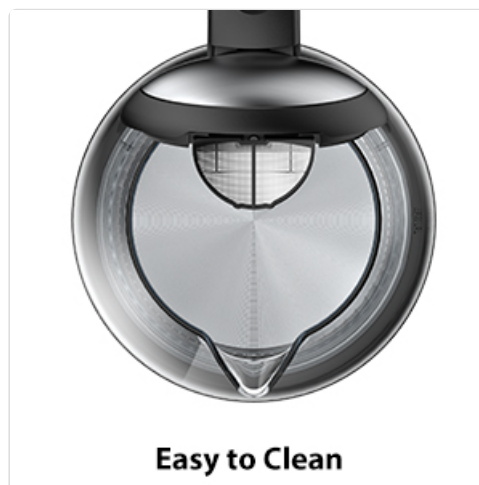


Image: The interior of the Elechomes Electric Kettle, highlighting the wide opening and smooth stainless steel bottom for easy cleaning and descaling.

8. TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

- **Kettle does not turn on:**
 - Ensure the power base is securely plugged into a working outlet.
 - Check that the kettle is correctly placed on the power base.
 - Verify the On/Off switch is pressed down.
 - Ensure the water level is above the MIN mark.

- **Kettle turns off before boiling:**

- This may indicate a boil-dry protection activation. Ensure there is sufficient water in the kettle.
- Allow the kettle to cool down for a few minutes before attempting to boil again.

- **Water has a strange taste or odor:**

- Perform the initial cleaning steps (boiling and discarding water 2-3 times).
- Descale the kettle if mineral deposits are present.

- **Excessive steam or leaking from the lid:**

- Ensure the lid is securely closed before boiling.
- Do not overfill the kettle beyond the MAX line.

If the problem persists, please contact Elechomes customer support.

9. WARRANTY AND SUPPORT

Elechomes provides a warranty for this product. For detailed warranty information, product registration, or technical support, please visit the official Elechomes website or contact their customer service directly. Please have your model number (B08DV3X7C2) and proof of purchase ready when contacting support.

Visit the Elechomes Store: [Elechomes Official Store](#)
