

Midea MYSS6062

Midea Multi Pressure Cooker MYSS6062 User Manual

Model: MYSS6062

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions thoroughly before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the pressure cooker. Make sure pressure has been completely released before opening.
- Do not fill the unit over 2/3 full. When cooking foods that expand during cooking, such as rice or dried vegetables, do not fill the unit over 1/2 full.
- Always check the pressure release valve and float valve for clogging before use.

2. PRODUCT OVERVIEW

The Midea Multi Pressure Cooker MYSS6062 is a versatile kitchen appliance designed for efficient and convenient cooking. With a 6-liter capacity and 1000W power, it offers 14 preset menus to simplify various cooking tasks.

- Capacity: 6 Liters
- Power: 1000W
- Large LED screen display
- 14 Preset Menu options



Figure 2.1: Front view of the Midea Multi Pressure Cooker MYSS6062.



Figure 2.2: Side view of the Midea Multi Pressure Cooker MYSS6062.

3. COMPONENTS

The Midea Multi Pressure Cooker MYSS6062 comes with the following main components and accessories:

- Main Unit (Cooker Base)
- Removable Inner Pot (6 Liter capacity)
- Lid with Sealing Ring and Valves
- Measuring Cup
- Rice Spoon
- Steaming Rack



Figure 3.1: Midea Multi Pressure Cooker and its accessories.

4. SETUP

4.1 Unpacking and Initial Cleaning

1. Carefully remove all packaging materials and accessories from the box.
2. Wash the inner pot, lid, and sealing ring with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

4.2 Placement

Place the pressure cooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate space around the unit for proper ventilation.

4.3 Installing the Inner Pot and Lid

1. Place the clean, dry inner pot into the main unit. Ensure it sits correctly and is flush with the heating element.
2. Check that the sealing ring is properly seated inside the lid.
3. Align the lid with the main unit. For the MYSS6062, the lid typically twists and locks into place. Ensure the lid handle

aligns with the locking indicator on the cooker body.



Figure 4.1: Underside of the lid with sealing ring and valves.



Figure 4.2: Demonstrating lid operation.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The control panel features a large LED display and various buttons for selecting cooking programs and adjusting settings.



Figure 5.1: Control Panel Layout.

- **Preset:** Adjusts delay start time.
- **Timer:** Sets cooking time.
- **Hold-up time:** Displays time elapsed after cooking.
- **Texture (Strong/Standard/Light):** Adjusts cooking intensity.
- **Menu:** Cycles through preset cooking programs.
- **Start:** Begins the selected cooking program.
- **Keep Warm/Cancel:** Maintains food temperature or stops current operation.

5.2 Basic Cooking Steps

1. Add ingredients and liquid to the inner pot. Do not exceed the MAX fill line.
2. Place the lid on the cooker and twist it clockwise until it locks securely. Ensure the pressure release valve is in the sealing position (if applicable).
3. Plug the power cord into a grounded electrical outlet. The display will light up.
4. Press the 'Menu' button repeatedly to select your desired cooking program (e.g., Rice, Meat, Soup). The corresponding indicator will light up.
5. Adjust cooking time or texture using the '+' / '-' buttons or 'Texture' button if needed.
6. Press the 'Start' button to begin cooking. The cooker will preheat, then build pressure, and the cooking countdown will begin.
7. Once cooking is complete, the cooker will beep and automatically switch to 'Keep Warm' mode.

5.3 Pressure Release

After cooking, pressure must be released before opening the lid. There are two methods:

- **Natural Release:** Allow the cooker to cool down naturally. The pressure will dissipate gradually, and the float valve will drop. This method is ideal for foods that benefit from continued cooking or for foamy foods.
- **Quick Release:** Carefully turn the pressure release valve to the 'Venting' position. Steam will rapidly escape. Keep hands and face away from the steam. Once the float valve drops, it is safe to open the lid. This method is suitable

for delicate foods that can overcook quickly.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your pressure cooker.

1. **Always unplug the cooker and allow it to cool completely before cleaning.**
2. **Inner Pot:** The removable inner pot is dishwasher safe or can be washed by hand with warm, soapy water. Use a non-abrasive sponge to prevent scratching.
3. **Lid:** Wash the lid, including the sealing ring, float valve, and pressure release valve, with warm, soapy water. Ensure all food particles are removed from the valves. The sealing ring can be removed for thorough cleaning and should be reinstalled correctly before next use.
4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Never immerse the main unit in water or any other liquid.
5. **Accessories:** Wash the measuring cup, rice spoon, and steaming rack with warm, soapy water.
6. **Storage:** Ensure all parts are completely dry before storing. Store the cooker in a dry place. You may place the lid upside down on the inner pot to prevent odors.

7. TROUBLESHOOTING

If you encounter issues with your Midea Multi Pressure Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker not building pressure	Lid not properly closed; Sealing ring not installed correctly or damaged; Pressure release valve in 'Venting' position; Insufficient liquid.	Ensure lid is fully locked; Check and adjust sealing ring; Turn pressure release valve to 'Sealing'; Add more liquid as per recipe.
Lid cannot be opened after cooking	Pressure still inside the cooker; Float valve has not dropped.	Ensure all pressure is released (natural or quick release) until the float valve drops completely. Do not force the lid open.
Food is undercooked	Insufficient cooking time; Not enough liquid; Incorrect program selected.	Increase cooking time; Ensure adequate liquid; Select appropriate program for the food type.
Error code displayed	Specific internal issue or sensor malfunction.	Refer to the full manual for specific error codes or contact customer support. Try unplugging and re-plugging the unit.

If the problem persists after attempting these solutions, please contact Midea customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Midea
Model Number	MYSS6062
Capacity	6 Liters
Power / Wattage	1000 watts
Color	White
Material	Metal
Product Dimensions	29 x 31.5 x 31.5 cm
Item Weight	5 Kilograms
Special Features	Locking Lid
Control Method	Touch

9. WARRANTY AND SUPPORT

This Midea Multi Pressure Cooker MYSS6062 comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration.

For technical support, service, or inquiries regarding your product, please contact Midea customer service through their official channels. You can often find contact information on the Midea website or within your product packaging.

Visit the official Midea store for more information:[Midea Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question