

## PHILIPS S3122/51

# PHILIPS Shaver 3000 AquaTouch Electric Shaver User Manual

Model: S3122/51

Brand: PHILIPS

## 1. IMPORTANT SAFETY INFORMATION

Read this user manual carefully before using the appliance and save it for future reference. Always follow the basic safety precautions listed below.

- This appliance is waterproof. It is suitable for use in a bath or shower and for cleaning under running water. For safety reasons, the shaver can only be operated cordlessly.
- Do not use the appliance if it is damaged.
- Keep the charging adapter dry. Do not handle the adapter with wet hands.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Only use the original charging adapter provided with the appliance.

## 2. PRODUCT OVERVIEW

The PHILIPS Shaver 3000 AquaTouch is designed for a comfortable wet or dry shave. Familiarize yourself with the main components of your shaver.



The PHILIPS Shaver 3000 AquaTouch, model S3122/51, features a black and grey ergonomic design with a power button and three rotary shaving heads.



This image shows the three rotary shaving heads of the PHILIPS Shaver 3000 AquaTouch, covered by a clear protective cap, highlighting the ComfortCut blade system.

### Key Features:

- **5D Pivot & Flex Heads:** Designed to follow the contours of your face for a close and comfortable

shave.

- **ComfortCut Blades:** Engineered to glide smoothly over the skin, preventing nicks and cuts.
- **Aquatec Wet & Dry:** Allows for a refreshing wet shave with foam or gel, or a convenient dry shave.
- **One-touch Open:** Facilitates easy cleaning of the shaving head.
- **1-level Battery Indicator:** Provides clear information on the remaining battery charge.

### 3. SETUP

---

#### Initial Charging:

1. Ensure the shaver is switched off.
2. Insert the small plug of the charging adapter into the bottom of the shaver.
3. Plug the adapter into a wall outlet.
4. The battery indicator will show charging status. A full charge takes approximately 1 hour and provides up to 60 minutes of shaving time.
5. Unplug the shaver once fully charged. The shaver cannot be operated while charging.

### 4. OPERATING THE SHAVER

---

#### Dry Shaving:

- Ensure your face is clean and dry.
- Press the on/off button to switch on the shaver.
- Move the shaving heads in small, circular motions over your skin.
- Apply gentle pressure to ensure optimal contact with the skin.

#### Wet Shaving:

- Wet your face with water.
- Apply shaving foam or gel to your skin.
- Press the on/off button to switch on the shaver.
- Move the shaving heads in small, circular motions over your skin.
- Rinse the shaving heads under running water during shaving to prevent clogging.
- After shaving, rinse your face and the shaver thoroughly.

#### Using the Pop-up Trimmer (if applicable):

Some models may include a pop-up trimmer for sideburns or mustache. To activate, slide the trimmer release button upwards. Use the trimmer to shape and trim longer hairs before shaving or for detailing.

### 5. MAINTENANCE

---

#### Cleaning the Shaver:

Regular cleaning ensures optimal shaving performance and hygiene.

1. Switch off the shaver.
2. Press the 'one-touch open' button on the shaving unit to open the shaving heads.
3. Rinse the shaving unit thoroughly under warm running water.
4. Shake off excess water and allow the shaving unit to air dry.

5. Close the shaving unit.
6. For a more thorough cleaning, you can detach the shaving heads and clean them individually using the provided cleaning brush.

### Replacing Shaving Heads:

For best performance, replace the shaving heads every 12 months. Replacement heads are available from PHILIPS retailers or online.

1. Switch off the shaver and unplug it.
2. Open the shaving unit by pressing the release button.
3. Remove the retaining ring by turning it counter-clockwise.
4. Remove the old shaving heads.
5. Insert the new shaving heads into the shaving unit.
6. Place the retaining ring back and turn it clockwise until it locks.
7. Close the shaving unit.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is empty.	Charge the shaver for at least 1 hour.
Poor shaving performance.	Shaving heads are dirty or worn out.	Clean the shaving heads thoroughly. Replace shaving heads if they are older than 12 months.
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure you are using small, circular motions with gentle pressure. Consider wet shaving with foam/gel. Allow skin to adapt to the new shaver.
Shaver stops during use.	Battery is low.	Recharge the shaver.

## 7. SPECIFICATIONS

<b>Model Number</b>	S3122/51
<b>Brand</b>	PHILIPS
<b>Shaving System</b>	ComfortCut Blade System, 5D Pivot & Flex Heads
<b>Usage</b>	Wet and Dry Shaving
<b>Power Source</b>	Battery Powered
<b>Battery Type</b>	Rechargeable (Li-ion)
<b>Charging Time</b>	Approx. 1 hour
<b>Shaving Time</b>	Up to 60 minutes

<b>Included Components</b>	Shaver, Charging Adapter, Protective Cap, Cleaning Brush
<b>Color</b>	Black
<b>Blade Material</b>	Stainless Steel
<b>Product Dimensions</b>	26 x 10 x 21 cm (packaging dimensions)
<b>Item Weight</b>	2.7 Kilograms

## 8. WARRANTY AND SUPPORT

---

This PHILIPS Shaver 3000 AquaTouch is covered by a manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, product registration, or to find replacement parts and accessories, please visit the official PHILIPS website or contact PHILIPS customer service in your region. Contact information can typically be found in the warranty documentation or on the PHILIPS website.