

Manuals.plus /

› Smad /

› Smad Air Fryer Toaster Oven Instruction Manual - Model DTD180-25MGU

Smad DTD180-25MGU

Smad Air Fryer Toaster Oven Instruction Manual

Model: DTD180-25MGU

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

2. PRODUCT OVERVIEW

The Smad Air Fryer Toaster Oven is a versatile countertop appliance designed for various cooking tasks including air frying, baking, toasting, broiling, and warming. It features a compact design with a stainless steel finish.

2.1 Components



Image: Front view of the Smad Air Fryer Toaster Oven, showing the oven cavity with an air fry basket containing fries, and the control panel on the right.

- **Oven Cavity:** The main cooking area.
- **Glass Door:** Allows viewing of food during cooking. Features a cool-touch handle.
- **Control Panel:** Located on the right side, with three rotary knobs for temperature, function, and timer.
- **Heating Elements:** Upper and lower heating elements for even cooking.
- **Ventilation Slots:** For efficient heat dissipation.

2.2 Control Panel



Image: Detailed view of the three control knobs on the Smad Air Fryer Toaster Oven, showing temperature, function, and timer settings, alongside examples of food that can be cooked.

- **Temperature Knob (Top):** Adjusts cooking temperature from Low to 450°F. Includes specific markings for Air Fry (400°F).
- **Function Knob (Middle):** Selects cooking mode: Air Fry, Bake, Toast, Broil, Warm.
- **Timer Knob (Bottom):** Sets cooking time up to 60 minutes or 'Stay On' for continuous operation.
- **Power Indicator Light:** Illuminates when the oven is operating.

2.3 Accessories




Food Tray



Crumb Tray



Air Fry Basket

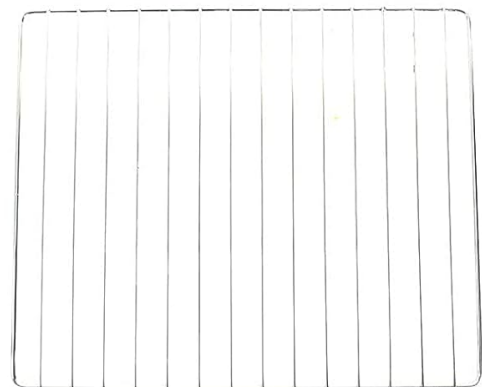

Wire Rack

Image: A display of the four main accessories included with the Smad Air Fryer Toaster Oven: a flat food tray, a crumb tray, a mesh air fry basket, and a wire rack.

- **Food Tray:** For baking, roasting, or catching drips.
- **Crumb Tray:** Collects crumbs and food particles for easy cleaning. Located at the bottom of the oven.
- **Air Fry Basket:** Used for air frying, allows hot air to circulate around food.
- **Wire Rack:** For toasting, baking, or broiling.

3. SETUP

3.1 Unpacking

- Carefully remove the oven and all accessories from the packaging.
- Remove any packing materials, stickers, or labels from the oven and accessories.
- Wash all accessories (food tray, crumb tray, air fry basket, wire rack) in warm, soapy water. Rinse and dry thoroughly.
- Wipe the interior and exterior of the oven with a damp cloth.

3.2 Placement

- Place the oven on a stable, level, heat-resistant surface.

- Ensure there is at least 4 inches (10 cm) of clearance on all sides of the oven for proper ventilation.
- Do not place the oven near flammable materials such as curtains or walls.
- Plug the power cord into a grounded electrical outlet.

3.3 First Use (Burn-in)

Before cooking food, it is recommended to run the oven for 15 minutes to burn off any manufacturing residues and odors.

1. Set the Function knob to 'Bake'.
2. Set the Temperature knob to 450°F.
3. Set the Timer knob to 15 minutes.
4. A slight odor or smoke may be present during this initial operation; this is normal. Ensure the area is well-ventilated.
5. After 15 minutes, turn the Timer knob to 'Off' and allow the oven to cool completely.

4. OPERATING INSTRUCTIONS

This section provides general guidance for using your Smad Air Fryer Toaster Oven. Specific cooking times and temperatures may vary based on food type and desired results.

Your browser does not support the video tag.

Video: A demonstration of the Smad Air Fryer Toaster Oven in use, showing how to place food, set the temperature and timer, and remove cooked items. This video illustrates the basic operation of the appliance for heating food.

4.1 General Operation

1. Place the desired food item on the appropriate accessory (wire rack, food tray, or air fry basket).
2. Insert the accessory into the oven cavity at the recommended rack position.
3. Close the oven door.
4. Turn the **Function Knob** to select the desired cooking mode (e.g., 'Bake', 'Air Fry').
5. Turn the **Temperature Knob** to set the desired cooking temperature.
6. Turn the **Timer Knob** to set the cooking time. The power indicator light will illuminate.
7. When the cooking time expires, the oven will automatically turn off and a bell will sound. If using 'Stay On' mode, manually turn the Timer knob to 'Off'.
8. Carefully remove the cooked food using oven mitts.

4.2 Cooking Functions



Image: The Smad Air Fryer Toaster Oven with its door open, revealing a roasted chicken and vegetables on a tray inside, demonstrating its capacity for larger items.

- **Air Fry:** Ideal for crispy foods like fries, chicken wings, and vegetables. Use the air fry basket. Set Function to 'Air Fry' and Temperature to 400°F (or as recipe dictates).
- **Bake:** For cakes, cookies, casseroles, and roasting meats. Use the food tray or a baking dish on the wire rack. Set Function to 'Bake' and adjust temperature as needed.
- **Toast:** For bread, bagels, and frozen waffles. Use the wire rack. Set Function to 'Toast' and adjust the timer for desired browning.
- **Broil:** For browning the top of dishes, melting cheese, or cooking thin cuts of meat. Use the wire rack with the food tray underneath to catch drips. Set Function to 'Broil'.
- **Warm:** To keep cooked food warm without further cooking. Set Function to 'Warm' and use a low temperature setting.

5. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your appliance.

5.1 Before Cleaning

- Always unplug the oven from the electrical outlet and allow it to cool completely before cleaning.

5.2 Cleaning the Interior

- Wipe the interior walls, bottom, and glass door with a damp cloth and mild liquid soap.
- For stubborn stains, use a non-abrasive cleaner or a paste of baking soda and water.
- Do not use abrasive cleaners or metal scouring pads, as they can damage the nonstick interior.
- Ensure the interior is completely dry before next use.

5.3 Cleaning the Exterior

- Wipe the exterior surfaces with a damp cloth and mild soap.
- Do not use abrasive cleaners or polishes that may scratch the stainless steel finish.

5.4 Cleaning Accessories

- The food tray, crumb tray, air fry basket, and wire rack can be washed in warm, soapy water.
- For baked-on food, soak the accessories in hot, soapy water before scrubbing.
- Rinse thoroughly and dry completely before storing or reusing.

6. TROUBLESHOOTING

If you encounter issues with your Smad Air Fryer Toaster Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; timer not set.	Ensure the oven is securely plugged into a working outlet. Check the circuit breaker. Turn the Timer knob past 10 minutes to activate.
Food is not cooking evenly.	Incorrect rack position; overcrowding food; temperature too low/high.	Adjust rack position. Do not overcrowd the oven; cook in batches if necessary. Verify temperature setting. Rotate food halfway through cooking.
Excessive smoke during cooking.	Food residue in oven; fatty foods; crumb tray not clean.	Clean the oven interior and crumb tray thoroughly. Use the food tray under the wire rack for fatty foods to catch drips.
Timer does not advance or bell does not sound.	Timer mechanism issue.	Ensure the timer knob is turned past the 10-minute mark to engage the mechanism. If the issue persists, contact customer support.

7. SPECIFICATIONS

- 1800 watts of high-performance power
- 0.9 cu.ft. for 12" pizza or 6 slices of toast
- Stainless steel front with cool-touch handle
- Easy-clean nonstick interior
- Toast, Bagel, Bake, Broil, Pizza and Keep Warm
- Come with full accessories, air fry basket, wire rack, food tray and crumb tray



Image: The Smad Air Fryer Toaster Oven with its external dimensions (18.2 in width, 16.2 in depth, 11.2 in height) and internal cavity dimensions (13 in width, 13.2 in depth, 9.5 in height) clearly marked.

Feature	Detail
Product Dimensions	18.2 x 16.2 x 11.2 inches
Item Weight	19.56 pounds
Item Model Number	DTD180-25MGU(H13)
Brand	Smad
Color	Stainless Steel
Material	Stainless Steel
Control Type	Knob
Door Style	Dropdown Door
Capacity	25 Liters (0.9 Cu.ft / 26 Quart)
Power	1800 Watts

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Smad customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Customer Service Contact: Please visit the official Smad website or refer to your product packaging for the most current contact information.