



[Manuals.plus](#) /

› [Elechomes](#) /

› Elechomes XL 18.5 Quart Air Fryer Oven Instruction Manual

Elechomes AG82B

Elechomes XL 18.5 Quart Air Fryer Oven Instruction Manual

Model: AG82B

1. INTRODUCTION AND OVERVIEW

Welcome to the Elechomes XL 18.5 Quart Air Fryer Oven. This multi-functional appliance is designed to simplify your cooking experience, offering capabilities such as air frying, roasting, baking, and dehydrating. Its innovative double fan design ensures even cooking, while the digital LCD touch screen provides intuitive control over 12 pre-set cooking options and manual adjustments.

- Supervise children closely when the appliance is in use. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling or storing parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid using accessories not recommended by the manufacturer, as this may cause injuries or damage to the appliance.
- Do not place the appliance near hot gas or electric burners, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Always ensure the drip tray is in place during operation to collect excess oil and crumbs.
- The exterior surfaces of the appliance may become hot during use. Use oven mitts when handling hot accessories or food.

3. PRODUCT COMPONENTS AND ACCESSORIES

Your Elechomes Air Fryer Oven comes with a variety of accessories to enhance your cooking versatility. All included accessories are made from 304 stainless steel and are dishwasher safe for easy cleaning.

304 Stainless Steel Accessories



Figure 3.1: Included accessories for the Elechomes Air Fryer Oven.

Included Accessories:

- **2pcs Rotisserie Shaft:** For roasting whole chickens or other large cuts of meat.
- **2pcs Rotisserie Forks:** Secure food onto the rotisserie shaft.
- **2pcs Rotisserie Rack:** Additional racks for rotisserie cooking.
- **Rotating Mesh Basket:** Ideal for fries, nuts, and other small items that require tumbling for even cooking.
- **3pcs Air Flow Racks:** Multi-level racks for air frying, baking, or dehydrating.
- **Air Diversion Fan:** Helps with air circulation.
- **Drip Tray:** Collects excess oil and food particles for easy cleanup.
- **Rotisserie Fetch Tool:** For safely removing the rotisserie shaft and basket from the hot oven.

4. SETUP AND FIRST USE

Unpacking:

1. Carefully remove all packaging materials from the air fryer oven and its accessories.
2. Check that all listed components and accessories are present and undamaged.
3. Remove any promotional stickers or labels.

Placement:

- Place the air fryer oven on a flat, stable, and heat-resistant surface.
- Ensure there is at least 6 inches (15 cm) of clear space on all sides of the appliance to allow for proper air circulation. Do not block the air vents.
- Do not place the appliance directly under cabinets or near flammable materials.

Before First Use:

1. Wipe the exterior of the appliance with a damp cloth.
2. Wash all accessories (air flow racks, rotating basket, rotisserie shaft, forks, etc.) with warm, soapy water. Rinse thoroughly and dry completely.
3. Insert the drip tray at the bottom of the oven.
4. Plug the power cord into a grounded electrical outlet.
5. It is recommended to run the air fryer oven empty for about 10-15 minutes at 350°F (175°C) to burn off any manufacturing residues. A slight odor may be present during this initial use; this is normal and will dissipate.

5. OPERATING INSTRUCTIONS

The Elechomes Air Fryer Oven features a digital LCD touch screen for easy operation. You can select from 12 pre-set cooking functions or manually adjust the temperature and time.

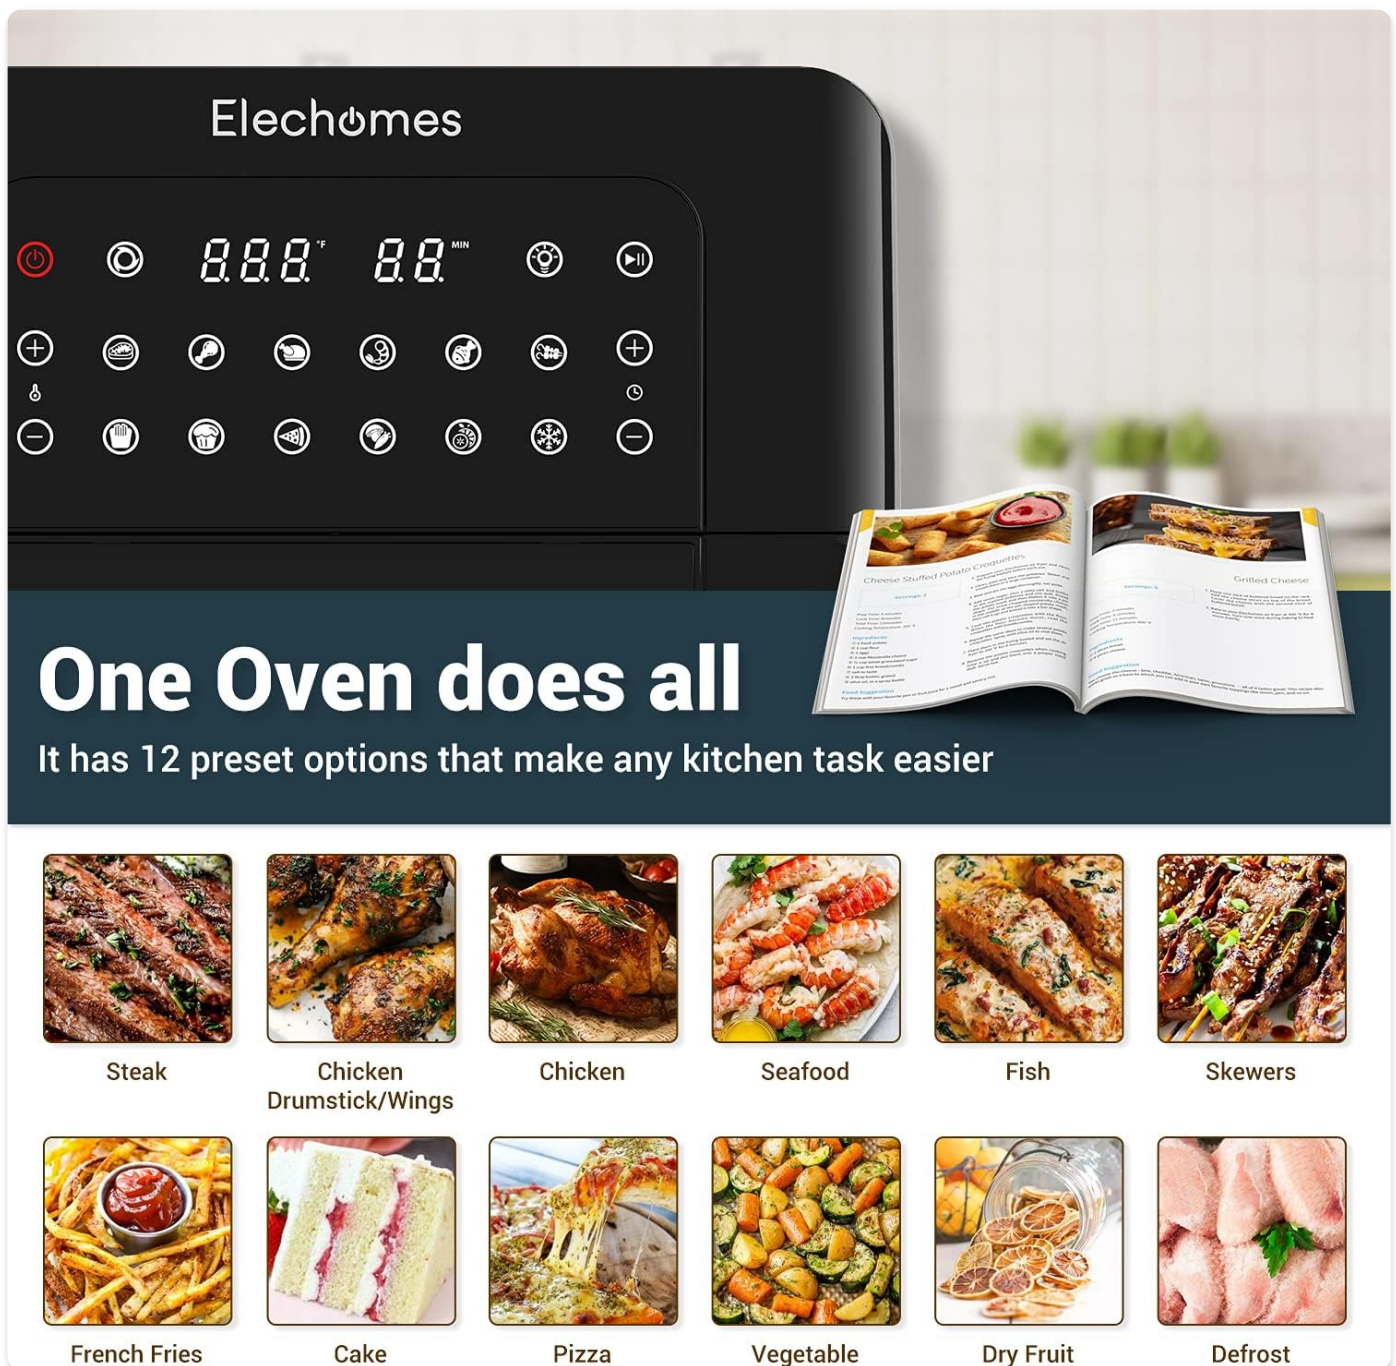


Figure 5.1: Digital LCD Touch Screen Control Panel with 12 Presets.

Control Panel Overview:

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Temperature Control (+/-):** Adjusts temperature from 100°F to 400°F (38°C to 204°C).
- **Time Control (+/-):** Adjusts cooking time from 1 to 60 minutes.
- **Preset Icons:** 12 dedicated icons for common dishes (e.g., French Fries, Chicken, Seafood, Steak, Shrimp, Pizza, Fish, Cake, Vegetable, Dry Fruit, Defrost).
- **Light Button:** Turns the interior light on/off to monitor cooking progress.
- **Rotate Button:** Activates the rotisserie function for even cooking.

Using Pre-set Functions:

1. Place your food inside the oven on the appropriate accessory (e.g., air flow rack, rotating basket).
2. Close the oven door securely.

3. Press the Power button to turn on the display.
4. Select the desired pre-set icon by tapping it. The display will show the default temperature and time for that pre-set.
5. You can adjust the default temperature and time using the Temperature (+/-) and Time (+/-) buttons if needed.
6. Press the Power button again to start cooking.

Manual Operation:

1. Place your food inside the oven.
2. Close the oven door.
3. Press the Power button.
4. Use the Temperature (+/-) buttons to set your desired cooking temperature (e.g., 355°F).
5. Use the Time (+/-) buttons to set your desired cooking time (e.g., 13 minutes).
6. Press the Power button again to start cooking.

Special Functions:

- **Rotisserie:** For whole chickens or roasts, attach the food to the rotisserie shaft and place it in the oven. Press the Rotate button on the control panel to activate the rotation for even browning.
- **Dehydrate:** The dehydrate function allows you to create flat, chip-like dehydrated foods for snacks. Use the air flow racks for best results.

Fast Hot Air Circulation

With innovative double fan design and 360 degrees spin, the air fryer makes food more evenly heated in less time.



Figure 5.2: Fast Hot Air Circulation with 360-degree spin for even cooking.

6. CLEANING AND MAINTENANCE

Regular cleaning of your Elechomes Air Fryer Oven will ensure optimal performance and extend its lifespan. Always unplug the appliance and allow it to cool completely before cleaning.

Cleaning the Interior:

- Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used.
- Clean the heating elements gently with a soft brush if necessary, ensuring they are cool.
- The interior light can be wiped clean with a damp cloth.

Cleaning Accessories:

- All accessories, including the air flow racks, rotating mesh basket, rotisserie shaft, and drip tray, are dishwasher safe.
- Alternatively, wash them by hand with warm, soapy water. Use a non-abrasive sponge or brush to remove food residue.
- Ensure all accessories are thoroughly dried before storing or re-using.



Figure 6.1: Dishwasher-safe accessories for convenient cleaning.

Cleaning the Exterior:

- Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- Ensure the control panel is dry after cleaning.

7. TROUBLESHOOTING

If you encounter issues with your Elechomes Air Fryer Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Door not fully closed.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Close the oven door completely.
Food is not cooked evenly.	Overcrowding; Incorrect temperature/time; Food not rotated.	Avoid overcrowding the racks; cook in smaller batches. Adjust temperature and time as needed. For best results, flip or rotate food halfway through cooking. Utilize the rotating basket for small items.
White smoke coming from the appliance.	Grease/oil residue; Fatty foods.	Clean the drip tray and interior thoroughly after each use. For fatty foods, ensure the drip tray is clean and consider adding a small amount of water to the drip tray to reduce smoke.
Food is not crispy.	Too much moisture; Overcrowding; Insufficient cooking time/temperature.	Pat food dry before air frying. Do not overcrowd the basket/racks. Increase cooking time or temperature slightly. A light coating of oil can also help.

If the problem persists after attempting these solutions, please contact Elechomes Customer Support for assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	Elechomes
Model Name	AG82B
Capacity	18.5 Quarts
Product Dimensions	14"D x 15"W x 15"H
Item Weight	19 Pounds
Color	Black
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel
Output Wattage	1700 Watts
Voltage	120 Volts (AC)
Control Method	Touch
Min Temperature Setting	100 Degrees Fahrenheit
Max Temperature Setting	400 Degrees Fahrenheit
Has Nonstick Coating	Yes
Is Dishwasher Safe	Yes (Accessories)
Recommended Uses For Product	Bake, Defrost, Dehydrate, Roast

9. WARRANTY AND SUPPORT

Elechomes products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty from the date of purchase. Please refer to the warranty card included with your product for specific terms and conditions.

For product support, troubleshooting assistance, or warranty claims, please visit the official Elechomes website or contact their customer service department. You can also find more information and products at the [Elechomes Store on Amazon](#).