



[Manuals.plus](#) /

> [HOMCOM](#) /

> HOMCOM Swan Rocking Horse Instruction Manual - Model ES330-1060731

HOMCOM ES330-1060731

HOMCOM Swan Rocking Horse Instruction Manual

Model: ES330-1060731

[Introduction](#) [Safety Information](#) [Package](#)
[Contents](#) [Assembly](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

Thank you for choosing the HOMCOM Swan Rocking Horse. This manual provides important information for the safe assembly, operation, and maintenance of your product. Please read it thoroughly before use and retain it for future reference.

This rocking horse is designed for children aged 18 to 36 months, offering a fun and engaging way to develop balance, coordination, and core muscles. It features a soft plush swan design with realistic sounds, a comfortable seat, and a secure wooden base.



Image 1.1: The HOMCOM Swan Rocking Horse, featuring a white plush swan body with grey wings and a silver crown, mounted on a wooden rocking base.

2. SAFETY INFORMATION

WARNING: Adult assembly required. Adult supervision is always required during use.

- **Age Recommendation:** Suitable for children between 18 and 36 months.
- **Weight Limit:** Do not exceed the maximum weight capacity of 40 kg (88 lbs).
- **Placement:** Use the rocking horse on a flat, level surface away from stairs, furniture, and other potential hazards.
- **Safety Belt:** Always ensure the child is securely fastened with the safety belt provided before use.
- **Handles:** Ensure the child holds onto the wooden handles firmly while rocking.
- **Footrests:** Ensure the child's feet are placed on the footrests during use.
- **Battery Safety:** This product requires 3 non-standard batteries (included) for sound features. Ensure batteries are inserted correctly with the correct polarity. Do not mix old and new batteries. Remove exhausted batteries promptly. Keep batteries out of reach of children.
- **Inspection:** Regularly inspect the product for any loose parts, damage, or wear. Discontinue use if any damage is found.
- **Compliance:** This product complies with EN71-1.2.3 and EN62115 safety standards.



Image 2.1: Visual representation of key features including suitability for ages 18+ months, lightweight and portable design, and safe materials.

3. PACKAGE CONTENTS

Please check the package to ensure all components are present and undamaged. If any parts are missing or damaged, please contact customer service.

- 1 x Plush Swan Body (with integrated seat, safety belt, and sound module)
- 1 x Wooden Rocking Base
- 2 x Wooden Handles (may be pre-attached)
- 2 x Wooden Footrests (may be pre-attached)
- 3 x Non-standard Batteries (for sound function, may be pre-installed or included separately)
- 1 x Instruction Manual



Image 3.1: A detailed view of the plush swan rocking horse, highlighting its soft texture and design.

4. ASSEMBLY INSTRUCTIONS

The HOMCOM Swan Rocking Horse requires minimal assembly. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Swan Body to Base:** Align the plush swan body with the pre-drilled holes on the wooden rocking base. Secure the body to the base using the provided screws and tools (if applicable). Ensure all connections are tight and stable.
3. **Install Handles and Footrests:** If not pre-attached, insert the wooden handles into the designated slots on the swan's neck/head area. Ensure they are firmly in place. Similarly, attach any separate footrest components to the base if required.
4. **Install Batteries:** Locate the battery compartment, usually found on the underside or within the plush body. Insert 3 non-standard batteries, ensuring correct polarity (+/-). Close the compartment securely.
5. **Final Check:** Before allowing a child to use the product, double-check all screws, bolts, and connections to ensure they are secure. Test the rocking motion and sound function.



Image 4.1: Close-up views illustrating the safety handle, wide seat with safety belt, soft plush material, and wooden footrest (pedal).

5. OPERATING INSTRUCTIONS

Using the HOMCOM Swan Rocking Horse is simple and enjoyable for your child:

1. **Seating the Child:** Carefully place your child onto the seat of the rocking horse. Ensure they are centered and comfortable.
2. **Secure Safety Belt:** Fasten the safety belt around your child's waist and adjust it for a snug, secure fit.
3. **Hold Handles:** Instruct your child to hold onto the wooden handles firmly.
4. **Place Feet on Footrests:** Ensure your child's feet are resting on the wooden footrests.
5. **Rocking Motion:** Encourage your child to gently push off with their feet to initiate the rocking motion. Supervise them to ensure they rock safely and do not over-rock.
6. **Activating Sounds:** To activate the realistic sounds, locate the button on the swan's foot (or ear, depending on the specific model) and press it. The rocking horse will emit sounds to enhance playtime.



Image 5.1: The swan rocking horse, highlighting the location of the sound button on the foot for authentic sounds.

Your browser does not support the video tag.

Video 5.1: A child demonstrating the use of the HOMCOM Swan Rocking Horse, showing the rocking motion, the safety belt, and the activation of realistic sounds by pressing the button on the foot.

6. MAINTENANCE

Regular maintenance will help prolong the life of your rocking horse:

- **Cleaning:** The plush material can be spot cleaned with a damp cloth and mild soap. Do not immerse the product in water. Allow to air dry completely.
- **Wooden Parts:** Wipe wooden parts with a dry or slightly damp cloth. Avoid harsh chemicals.
- **Battery Replacement:** When the sounds become faint or stop working, it's time to replace the batteries. Follow the instructions in the Assembly section for battery installation.
- **Storage:** Store the rocking horse in a dry, cool place away from direct sunlight and moisture when not in use.
- **Inspection:** Periodically check all screws, joints, and the rocking mechanism for tightness and wear. Tighten any loose fasteners.

7. TROUBLESHOOTING

If you encounter any issues with your HOMCOM Swan Rocking Horse, please refer to the following common solutions:

- **Sound Not Working:**
 - a. Check if the batteries are correctly installed with the correct polarity.
 - b. Replace old or exhausted batteries with new ones.
 - c. Ensure the sound button is being pressed firmly.
- **Rocking Motion is Unstable:**
 - a. Verify that the rocking horse is placed on a flat, level surface.
 - b. Check all assembly connections, especially where the swan body attaches to the wooden base, and tighten any loose screws.
- **Product Appears Damaged:**
 - a. If any part is broken or significantly worn, discontinue use immediately.
 - b. Contact customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	ES330-1060731
Dimensions (L x W x H)	60 x 33 x 59 cm (23.6 x 13 x 23.2 inches)
Weight	3.5 kg (7.7 lbs)
Material	Plush, Wood
Recommended Age	18 - 36 months
Maximum Weight Capacity	40 kg (88 lbs)
Batteries Required	3 x Non-standard batteries (included)
Assembly Required	Yes
Safety Standards	EN71-1.2.3, EN62115



Image 8.1: Diagram showing the overall dimensions of the rocking horse: 60 cm length, 33 cm width, and 59 cm height.

9. WARRANTY AND CUSTOMER SUPPORT

HOMCOM products are designed for quality and durability. For warranty information, specific return policies, or any questions regarding your product, please refer to the retailer's website or contact their customer service directly.

If you require further assistance with assembly, operation, or troubleshooting that is not covered in this manual, please reach out to HOMCOM customer support through their official channels.