

WETEN b300

Weten B300 Rechargeable Personal Alarm Keychain Instruction Manual

Model: B300

1. INTRODUCTION

Thank you for choosing the Weten B300 Rechargeable Personal Alarm Keychain. This device is designed to enhance your personal safety by emitting a loud siren and flashing LED light in emergency situations. Please read this manual carefully to ensure proper use and maintenance of your alarm.

2. PRODUCT FEATURES

- **130dB Siren:** Emits a powerful sound to deter threats and attract attention.
- **Dual Activation:** Activate by pulling the pin or double-clicking the SOS button.
- **LED Light:** Features a bright LED light with steady and strobe modes for visibility.
- **USB Rechargeable:** Built-in Lithium-Ion battery, charges in approximately 90 minutes.
- **Long Standby Time:** Up to 1 year on standby, or 90 minutes of continuous siren/flashlight use.
- **Compact Design:** Lightweight (1.12 ounces) and portable (2.8 x 1.4 x 0.7 inches), easily attaches to keys, bags, or backpacks.
- **TSA-Approved:** Suitable for air travel.

B300

Easy Trigger for Any Situation

Flexible activation via pin pull or SOS button.



Features Overview:

- Keychain Loop
- Micro-USB Rechargeable (Cable Included)
- 90 min Alarm / 5h Light
- Dual Activation: Pin Pull + SOS Button
- Separate Flashlight Button
- Best for kids, seniors, or runners

Image: The Weten B300 personal security alarm key chain, highlighting its rechargeable nature.

3. SETUP

Initial Charging

Before first use, fully charge your Weten B300 Personal Alarm. The device comes with a Micro-USB charging cable. Locate the charging port on the side of the device, typically covered by a small rubber flap. Connect the Micro-USB end of the cable to the alarm and the USB-A end to a compatible power source (e.g., computer USB port, USB wall adapter).

- A red indicator light will illuminate during charging.
- The indicator light will turn off or change color (depending on the model) once fully charged.
- Charging typically takes approximately 90 minutes.

Rechargeable

with Included Micro-USB Cable & Charging Indicator



Image: The Weten B300 Personal Alarm connected to its Micro-USB charging cable.

4. OPERATING INSTRUCTIONS

Activating the Alarm

There are two methods to activate the 130dB siren and flashing LED light:

1. **Pull Pin Activation:** Pull the metal pin located at the top of the device. The siren will sound immediately, and the LED light will flash.
2. **SOS Button Activation:** Rapidly double-click the SOS button on the front of the device. The siren will sound, and the LED light will flash.

Deactivating the Alarm

To stop the alarm:

1. **For Pull Pin Activation:** Reinsert the metal pin firmly back into the device.

2. **For SOS Button Activation:** Press and hold the SOS button for approximately 3 seconds.

Using the LED Light


The LED light can be used independently as a flashlight or a strobe light:

- **Steady Light:** Press the dedicated light button (usually on the side or a separate button from SOS) once for a steady light.
- **Strobe Light:** Press the light button a second time for a flashing strobe light.
- **Turn Off:** Press the light button a third time to turn off the LED light.

Two Easy Ways to Use



Pull Pin to Activate Siren + Flashing Light.
Push Pin Back to Disarm.

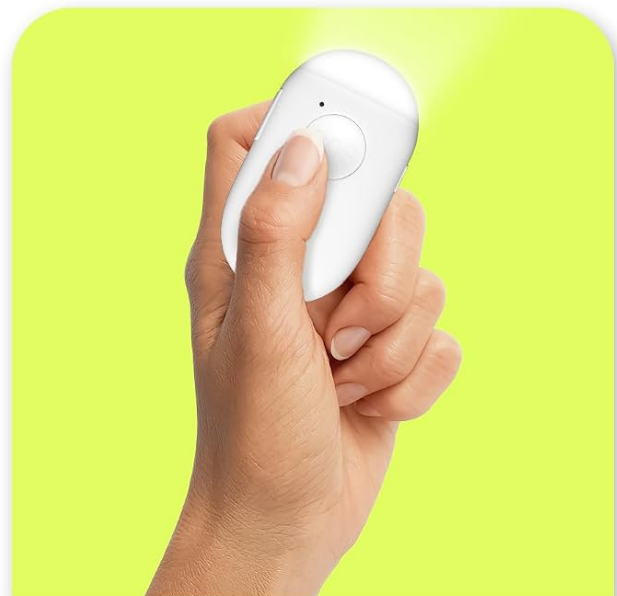

Or Double-Press SOS Button.
Hold for 3 seconds to Disarm.



Separate Button for Flashlight Only



Image: Visual guide demonstrating pull pin activation, SOS button activation, and flashlight modes.

Video: Demonstration of the WETEN B300 Series alarm activation and light functions.

5. MAINTENANCE

- **Regular Charging:** To ensure optimal performance, charge the alarm regularly, especially if it has been in standby for an extended period or after prolonged use.

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the alarm in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Water Immersion:** While durable, avoid submerging the device in water to prevent damage.

6. TROUBLESHOOTING

- **Alarm Not Activating:** Ensure the device is charged. If using the pull pin, confirm it is fully removed. If using the SOS button, ensure it is double-clicked rapidly.
- **Light Not Working:** Check battery level. Press the light button multiple times to cycle through modes.
- **Charging Issues:** Ensure the charging cable is securely connected to both the device and the power source. Try a different USB port or cable if necessary.

If issues persist, please contact WETEN customer support for further assistance.

7. SPECIFICATIONS

Model Number	B300
Noise Level	130 Decibels
Power Source	Rechargeable Lithium-Ion Battery
Charging Time	Approx. 90 minutes
Battery Life (Siren/Light)	Up to 90 minutes continuous use
Standby Time	Up to 1 year
Product Dimensions	2.8 x 1.4 x 0.7 inches
Item Weight	1.12 ounces
Control Method	Touch

8. WARRANTY AND SUPPORT

Your Weten B300 Personal Alarm Keychain is designed for reliability. For any product-related inquiries, technical support, or warranty information, please refer to the contact details provided with your purchase or visit the official WETEN website. Please note that a 30-day return policy is typically offered for this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question