

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Shark](#) /

> [Shark EVOPOWER SYSTEM CS401J Cordless Stick Vacuum Cleaner User Manual](#)

Shark CS401J

Shark EVOPOWER SYSTEM CS401J Cordless Stick Vacuum Cleaner

Model: CS401J | Brand: Shark

INTRODUCTION

The Shark EVOPOWER SYSTEM CS401J is a versatile cordless stick vacuum cleaner designed for comprehensive home cleaning. It combines powerful suction with flexible operation, allowing for easy cleaning of various surfaces and hard-to-reach areas. This manual provides essential information for the safe and effective use of your vacuum cleaner.



Image: The Shark EVOPOWER SYSTEM CS401J demonstrating its dual functionality as a stick vacuum and a handheld unit.

SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Exercise extra care when cleaning on stairs.
- Store the appliance indoors. Put away after use to prevent accidents.

PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- Main Unit (Handheld Vacuum with Extension Wand and Floor Nozzle)
- Charging Dock
- Batteries (2 pieces)
- Mini-Motorized Head
- Accessory Dock
- Crevice Tool
- Multi-Tool
- Futon Tool



Image: An illustration showing the main unit, charging dock, two batteries, mini-motorized head, accessory dock, crevice tool, multi-tool, and futon tool.

ASSEMBLY & SETUP

Follow these steps to assemble and set up your vacuum cleaner:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Main Unit:** Connect the extension wand to the floor nozzle, then attach the handheld vacuum unit to the top of the extension wand until it clicks into place.
3. **Position Docks:** Place the charging dock and accessory dock in a convenient location near a power outlet.
4. **Charge Batteries:** Insert the batteries into the charging dock or directly into the handheld unit. Ensure the vacuum is fully charged before its first use. Charging starts automatically when the vacuum is returned to the dock.



Image: The vacuum cleaner docked for charging, with all its accessories neatly organized on the accessory dock for easy access and storage.

OPERATING INSTRUCTIONS

Your Shark EVOPOWER SYSTEM CS401J offers flexible cleaning options:

1. Stick Mode (Floor Cleaning)

- **Power On/Off:** Press the power button located on the handheld unit.
- **Mode Selection:** Use the mode button to switch between standard and boost suction levels as needed for different cleaning tasks.
- **Maneuverability:** The lightweight design and swivel head allow for smooth and easy navigation around furniture and obstacles.
- **Under Furniture Cleaning:** The flexible design enables the vacuum head to reach deep under low furniture for thorough cleaning.



<マルチフロア対応>

ハンディ部分が 1kg 未満の 製品の中で最も強力な吸引力※

驚くほどパワフルな吸引力で、
コードレススティックでもハンディでも
強かにゴミを吸い込みます。

※コードレス掃除機用に設定されたIEC 62885-2cl 5.8に基づきブーストモードで測定（2020年7月現在）

Image: A user operating the Shark EVOPower SYSTEM CS401J in stick mode, cleaning a wooden floor with ease.

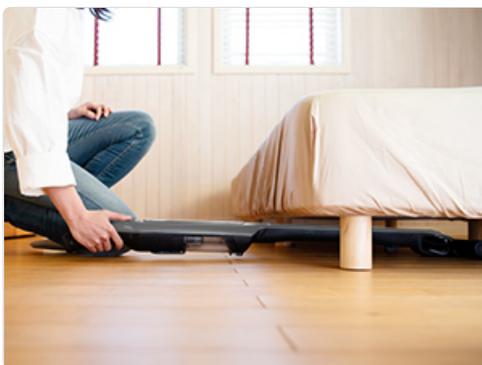


Image: The vacuum cleaner head reaching deep under furniture, such as a bed, for thorough cleaning of hidden areas.

2. Handheld Mode (Spot Cleaning & Attachments)

- **Conversion:** Press the release button on the main unit to detach the handheld vacuum. This allows for quick and convenient cleaning of elevated or tight spaces.
- **Using Attachments:** Attach the desired tool directly to the handheld unit for specialized cleaning tasks.



Image: A hand pressing the release button to detach the handheld vacuum from the main stick, demonstrating the one-touch conversion for quick use.

Attachment Guide:


- **Crevice Tool:** Ideal for narrow spaces, corners, and edges.
- **Multi-Tool:** Suitable for upholstery, car interiors, and delicate surfaces.
- **Mini-Motorized Head:** Designed for deep cleaning of futons, mattresses, and pet hair from fabric surfaces. This head features the same structure as the main head for effective debris removal with high-speed rotation.



Image: A collage showing the vacuum cleaning tight spaces, curtains, and sofa cushions using specialized attachments, highlighting its versatility.

3. Brush Roll Technology

The vacuum features a newly developed Brushless PowerFins brush roll. This design ensures constant contact with the floor, removing more debris in a single pass and preventing hair and pet fur from tangling.

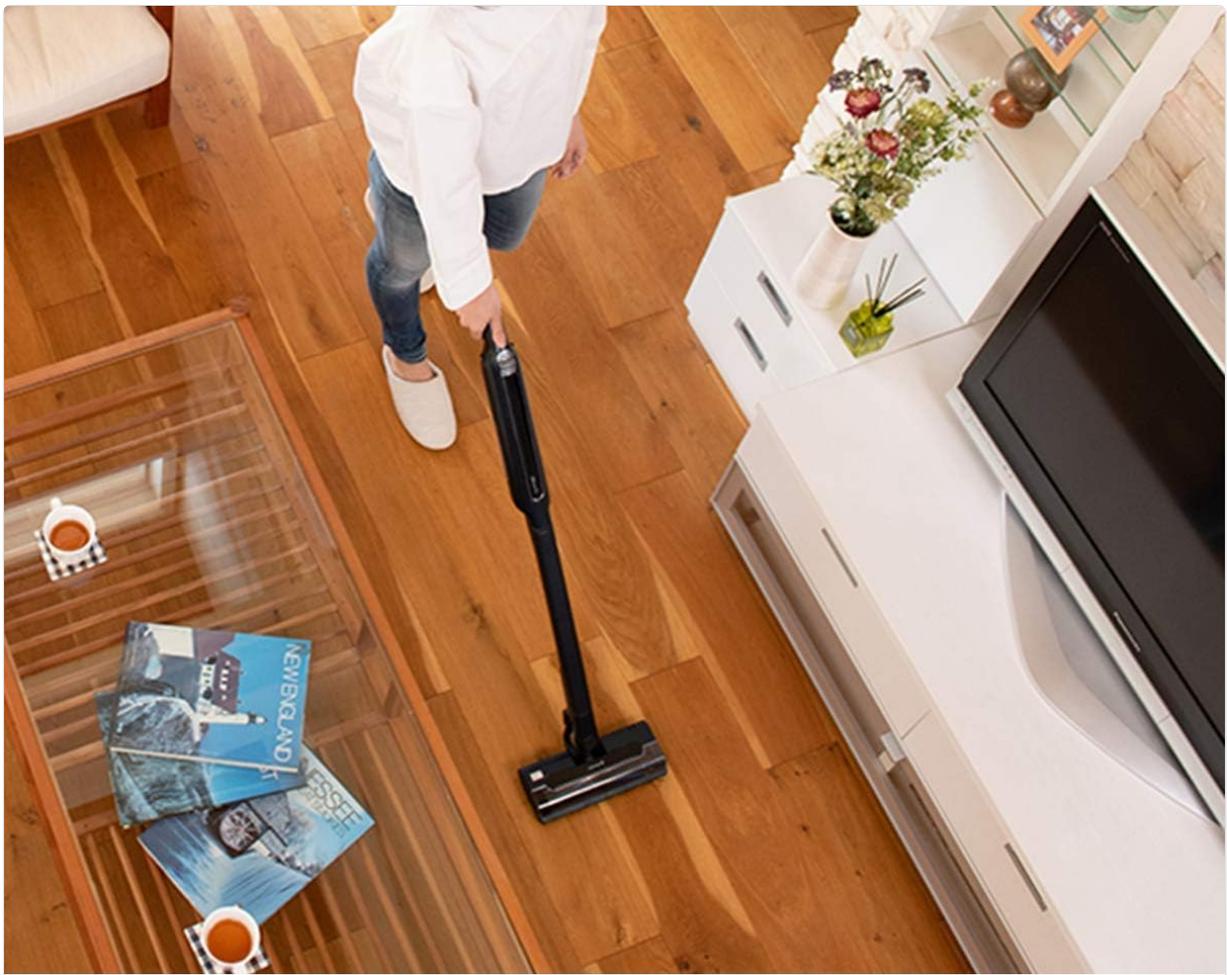

すべるような操作性

軽いから片手でもラクラクお掃除。あらゆる方向にヘッドがスイスイと動くので、自由自在にお掃除ができます。

<手元の操作も簡単に>

全てのボタンが手元にあるので、直感的な操作が可能です。
強モードにする時も後ろのブーストボタンを軽く押すだけです。

Image: A detailed view of the vacuum head's PowerFins brush roll, highlighting its innovative design for effective debris pickup and resistance to hair tangles.

MAINTENANCE

Regular maintenance ensures optimal performance of your vacuum cleaner:

1. **Emptying the Dust Cup:** Press the dust cup release button to detach it from the handheld unit. Position the dust cup over a trash bin and press the empty button to release debris.
2. **Cleaning the Dust Cup and Filter:** The dust cup and filter are washable. Rinse them under running water. Ensure they are completely dry before reassembling and reattaching to the vacuum.
3. **Cleaning the Brush Roll:** While the PowerFins brush roll is designed to prevent tangles, periodically check for any accumulated debris or hair. If necessary, carefully remove any obstructions.



Image: A user cleaning the removable dust cup and filter under running water, illustrating the easy and hygienic maintenance process.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **Vacuum does not turn on:** Ensure the battery is fully charged and properly inserted into the handheld unit.
- **Reduced suction:** Check if the dust cup is full and needs emptying. Clean the filters. Inspect the nozzle and extension wand for any blockages.
- **Brush roll not spinning:** Turn off the vacuum and check the brush roll for any obstructions (e.g., tangled hair, debris). Ensure the floor nozzle is correctly attached to the extension wand.
- **Battery not charging:** Verify that the vacuum is correctly seated on the charging dock and that the power adapter is securely plugged into a working outlet.

SPECIFICATIONS

Feature	Detail
Manufacturer	Shark
Model Number	CS401J
Package Dimensions	62 x 31.7 x 18.2 cm
Weight (Package)	5.45 kg
Battery Type	Lithium-ion (Rechargeable)
Power Source	Battery Powered
Filter Type	Cartridge
Special Features	Lightweight
Recommended Use	Futon, Multi-surface

WARRANTY & SUPPORT

The manufacturer's warranty is valid for products purchased from SharkNinja or authorized retailers. Product registration is required to activate the warranty. Please register your product after purchase. The warranty period may vary by product; refer to the included instruction manual for specific details.

For further assistance, please contact Shark customer support through their official website or the contact information provided in your product packaging.

