

[Manuals.plus](#) /

> [Tefal](#) /

> Tefal OptiGrill Elite XL Electric Grill Instruction Manual GC760D

Tefal GC760D

Tefal OptiGrill Elite XL Electric Grill Instruction Manual

Model: GC760D

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Tefal OptiGrill Elite XL electric grill. Please read these instructions carefully before first use and keep them for future reference. This appliance is designed for indoor use only.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your mains voltage. Do not immerse the appliance, power cord, or plug in water or any other liquid. Do not operate the appliance with a damaged cord or plug.
- **Hot Surfaces:** The grill plates and accessible surfaces become very hot during operation. Always use oven mitts or handles when touching hot parts. Allow the appliance to cool completely before cleaning or storing.
- **Placement:** Place the grill on a stable, heat-resistant, and dry surface, away from walls and heat-sensitive materials. Ensure adequate ventilation around the appliance.
- **Children:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- **Intended Use:** Use the appliance only for its intended purpose of grilling food. Any other use may cause damage or injury.

3. PRODUCT OVERVIEW

The Tefal OptiGrill Elite XL is an intelligent electric grill designed for precise cooking. It features removable grill plates and an integrated drip tray for easy cleaning.



Image: The Tefal OptiGrill Elite XL grill, showcasing its open design with removable grill plates and the integrated drip tray.



Image: The grill with its top plate raised, illustrating the grilling surface and the removable drip tray.

4. SETUP

1. **Unpack:** Carefully remove the grill and all accessories from the packaging. Retain packaging for storage or transport.
2. **Initial Cleaning:** Before first use, wash the grill plates and drip tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth.
3. **Assemble:** Ensure the grill plates are correctly inserted and locked into place. Position the drip tray under the front of the grill to collect juices.
4. **Placement:** Place the grill on a flat, stable, and heat-resistant surface. Ensure there is sufficient space around the grill for air circulation.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The OptiGrill Elite XL features an intuitive cooking guide and 16 automatic programs for various food types.

5.1. Preheating

1. Close the grill and plug it in. The display will illuminate.
2. Select your desired program using the control panel.
3. Press the 'OK' button to start preheating. The preheating indicator will flash.
4. Wait for the preheating cycle to complete. The grill will beep, and the display will indicate 'Add Food'.

5.2. Using Automatic Programs

The grill automatically measures the thickness and quantity of food to adjust cooking time for optimal results.

- After preheating, place your food on the grill plates. Close the lid.
- The grill will automatically detect the food and begin cooking.
- The intuitive cooking guide on the display will show the cooking progress, indicating doneness levels (rare, medium, well-done) and remaining time.
- Remove food when your desired doneness level is reached. The grill will beep to signal each stage.



Image: The intuitive cooking guide display, showing stages from adding food to different doneness levels with time remaining.

16 GRILL-PROGRAMME



Image: The control panel highlighting the 16 automatic grill programs for diverse food types.

5.3. Intense Searing Function

For restaurant-quality searing marks, activate the intense searing function before or during cooking, if available for your selected program. Refer to the display for specific instructions.

5.4. Manual Mode

For full control over cooking time and temperature, select the manual mode. This allows you to set the desired temperature and duration for your specific needs.

5.5. Cooking Frozen Foods

The OptiGrill Elite XL can cook frozen foods. Select the appropriate program for frozen items, and the grill will adjust the cooking cycle accordingly.



PREIS-LEISTUNGSSIEGER	
ETM TESTMAGAZIN	
TEFAL OptiGrill Elite XL	
SEHR GUT	95,5 %
Vergleichstest 2 Kontaktgrills 2 × sehr gut	
www.etm-testmagazin.de	
07/2023	

Image: Example of perfectly grilled meat, showcasing the grill's capability to achieve desired doneness and sear marks.

XL-FORMAT



Image: The XL cooking surface accommodating multiple food items, ideal for larger meals.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your grill.

- **Always unplug the appliance and allow it to cool completely before cleaning.**
- **Grill Plates and Drip Tray:** The removable grill plates and drip tray are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge.
- **Exterior:** Wipe the exterior of the grill with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.
- **Storage:** Ensure all parts are clean and dry before storing the grill. Store in a dry place.

SPÜLMASCHINENFEST



Image: Removable grill plates being placed in a dishwasher for easy cleaning.

7. TROUBLESHOOTING

If you encounter issues with your OptiGrill Elite XL, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in or power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food not cooking evenly.	Grill plates not properly installed or food unevenly distributed.	Ensure grill plates are correctly locked. Distribute food evenly on the plates.

Problem	Possible Cause	Solution
Grill not preheating.	Program not selected or 'OK' not pressed.	Select a program and press 'OK' to start the preheating cycle.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

- **Model:** GC760D
- **Brand:** Tefal
- **Power:** 2200 Watts
- **Voltage:** 230 Volts
- **Dimensions (L x W x H):** 44.4 x 34.3 x 18 cm (17.5 x 13.5 x 7.1 inches)
- **Weight:** 7.2 kg (15.87 lbs)
- **Material:** Stainless Steel
- **Special Features:** 16 Automatic Programs, Intuitive Cooking Guide, Intense Searing Function, Dishwasher-Safe Plates & Drip Tray



Image: Product dimensions of the Tefal OptiGrill Elite XL.

9. WARRANTY AND SUPPORT

Your Tefal OptiGrill Elite XL comes with a **2-year manufacturer warranty**. Please retain your proof of purchase for warranty claims.

Spare parts for this model are available for up to **15 years** from the date of purchase.

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided in your product packaging or visit the official Tefal website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question