



Manuals.plus /

› MEGAWISE /

› MEGAWISE Electric Kettle CX-817 User Manual

## MEGAWISE CX-817

# MEGAWISE Electric Kettle CX-817 User Manual

Model: CX-817 | Brand: MEGAWISE

## INTRODUCTION

---

Thank you for choosing the MEGAWISE Electric Kettle CX-817. This manual provides essential information for the safe and efficient operation of your new appliance. Please read all instructions carefully before first use and retain for future reference.



Image: The MEGAWISE Electric Kettle, a clear glass kettle with a black handle and base, showing water boiling inside with a blue LED light illuminated at the bottom.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or power base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The kettle features quality borosilicate glass with low thermal expansion coefficients, making it more resistant to thermal shock. However, avoid sudden extreme temperature changes.
- The kettle's inner base and lid are made of 304 stainless steel—no plastics touch the boiling water inside, ensuring healthy water.
- The kettle automatically shuts off within 20 seconds of boiling, and features boil-dry protection to prevent damage if operated without water.
- Always ensure the lid is securely closed during operation.

## PRODUCT OVERVIEW

The MEGAWISE Electric Kettle CX-817 is designed for fast and safe water boiling. It features a durable borosilicate glass body, a 304 stainless steel interior, and a sleek design with blue LED indicator lights.



Image: A visual representation of the kettle's auto shut-off and boil-dry protection features, showing a shield icon and the kettle with steam rising.

### Key Components:

- Kettle Body (Borosilicate Glass & 304 Stainless Steel)
- Power Base (with cord storage)
- Lid (with one-touch release button)
- Handle (Stay-cool design)
- Spout with built-in filter
- LED Indicator Lights

## SETUP

---

### Before First Use:

1. Unpack the kettle and all accessories.
2. Fill the kettle with water to the MAX line.
3. Boil the water as per the operating instructions.
4. Discard the boiled water. Repeat this process 2-3 times to ensure the kettle is clean and free of any manufacturing residues.

### Placing the Kettle on the Power Base:

- Place the power base on a flat, stable surface.
- The kettle can be placed on the 360-degree rotational power base from any angle.

## OPERATING INSTRUCTIONS

---

### Boiling Water:

1. **Fill the Kettle:** Press the one-touch lid release button on the handle to open the lid. Fill the kettle with fresh water, ensuring it is between the MIN (0.5L) and MAX (1.8L) fill lines. Do not overfill or underfill.
2. **Close the Lid:** Securely close the lid until it clicks into place.
3. **Place on Power Base:** Place the kettle firmly on its power base.
4. **Start Boiling:** Push the power switch down. The blue LED indicator lights will illuminate, indicating that the kettle is heating.
5. **Automatic Shut-Off:** The kettle will automatically turn off once the water reaches boiling point, and the LED lights will extinguish. The power switch will also flip up.
6. **Pouring:** Carefully lift the kettle from the base using the stay-cool handle and pour the hot water. The spout is designed for precise pouring.

# MEGAWISE

3-7  
min



Quick Boil



**Boil Water in Just 3 Minutes\***

\*When boiling 2 cups (0.5L) of water at room temperature

Image: The MEGAWISE Electric Kettle with water rapidly boiling, illustrating its quick boil feature which can heat water in less than 3 minutes.

## Official Product Video: Product Overview

Video: A brief product overview of the MEGAWISE Electric Kettle, demonstrating its features and ease of use. This video is provided by Amazon Product Imaging.

## MAINTENANCE & CLEANING

### Regular Cleaning:

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- The kettle's large opening and clear glass give you easier access to the interior. The inside can be cleaned with the handheld sponge brush included in this purchase, helping you to clean deposits with ease.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the kettle body or power base in water or any other liquid.



Image: A person cleaning the interior of the MEGAWISE Electric Kettle with a sponge, demonstrating the effortless cleaning due to its wide mouth.

## Descaling:

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale:

1. Fill the kettle with 1 part white vinegar and 2 parts water.
2. Boil the mixture and let it stand for 20-30 minutes.
3. Discard the mixture and rinse the kettle thoroughly with fresh water.
4. For stubborn deposits, gently scrub with a non-abrasive brush or sponge.

## TROUBLESHOOTING

- **Kettle not turning on:** Ensure the power cord is securely plugged into a working outlet and the kettle is correctly seated on the power base. Check if the power switch is pushed down.
- **Kettle not boiling:** Verify that the water level is between the MIN and MAX marks. Ensure the power switch is fully engaged.
- **Water tastes unusual:** Perform the initial cleaning steps (boiling and discarding water) multiple times.

If limescale is present, descale the kettle as instructed in the Maintenance & Cleaning section.

- **Automatic shut-off not working:** If the kettle does not automatically shut off after boiling, discontinue use and contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	MEGAWISE
Model Name	CX-817
Capacity	1.8 Liters
Power	1800 Watts
Material	Borosilicate Glass, 304 Stainless Steel
Special Features	Automatic Shut-Off, Boil-Dry Protection, LED Light
Product Dimensions	6.22"L x 6.22"W x 9.06"H
Item Weight	2.64 pounds

## WARRANTY & SUPPORT

Your MEGAWISE Electric Kettle comes with 36-month protection, allowing you to buy with peace of mind regarding the product's durability. For any questions, concerns, or warranty claims, please contact MEGAWISE customer service.