

KitchenAid KHBV53

KitchenAid Variable Speed Corded Hand Blender KHBV53 Instruction Manual

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the KitchenAid Variable Speed Corded Hand Blender KHBV53. This appliance is designed for efficient blending, mixing, and pureeing, making it a versatile tool for your kitchen. Its powerful motor and thoughtful design ensure consistent results for a variety of recipes, from smoothies and milkshakes to soups and sauces.

The hand blender features an 8-inch removable blending arm with a 4-point stainless steel blade, a variable speed trigger switch for precise control, and a removable pan guard to protect your cookware. It also includes a 3-cup BPA-free blending jar with a lid for convenient individual blending tasks and storage.

2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please read and follow these safety guidelines:

- Always unplug the hand blender from the power outlet before assembling, disassembling, cleaning, or when not in use.
- Keep hands, hair, clothing, and utensils away from the blending blade during operation to prevent injury.
- Do not immerse the motor body of the hand blender in water or other liquids. Only the blending arm and accessories are designed for immersion.
- Ensure the appliance is used on a stable, dry surface.
- Supervise children closely when the appliance is in use or stored within their reach.
- Avoid blending hot liquids without proper precautions. Hot liquids can splash and cause burns.
- Do not operate the hand blender with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use only attachments and accessories recommended or sold by KitchenAid.

3. COMPONENTS

Your KitchenAid Variable Speed Corded Hand Blender KHBV53 includes the following components:

- **Corded Hand Blender Motor Body:** The main unit containing the motor and controls.
- **Removable 8" Blending Arm:** Attaches to the motor body and features a 4-point stainless steel blade.
- **3-Cup BPA-Free Blending Jar with Lid:** A convenient container for blending and storing ingredients.
- **Removable Pan Guard:** A protective attachment for the blending arm to prevent scratching cookware.



Figure 1: All included components of the KitchenAid Variable Speed Corded Hand Blender KHBV53.

The blending arm is designed to be easily detachable for cleaning and storage, as shown in the image above.

4. SETUP

1. **Attach the Blending Arm:** Align the blending arm with the motor body and twist until it locks securely into place.
2. **Attach the Pan Guard (Optional):** If blending in non-stick cookware, gently snap the pan guard onto the blending arm to protect the surface.
3. **Prepare Ingredients:** Place your ingredients into the 3-cup blending jar or a suitable pot/container.
4. **Connect to Power:** Plug the hand blender into a standard electrical outlet.







Figure 2: Assembled hand blender with pan guard and blending jar.

5. OPERATING INSTRUCTIONS

The KitchenAid Hand Blender offers variable speed control for precise blending.

1. **Immersion:** Submerge the blending arm into your ingredients before turning the appliance on. Ensure the blade guard is fully immersed to prevent splashing.
2. **Power On:** Press and hold the power button located on the top of the motor body.
3. **Adjust Speed:** The variable speed trigger switch allows you to control the blending speed. Press the trigger gently for lower speeds and press harder for higher speeds.
4. **Blending Technique:** Move the hand blender up and down through the ingredients to ensure even blending. For thicker mixtures, you may need to tilt the blender slightly.
5. **Power Off:** Release the power button to stop the blender.
6. **Remove from Ingredients:** Once the blade has stopped completely, remove the blending arm from the ingredients.



Figure 3: Hand blender in action, ideal for smoothies and purees.

Official Product Video: KitchenAid Variable Speed Corded Hand Blender

Video 1: This video demonstrates the versatility and ease of use of the KitchenAid Variable Speed Corded Hand Blender for various kitchen tasks, including blending soups and smoothies.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your hand blender.

- 1. Disconnect Power:** Always unplug the hand blender before cleaning.
- 2. Detach Blending Arm:** Twist the blending arm counter-clockwise to detach it from the motor body.
- 3. Clean Blending Arm and Accessories:** The blending arm, pan guard, and blending jar are dishwasher-safe (top rack recommended) or can be hand-washed with warm, soapy water. Rinse thoroughly and dry.
- 4. Clean Motor Body:** Wipe the motor body with a damp cloth. Do not immerse the motor body in water or any other liquid.
- 5. Storage:** Store the hand blender and its accessories in a dry place. The detachable design allows for compact storage.

7. TROUBLESHOOTING

If you encounter any issues with your KitchenAid Hand Blender, please refer to the following common solutions:

- **Appliance does not turn on:** Ensure the hand blender is securely plugged into a working electrical outlet. Check if the power button is pressed and held correctly.
- **Poor blending performance:** Ensure the blending arm is properly attached to the motor body. Check that the ingredients are not too large or too dense for the blender. Add more liquid if the mixture is too thick.
- **Excessive vibration or noise:** This may indicate improper assembly of the blending arm. Disassemble and reattach the blending arm, ensuring it locks into place.

For further assistance, please contact KitchenAid customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	KitchenAid
Model Number	KHBV53
Color	Empire Red
Special Feature	Adjustable Speed Control, Detachable Attachment, Removable Blade
Capacity	1 Liters (3-Cup Blending Jar)
Product Dimensions	2.5"D x 3.56"W x 16.3"H
Power Source	Corded Electric
Number of Speeds	Variable (controlled by trigger)
Controls Type	Push Button, Trigger Switch
Material Type Free	BPA Free (Blending Jar)
Blade Material	Stainless Steel
Item Weight	2.44 pounds

9. WARRANTY AND SUPPORT

This KitchenAid Variable Speed Corded Hand Blender KHBV53 comes with a **1 Year Limited Warranty**. For detailed warranty information, terms, and conditions, please refer to the warranty card included with your product or visit the official KitchenAid website.

For product support, replacement parts, or any inquiries, please visit the [KitchenAid Store on Amazon](#) or the official KitchenAid customer service portal.

