

[Manuals.plus](#) /

› [Pretty Love](#) /

› Pretty Love Elvira Vibrator User Manual

Pretty Love 05-1148

Pretty Love Elvira Vibrator User Manual

Model: 05-1148

INTRODUCTION

Thank you for choosing the Pretty Love Elvira Vibrator. This manual provides essential information for the safe and effective use, maintenance, and care of your device. Please read it thoroughly before first use and retain it for future reference.

The Elvira Vibrator is designed for personal pleasure, featuring multiple vibration modes and a comfortable silicone design. It is USB rechargeable and waterproof for versatile use.

SAFETY INFORMATION

- This product is for external use only.
- Do not use if the product appears damaged or defective.
- Discontinue use immediately if you experience any discomfort or pain.
- Clean the product thoroughly before and after each use as described in the "Maintenance" section.
- Keep out of reach of children.
- Consult a healthcare professional if you have any medical conditions or concerns before using this product.
- Do not use with silicone-based lubricants, as they may damage the silicone material. Use water-based lubricants only.

PRODUCT OVERVIEW

The Pretty Love Elvira Vibrator is a compact, powerful device made from soft, body-safe silicone. It features a single control button for easy operation and a discreet charging port.



Figure 1: The Pretty Love Elvira Vibrator. This image displays the vibrator's ergonomic shape, smooth silicone finish, and the location of its control button.

SETUP

Charging the Device

1. Locate the charging port on the vibrator. This is typically a small, discreet port, often covered by a silicone flap to ensure waterproofing.
2. Insert the small end of the provided USB charging cable into the vibrator's charging port.
3. Connect the larger end of the USB cable to a USB power source (e.g., computer, USB wall adapter).
4. The indicator light on the vibrator will illuminate or flash to indicate that it is charging.
5. Charge the device fully before first use. A full charge typically takes 1-2 hours. The indicator light will usually change or turn off when charging is complete.
6. Once fully charged, disconnect the cable and ensure the charging port cover is securely closed to maintain

waterproofing.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on: Press and hold the control button for approximately 2-3 seconds. The vibrator will start on its lowest setting.
- To turn off: Press and hold the control button for approximately 2-3 seconds until the vibrations stop.

Changing Vibration Modes

- While the device is on, short press the control button to cycle through the 12 available vibration patterns and intensities.
- Experiment with each mode to find your preferred setting.

MAINTENANCE

Cleaning

- Always clean your vibrator before and after each use.
- Wash the product with warm water and a mild, toy-safe soap or a specialized toy cleaner.
- Rinse thoroughly with clean water.
- Pat dry with a lint-free cloth or allow to air dry completely before storing.
- Do not use harsh chemicals, alcohol, or petroleum-based cleaners, as these can damage the silicone.

Storage

- Store the vibrator in a clean, dry, and cool place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Device does not charge.	Charging cable not properly connected or faulty. Power source issue.	Ensure the cable is securely connected to both the device and the power source. Try a different USB port or wall adapter.
Vibrations are weak or inconsistent.	Low battery.	Recharge the device.
Device feels sticky or damaged.	Improper cleaning or use of incompatible lubricants.	Refer to the "Maintenance" section for proper cleaning. Only use water-based lubricants. If damage persists, discontinue use.

SPECIFICATIONS

- **Model:** 05-1148
- **Brand:** Pretty Love
- **Material:** Body-safe Silicone
- **Color:** Purple
- **Vibration Modes:** 12 functions
- **Power Source:** USB Rechargeable
- **Waterproof:** Yes
- **Dimensions:** 6.89 x 3.82 x 2.24 inches (L x W x H)
- **Weight:** 1.76 ounces (approximately 0.05 kg)
- **Manufacturer:** Claredale Distributors Pty. Ltd.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact the retailer where the product was purchased. Keep your proof of purchase for warranty claims.

For further assistance, you may also visit the official Pretty Love website or contact their customer service directly. Contact details are typically provided on the product packaging or their official website.

© 2023 Pretty Love. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question