

[Manuals.plus](#) /

> [COSTWAY](#) /

> COSTWAY Mini Portable Washing Machine with Single Tub Spin Dryer, 2 KG Semi-Automatic (Model EP24428DEFR)

COSTWAY EP24428DEFR

COSTWAY Mini Portable Washing Machine

Model: EP24428DEFR

Brand: COSTWAY

1. INTRODUCTION

Thank you for purchasing the COSTWAY Mini Portable Washing Machine. This compact and semi-automatic appliance is designed for small loads of laundry, ideal for apartments, dormitories, camping, and RVs. Please read this manual carefully before use to ensure safe and efficient operation. Keep this manual for future reference.



Image: The COSTWAY Mini Portable Washing Machine, a compact blue and white unit with a transparent lid, designed for small spaces.

2. SAFETY INFORMATION

- Always ensure the power supply matches the voltage specified on the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the machine during operation.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Do not operate the machine if the power cord or plug is damaged.
- Place the machine on a stable, level surface to prevent vibration and tipping.
- Ensure the drain hose is properly positioned to avoid water spillage.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your washing machine:



Image: Close-up views of the control knob, safety cover, water inlet, drain hose, power cord organizer, and non-slip pads.

- **Water Inlet:** For filling the tub with water.
- **Control Knob:** Used to set wash and spin timers.
- **Transparent Lid:** Allows monitoring of the washing process.
- **Wash Tub:** Main compartment for washing clothes.
- **Spin Basket:** Removable basket for spin-drying clothes.
- **Drain Hose:** For expelling dirty water.
- **Non-slip Feet:** Provides stability during operation.

What's in the Box:

- 1 x Mini Portable Washing Machine
- 1 x Drain Hose
- 1 x Instruction Manual

4. SETUP

1. **Unpack:** Carefully remove the washing machine from its packaging. Inspect for any damage.
2. **Placement:** Place the machine on a firm, level surface. Ensure there is enough space around it for ventilation and operation. Avoid placing it in direct sunlight or excessively humid environments.
3. **Drain Hose Connection:** Connect the drain hose to the outlet on the machine. Position the other end of the drain hose into a sink, bucket, or floor drain. Ensure the drain hose is not kinked or blocked. The drain hose length is approximately 36 cm.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image: The mini washing machine shown in various compact living environments such as an RV, apartment, and dormitory, highlighting its portability.

5. OPERATING INSTRUCTIONS

This semi-automatic washing machine offers both washing and spin-drying functions.



Image: Visual guide showing the water inlet, the process of washing or spinning, and the timer control knob.

Washing Cycle:

1. **Load Laundry:** Open the lid and place your clothes into the wash tub. Do not exceed the maximum load capacity of 2 kg. For best results, avoid overloading.
2. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the tub with the clothes.
3. **Fill with Water:** Pour water into the tub through the water inlet until the desired water level is reached. The transparent lid allows you to monitor the water level.
4. **Set Wash Timer:** Turn the control knob to set the wash time. The wash timer can be set for up to 10 minutes.
5. **Start Washing:** The machine will begin the washing cycle.
6. **Drain Water:** Once the wash cycle is complete, position the drain hose to expel the dirty water.

Rinsing Cycle:

The machine features an automatic rinse cycle. After draining the wash water, refill the tub with clean water and allow the machine to run for a short period (e.g., 3-5 minutes) to rinse the clothes. Repeat if necessary to ensure all soap residue is removed.

Spin Drying Cycle:

1. **Transfer Clothes:** After rinsing, carefully transfer the wet clothes from the wash tub to the spin basket. Ensure clothes are placed evenly inside the spin basket to prevent excessive vibration. The spin capacity is 1 kg.
2. **Place Spin Cover:** Place the spin basket cover over the clothes.
3. **Set Spin Timer:** Turn the control knob to set the spin time. The spin timer can be set for up to 5 minutes.
4. **Start Spin:** The machine will begin the spin-drying cycle.
5. **Remove Clothes:** Once the spin cycle is complete, remove the clothes. Note that the spin-dry function aims to remove excess water, leaving clothes damp (approximately 20-30% dry).



Image: A visual representation contrasting the washing process (clothes immersed in water) and the spin-drying process (clothes being spun to remove water).

6. MAINTENANCE

Cleaning:

- Always unplug the machine before cleaning.
- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the interior of the wash tub and spin basket regularly to prevent residue buildup.
- Ensure the drain hose is clear of any blockages.

Storage:

- Before storing, ensure the machine is completely dry.
- Store the machine in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep the lid slightly ajar to allow for air circulation and prevent odors.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------------|--|---|
| Machine does not start | Not plugged in; Power outage; Timer not set. | Check power connection; Verify power supply; Set the timer correctly. |
| Poor washing performance | Overloaded; Insufficient water/detergent; Clothes not sorted. | Reduce load; Add more water/detergent; Sort clothes by fabric/color. |
| Excessive vibration/noise during spin | Clothes unevenly distributed in spin basket; Machine not on level surface. | Rearrange clothes evenly; Adjust machine to a level surface. |

| Problem | Possible Cause | Solution |
|----------------------|---|--|
| Water does not drain | Drain hose kinked or blocked; Drain hose positioned too high. | Check and clear drain hose; Ensure drain hose is positioned lower than the machine's outlet. |

If you encounter problems not listed here or if the issue persists, please contact COSTWAY customer support.

8. SPECIFICATIONS

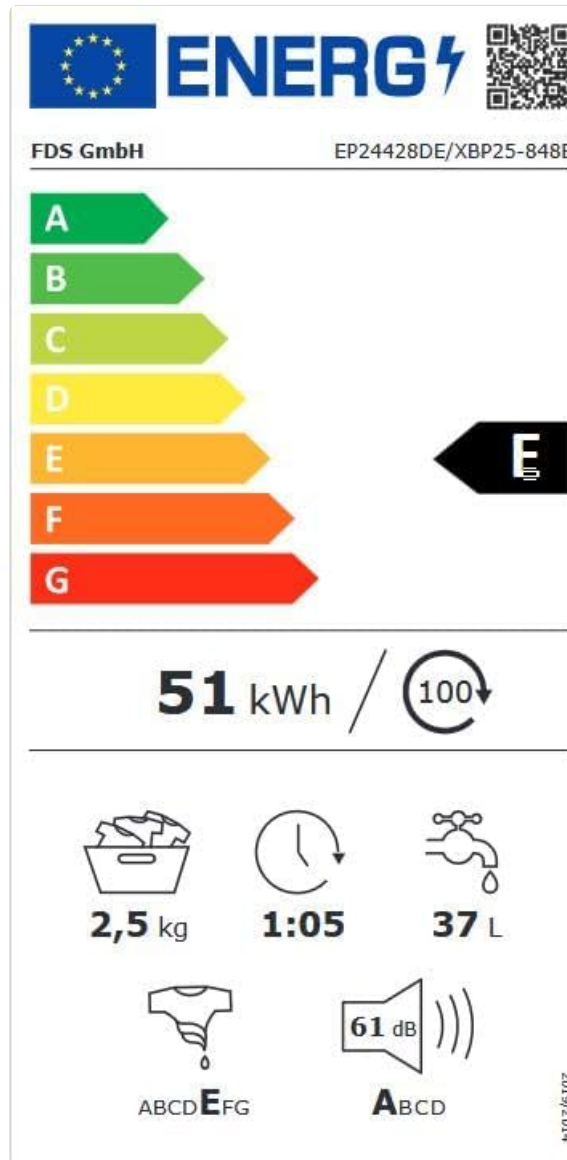


Image: A product information sheet detailing various specifications and energy ratings.

| Feature | Detail |
|--------------------------------|-----------------|
| Brand | COSTWAY |
| Model Number | EP24428DEFR |
| Product Dimensions (L x W x H) | 34 x 36 x 51 cm |
| Net Weight | 6.36 kg |

| Feature | Detail |
|-------------------|---|
| Wash Capacity | 2 kg |
| Spin Capacity | 1 kg |
| Rated Power | 170 Watts |
| Voltage | 110 Volts (Please verify for your region, original data states 220-240V in Aplus content) |
| Noise Level | 61 Decibels |
| Material | Polypropylene |
| Installation Type | Freestanding |
| Color | Blue |

9. WARRANTY AND SUPPORT

COSTWAY products are designed for quality and reliability. For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support, spare parts, or any inquiries regarding your product, please visit the official COSTWAY website or contact their customer service department.

Note: The manufacturer tests each washing machine with water to ensure quality. You may find water stains or residue inside the machine upon receipt; this is normal and does not indicate a used product.