

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PowerA](#) /

› [PowerA Enhanced Wired Controller for Xbox Series X|S User Manual](#)

## PowerA Enhanced Wired Controller

# PowerA Enhanced Wired Controller for Xbox Series X|S User Manual

## INTRODUCTION

This manual provides comprehensive instructions for the PowerA Enhanced Wired Controller, designed for Xbox Series X|S, Xbox One, and Windows. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience with your gaming controller.



Image: Front view of the PowerA Enhanced Wired Controller in red, featuring the Xbox button, analog sticks, D-pad, and face buttons.

## PRODUCT FEATURES

---

- Officially licensed by Xbox for Xbox Series X|S and compatible with Xbox One and Windows.
- Superior ergonomics and intuitive button layout.
- Two mappable Advanced Gaming Buttons for on-the-fly programming.
- Immersive dual rumble motors.
- Standard 3.5mm stereo headset jack for in-game audio.
- Share Button to capture and share screenshots and clips.
- Volume dial with one-touch Mic Mute.
- Detachable 10ft (3m) USB cable with hook-and-loop closure for lag-free performance.
- Precision-tuned analog sticks and anti-friction rings for smooth motion.
- Diamond textured grip for enhanced comfort and control.

## SETUP

---

### Connecting the Controller

1. Locate the detachable 10ft (3m) USB cable included with your controller.
2. Connect the smaller end of the USB cable to the port on the top of the PowerA Enhanced Wired Controller.



Image: Close-up view of the PowerA Enhanced Wired Controller showing the USB-C port on the top edge and the detachable USB cable being inserted.

3. Connect the larger end of the USB cable to an available USB port on your Xbox console (Xbox Series X|S or Xbox One) or Windows PC.
4. The controller will automatically power on and connect to your device. The Xbox button on the controller will illuminate to indicate a successful connection.

## OPERATING INSTRUCTIONS

### Basic Controls

The PowerA Enhanced Wired Controller features a standard Xbox button layout. Refer to the image below for button identification.



### ENHANCED WIRED CONTROLLER For Xbox - Red



For Xbox Series X|S

Image: Diagram of the PowerA Enhanced Wired Controller highlighting various buttons and features such as the Share Button, Metallic D-Pad, Headset Dial, 3.5mm Stereo Headset Port, Dual Rumble Motors, Program Button, and Advanced Gaming Buttons.

- **Left/Right Analog Sticks:** Used for movement and camera control.
- **A, B, X, Y Buttons:** Primary action buttons.
- **D-Pad:** Directional input.
- **Menu Button:** Access in-game menus or system settings.
- **View Button:** Access specific in-game functions or system views.
- **Share Button:** Press to capture screenshots or record game clips.
- **Left/Right Bumpers (LB/RB):** Shoulder buttons for various actions.
- **Left/Right Triggers (LT/RT):** Analog triggers for precise input, such as acceleration or aiming.

### Advanced Gaming Buttons (Mappable Buttons)

Your controller includes two mappable Advanced Gaming Buttons (AGBs) located on the back of the controller. These buttons can be programmed on-the-fly to replicate any standard controller button (A, B, X, Y, LB, RB, LT, RT, Left Stick Press, Right Stick Press, D-pad).



Image: Rear view of the PowerA Enhanced Wired Controller, highlighting the two Advanced Gaming Buttons (AGBs) on the grips.

### Programming the Advanced Gaming Buttons:

1. Press the Program Button on the back of the controller. The LED indicator on the front of the controller will flash, signaling programming mode.
2. Press the standard button you wish to map (e.g., 'A' button). The LED will flash rapidly.
3. Press the Advanced Gaming Button (AGB) you want to assign the function to. The LED will stop flashing, indicating successful programming.
4. Repeat the process for the other AGB if desired.

### Resetting Advanced Gaming Buttons:

To reset all AGBs to their default (unmapped) state, press and hold the Program Button for 5 seconds. The LED will flash slowly, then turn off, confirming the reset.

### Headset and Audio Control

The controller features a 3.5mm stereo headset jack for connecting compatible headsets. Use the headset dial located below the D-pad to adjust game volume and mute your microphone.

- **Volume Dial:** Rotate up or down to adjust headset volume.
- **Mic Mute:** Press the volume dial inward to mute or unmute your microphone. The LED on the dial will indicate microphone status (e.g., red for muted).

## MAINTENANCE

To ensure the longevity and optimal performance of your PowerA Enhanced Wired Controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters any openings. Avoid abrasive cleaners or solvents.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. When not in use, coil the detachable USB cable neatly to prevent tangling or damage.
- **Cable Care:** Avoid sharply bending or pulling the USB cable. Always grasp the connector when plugging or unplugging the cable.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

## TROUBLESHOOTING

If you encounter issues with your PowerA Enhanced Wired Controller, refer to the following common solutions:

### Controller Not Responding

- **Check Cable Connection:** Ensure the USB cable is securely plugged into both the controller and the Xbox console/PC. Try unplugging and re-plugging both ends.
- **Try Different USB Port:** Connect the controller to a different USB port on your console or PC.
- **Restart Console/PC:** A system restart can often resolve connectivity issues.
- **Test on Another Device:** If possible, test the controller on another compatible Xbox console or Windows PC to determine if the issue is with the controller or the original device.

## Advanced Gaming Buttons Not Programming

- **Ensure Programming Mode:** Confirm the LED indicator is flashing after pressing the Program Button. If not, press it again.
- **Correct Button Sequence:** Follow the programming steps precisely: Press Program Button, then desired standard button, then desired AGB.
- **Reset AGBs:** Try resetting the AGBs by holding the Program Button for 5 seconds.

## Audio Issues (Headset)

- **Check Headset Connection:** Ensure your headset is fully plugged into the 3.5mm jack on the controller.
- **Adjust Volume Dial:** Rotate the volume dial to increase audio output.
- **Check Mic Mute:** Press the volume dial to ensure the microphone is not muted.
- **System Audio Settings:** Verify your console or PC audio settings are configured to output audio through the controller.

## SPECIFICATIONS

Feature	Detail
Model Name	Enhanced Wired Controller
Compatibility	Xbox Series X S, Xbox One, Windows
Connectivity	Wired USB (Detachable 10ft/3m cable)
Mappable Buttons	Two Advanced Gaming Buttons
Audio Port	3.5mm Stereo Headset Jack
Rumble Feedback	Dual Rumble Motors
Product Dimensions	0.63 x 6.69 x 5.28 inches
Item Weight	7.2 ounces
Manufacturer	POWER A

## WARRANTY INFORMATION

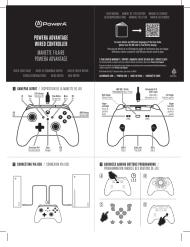
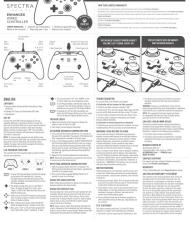
The PowerA Enhanced Wired Controller is backed by a 2-year limited warranty. For detailed warranty terms and conditions, please refer to the official PowerA website or contact customer support.

## SUPPORT

For further assistance, technical support, or warranty claims, please visit the official PowerA support website or refer to the user guide PDF available online.

Official User Guide (PDF): [Download Here](#)

## Related Documents - Enhanced Wired Controller

	<p><a href="#"><u>PowerA FUSION Pro Wireless Controller for Xbox: User Manual</u></a></p> <p>Explore the features and setup guide for the PowerA FUSION Pro Wireless Controller for Xbox, featuring Lumectra lighting, programmable buttons, and customizable controls for an enhanced gaming experience.</p>
	<p><a href="#"><u>PowerA Advantage Wired Controller for Xbox User Manual</u></a></p> <p>User manual for the PowerA Advantage Wired Controller for Xbox, detailing setup, button assignment, profile settings, troubleshooting, and warranty information.</p>
	<p><a href="#"><u>PowerA Special Edition Wireless Controller User Manual for Xbox Series X S</u></a></p> <p>Comprehensive user manual for the PowerA Special Edition Wireless Controller (Model: XBGPSWLI) for Xbox Series X S and Windows. Learn how to connect, charge, program buttons, set trigger depth, manage profiles, and troubleshoot common issues.</p>
	<p><a href="#"><u>PowerA Enhanced Wired Controller for Xbox One User Manual</u></a></p> <p>User manual for the PowerA Enhanced Wired Controller for Xbox One, providing setup, button assignment, troubleshooting, and compliance information.</p>
	<p><a href="#"><u>PowerA Advantage Wired Controller for Xbox Series X S - Quick Start Guide</u></a></p> <p>Official quick start guide for the PowerA Advantage Wired Controller for Xbox Series X S, detailing gamepad layout, connection, advanced button programming, trigger lock adjustment, profile control, audio jack usage, and controller customization via the PowerA Gamer HQ app. Includes warranty information.</p>
	<p><a href="#"><u>PowerA Spectra Infinity Enhanced Wired Controller for Xbox Series X S User Manual</u></a></p> <p>User manual for the PowerA Spectra Infinity Enhanced Wired Controller, detailing setup, LED programming, trigger locks, advanced button assignment, troubleshooting, and warranty information for Xbox Series X S.</p>