

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Qanba](#) /

› [Qanba EVO Dorone Arcade Stick User Manual](#)

Qanba EVO Dorone

Qanba EVO Dorone Arcade Stick User Manual

Model: EVO Dorone

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Qanba EVO Dorone Arcade Stick. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.



Figure 1: Front view of the Qanba EVO Dorone Arcade Stick, showcasing the joystick, action buttons, and blue accents.

SETUP GUIDE

Follow these steps to set up your Qanba EVO Dorone Arcade Stick for the first time.

1. **Unpacking:** Carefully remove the arcade stick from its packaging. Ensure all components are present: the arcade stick unit and any included cables.
2. **Connectivity:** Locate the USB cable attached to the arcade stick.
3. **Connecting to Console/PC:**

- For PlayStation consoles (PS4/PS3): Connect the USB cable directly to an available USB port on your console. The system should automatically detect the device.
- For PC: Connect the USB cable to an available USB port on your computer. Drivers should install automatically. If not, visit the official Qanba website for driver downloads.

4. **Mode Selection:** The arcade stick may have a mode switch (e.g., PS4/PS3/PC). Ensure it is set to the correct mode for your system. Refer to the top panel for switch location.



Figure 2: Angled view of the Qanba EVO Dorone, highlighting the layout of the joystick and action buttons.

OPERATING INSTRUCTIONS

Understanding the controls and functions of your arcade stick.

Button Layout

The Qanba EVO Dorone features a standard arcade button layout. The main action buttons are typically arranged in an 8-button Vewlix style configuration.

- **Joystick:** Used for directional input (Up, Down, Left, Right, and diagonals).
- **Action Buttons:** (X, O, Square, Triangle, L1, R1, L2, R2 for PlayStation; corresponding buttons for PC).
- **System Buttons:** PS Button, Share, Options (Start>Select), Turbo, Mode.

Mode Switch

The mode switch allows you to select the compatibility mode for your device. Ensure it is set correctly for your platform (e.g., PS4, PS3, PC).

Turbo Function

To activate the Turbo function for a specific button:

1. Press and hold the **TURBO** button.
2. While holding TURBO, press the desired action button (e.g., X, O) you wish to apply turbo to.
3. Release both buttons. The selected button will now rapidly register inputs when held down.

To deactivate Turbo for a button, repeat the process.



Figure 3: Top-down view of the Qanba EVO Dorone, providing a clear overview of all control elements including system buttons.

MAINTENANCE AND CARE

Proper care will extend the life of your arcade stick.

- Cleaning:** Use a soft, dry cloth to wipe down the surface of the arcade stick. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components. Avoid abrasive cleaners or solvents.
- Storage:** Store the arcade stick in a cool, dry place away from direct sunlight and extreme temperatures.
- Cable Management:** Avoid sharp bends or kinks in the USB cable to prevent damage.
- Joystick and Buttons:** These components are designed for durability, but excessive force or impact can cause damage.

TROUBLESHOOTING

Common issues and their solutions.

Problem	Possible Cause	Solution
Arcade stick not recognized by console/PC.	Incorrect mode selected; loose USB connection; driver issue (PC).	Check the mode switch on the arcade stick and set it to the correct platform. Ensure the USB cable is securely connected to both the arcade stick and the console/PC. Try a different USB port. For PC, try reinstalling drivers or checking Device Manager.
Buttons or joystick unresponsive.	Physical damage; internal connection issue; software conflict.	Test the arcade stick on another console/PC if possible. Ensure no debris is lodged under buttons. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Turbo function not working.	Incorrect activation; button not supported for turbo.	Re-read the Turbo activation steps in the Operating Instructions section. Ensure you are applying Turbo to an action button.

SPECIFICATIONS

- Model:** Qanba EVO Dorone
- ASIN:** B08F4GRFXH
- Package Dimensions:** 15.47 x 10.51 x 6.69 inches
- Item Weight:** 4.03 pounds
- Connectivity:** USB Wired
- Compatibility:** PlayStation (PS4/PS3), PC
- Date First Available:** September 15, 2020

WARRANTY INFORMATION

Qanba products typically come with a limited manufacturer's warranty covering defects in materials and workmanship. The duration and terms of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.

For specific warranty details, please refer to the warranty card included with your product or visit the official Qanba website.

CUSTOMER SUPPORT

 
If you encounter any issues not covered in this manual or require further assistance, please contact Qanba customer support.

- Official Website:** For FAQs, driver downloads, and support contact information, please visit the official Qanba website.
- Online Resources:** Check online forums and communities for user-generated solutions and tips.

© 2024 Qanba. All rights reserved.

Related Documents - EVO Dorone

	<p>Qanba Drone 2 Arcade Joystick Instruction Manual</p> <p>Instruction manual for the Qanba Drone 2 Arcade Joystick, covering operating instructions, mode switch, turbo button functionality, mute button features, specifications, safety warnings, and compliance information.</p>
--	---

	<p>Qanba Titan Arcade Joystick (B1) Instruction Manual</p> <p>Instruction manual for the Qanba Titan Arcade Joystick (Model B1), detailing features, operation, specifications, and safety warnings. Includes multilingual support for English, French, Spanish, German, and Italian.</p>
	<p>Qanba Gravity KT Arcade Button Instruction Manual</p> <p>Comprehensive guide for the Qanba Gravity KT Arcade Button, detailing its specifications, installation, usage, and maintenance. Features adjustable gravity for personalized gaming experiences.</p>
	<p>Qanba Titan Arcade Joystick Instruction Manual</p> <p>Comprehensive instruction manual for the Qanba Titan Arcade Joystick (Model: B1), detailing its features, operating instructions, and safety guidelines.</p>
	<p>Qanba Obsidian 2 Arcade Joystick Instruction Manual</p> <p>Comprehensive instruction manual for the Qanba Obsidian 2 Arcade Joystick (Model: Q7), detailing operating instructions, features, specifications, and safety warnings for PlayStation 5/4 and PC use.</p>
	<p>Qanba Drone 2 Arcade Joystick Instruction Manual</p> <p>Instruction manual for the Qanba Drone 2 Arcade Joystick, covering operating instructions, mode switch, turbo button functionality, mute button features, specifications, safety warnings, and compliance information.</p>