

[Manuals.plus](#) /

› [Magic Bullet](#) /

› Magic Bullet Mini Blender Instruction Manual

Magic Bullet 103333 magic

Magic Bullet Mini Blender Instruction Manual

MODEL: 103333 MAGIC

Introduction

Welcome to the Magic Bullet Mini Blender user manual. This guide provides essential information for the safe and effective operation, maintenance, and care of your new 7-piece, 200-watt mini blender. Designed for quick and efficient blending, this compact appliance is ideal for preparing smoothies, sauces, and more.



Image: The Magic Bullet Mini Blender, showcasing its compact design with a cup filled with fresh fruit and a separate cup containing a prepared smoothie.

Included Components

Your Magic Bullet Mini Blender 7-piece set includes the following:

- **Blender Base:** The main power unit.
- **Cross Blade:** The blending attachment for processing ingredients.
- **Tall Cup:** A larger blending cup.
- **Short Cup:** A smaller blending cup.
- **Resealable Lids:** For storing blended contents.





Image: A close-up view of the Magic Bullet Mini Blender's components, including the silver power base, an empty blending cup, and the detachable cross blade.

Setup

Before first use, wash all components that will come into contact with food in warm, soapy water. Rinse thoroughly and dry. Place the blender base on a clean, dry, and stable surface. Ensure the power cord is unplugged before assembly.

1. **Attach the Cross Blade:** Securely twist the cross blade onto the open end of the cup (Tall or Short Cup) until it is tightly sealed.
2. **Add Ingredients:** Fill the cup with your desired ingredients. Do not exceed the 'MAX' line indicated on the cup.
3. **Invert and Place:** Invert the filled cup with the attached blade and place it onto the power base. Align the tabs on the cup with the slots on the base.
4. **Secure the Cup:** Press down firmly on the cup and twist clockwise until it locks into place. This activates the blending mechanism.

Operating Instructions

The Magic Bullet Mini Blender operates with a simple press-and-twist mechanism.

- **Pulse Blending:** For quick bursts of blending, press the cup down firmly onto the power base. Release pressure to stop. This is ideal for chopping or creating chunky textures.
- **Continuous Blending:** For smooth results, press the cup down firmly and twist clockwise until the tabs lock into place. The blender will operate continuously. To stop, twist the cup counter-clockwise and lift it off the base.
- **Overload Protection:** If the motor stalls or the blender overheats, unplug the unit immediately. Allow it to cool down for at least 15 minutes before attempting to use it again. Reduce the amount of ingredients or add more liquid if necessary.





Image: The Magic Bullet Mini Blender with its cup filled with a colorful mix of berries and pineapple, ready for blending.

Maintenance and Cleaning

Proper cleaning and maintenance will extend the life of your Magic Bullet Mini Blender. Always unplug the power base before cleaning.

- **Blade and Cups:** Wash the cross blade, cups, and lids immediately after each use. These components are top-rack dishwasher safe, or can be hand-washed with warm, soapy water. Use a brush to clean around the blades carefully.
- **Power Base:** Wipe the power base with a damp cloth. Never immerse the power base in water or any other liquid.
- **Storage:** Store the blender and its components in a clean, dry place when not in use.

Troubleshooting

If you encounter issues with your Magic Bullet Mini Blender, refer to the common problems and solutions below:

Problem	Solution
Blender does not turn on.	Ensure the unit is properly plugged into a working electrical outlet. Check that the cup is securely twisted and locked onto the power base.
Ingredients are not blending smoothly.	Add more liquid to the mixture. Do not overfill the cup. Use the pulse function to break down larger pieces before continuous blending.
Motor smells or overheats.	Unplug the unit and allow it to cool for 15 minutes. Reduce the load by removing some ingredients or adding more liquid. Do not operate for more than one minute continuously.

Specifications

Feature	Detail
Brand	Magic Bullet
Model Number	103333 magic
Color	Silver
Product Dimensions	20"D x 20"W x 20"H
Item Weight	1.7 pounds
Power Source	Corded Electric
Voltage	220 Volts
Number of Speeds	1
Recommended Uses	Blending

Warranty and Support

Warranty: This Magic Bullet Mini Blender comes with a 1 Year Limited Warranty from the date of purchase. Please retain your proof of purchase for all warranty claims.

Support: For product support, replacement parts, or warranty inquiries, please refer to the contact information provided in your product packaging or visit the official Magic Bullet website for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question