



Manuals.plus /

› BoostArea /

› BoostArea Industrial Floor Lamp B0601 User Manual

BoostArea B0601

BoostArea Industrial Floor Lamp B0601 User Manual

Model: B0601

1. INTRODUCTION

Thank you for purchasing the BoostArea Industrial Floor Lamp, Model B0601. This standing lamp is designed to provide versatile lighting with a minimalist, industrial aesthetic, suitable for various room styles. It features a durable metal construction, an E26 standard base socket, and a convenient footswitch for easy operation. This manual provides essential information for safe assembly, operation, and maintenance of your new floor lamp.



Image 1.1: BoostArea Industrial Floor Lamp, showcasing its minimalist design and exposed bulb socket.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- **Electrical Safety:** Always unplug the lamp from the power outlet before cleaning, changing the bulb, or performing any maintenance.
- **Bulb Compatibility:** Use only E26 base bulbs. Do not exceed the maximum wattage of 60 Watts.
- **Placement:** Place the lamp on a stable, level surface to prevent tipping. Keep the power cord away from high-traffic areas to avoid tripping hazards.
- **Indoor Use Only:** This lamp is designed for indoor use only. Do not expose to water or high humidity.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use abrasive cleaners or solvents.

- **Damaged Cord:** Do not operate the lamp if the cord or plug is damaged. Contact customer support for assistance.
- **Children and Pets:** Keep the lamp out of reach of children and pets to prevent accidents.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before assembly. If any parts are missing or damaged, please contact BoostArea customer support.

- Lamp Base (1)
- Lamp Pole Sections (Multiple, pre-wired)
- Lamp Head with E26 Socket (1)
- Power Cord with Footswitch (Integrated)
- *Note: Bulb is not included.*

4. ASSEMBLY INSTRUCTIONS

Assembly of the BoostArea Industrial Floor Lamp is straightforward and requires no tools. Follow these steps:

1. Carefully unpack all components from the packaging.
2. Place the lamp base on a flat, stable surface.
3. Begin screwing the lowest pole section into the lamp base clockwise until secure. Ensure the power cord passes freely through the pole sections.
4. Continue screwing the remaining pole sections together in sequence, ensuring each connection is tight. The wiring is pre-threaded through the poles.
5. Finally, screw the lamp head (with the E26 socket) onto the top pole section.
6. Insert an E26 base bulb (not included) into the lamp socket. Do not overtighten.
7. Plug the power cord into a standard 120V AC outlet.

Easy to Assemble

No Tools Required
(bulb not included)



Image 4.1: Visual guide for assembling the lamp pole sections and attaching the base and lamp head.

An Ideal Lamp for Your Home

The collision of art and life



Image 4.2: The assembled lamp integrated into a home environment, demonstrating its aesthetic appeal.

5. OPERATING INSTRUCTIONS

Your BoostArea Industrial Floor Lamp is designed for simple operation:

- Once assembled and plugged into a power outlet, locate the footswitch on the power cord.
- Gently press the footswitch with your foot to turn the lamp ON.
- Press the footswitch again to turn the lamp OFF.
- **Bulb Selection:** The E26 socket allows for various bulb types (LED or Incandescent) up to 60W. Experiment with different bulb shapes and colors to customize the lamp's appearance and light output.



Scientific Design

Bulb not included

Image 5.1: The integrated footswitch for convenient on/off control.



Image 5.2: Examples of various E26 bulbs that can be used with the lamp, allowing for personalized styling.

6. MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged before cleaning. Wipe the metal surfaces with a soft, dry cloth. Do not use liquid cleaners or sprays directly on the lamp.
- **Bulb Replacement:** Always unplug the lamp and allow the bulb to cool completely before attempting to replace it. Screw in a new E26 bulb, ensuring it does not exceed 60 Watts.
- **Cord Care:** Regularly inspect the power cord for any signs of damage, fraying, or cuts. If damage is found, discontinue use and contact customer support.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	<ul style="list-style-type: none"> Lamp not plugged in. Bulb is loose or burnt out. Power outlet is not functioning. 	<ul style="list-style-type: none"> Ensure the power cord is securely plugged into a working outlet. Tighten the bulb or replace it with a new one. Test the outlet with another appliance.
Lamp is wobbly after assembly.	<ul style="list-style-type: none"> Pole sections are not fully tightened. 	<ul style="list-style-type: none"> Unplug the lamp and re-tighten all pole sections firmly.
Footswitch not responding.	<ul style="list-style-type: none"> Internal wiring issue or switch malfunction. 	<ul style="list-style-type: none"> Ensure the lamp is plugged in. If the issue persists, contact customer support. Do not attempt to repair internal wiring.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	B0601
Brand	BoostArea
Dimensions (H x W x D)	63" x 8" x 8" (approx.)
Item Weight	5.5 pounds
Material	Metal
Finish Type	Matte Black
Bulb Base	E26 Medium
Maximum Compatible Wattage	60 Watts
Power Source	Corded Electric
Voltage	120 Volts
Switch Type	Foot Switch
Certification	ETL Listed
Indoor/Outdoor Usage	Indoor
Assembly Required	Yes

Premium Metal & ETL Certificate



Image 8.1: Detail showing the 100% metal construction and ETL safety certification.

9. WARRANTY INFORMATION

BoostArea products are manufactured with quality and durability in mind. For specific warranty details regarding your B0601 Industrial Floor Lamp, please refer to the warranty card included with your purchase or visit the official BoostArea website. Please retain your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your BoostArea Industrial Floor Lamp, please contact our customer support team:

- **Online Support:** Visit the official BoostArea store on Amazon:BoostArea Store

- **Manufacturer:** Xiang He Lighting Co.,Ltd BoostArea