

TIMBER RIDGE FC850-065C-SGY

Timber Ridge Oversized Director's Chair

Model: FC850-065C-SGY

INTRODUCTION

Thank you for choosing the Timber Ridge Oversized Director's Chair. This manual provides essential information for the safe and effective use of your chair. Please read it thoroughly before assembly and use, and retain it for future reference. This chair is designed for comfort and durability in various outdoor settings, including camping, fishing, picnics, and other leisure activities. It features a robust construction, an extra-wide seat, and convenient accessories like a side table and storage pockets.

SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 600 lbs (272.2 kg). Overloading can cause damage to the chair and lead to injury.
- **Pinch Points:** Exercise caution when unfolding or folding the chair to avoid pinching fingers or hands in the moving parts of the frame.
- **Stability:** Always ensure the chair is fully opened and all legs are stable on a flat, level surface before sitting. Uneven surfaces can cause the chair to tip.
- **Side Table:** Do not place excessive weight on the side table. Ensure it is securely locked in place before use.
- **Children:** Keep children away from the chair during unfolding and folding operations. Supervise children when they are using the chair.
- **Modifications:** Do not modify the chair in any way. Unauthorized modifications can compromise safety and void the warranty.

PACKAGE CONTENTS

- 1 x Timber Ridge Oversized Director's Chair (Model FC850-065C-SGY)
- 1 x Detachable Shoulder Strap

SETUP INSTRUCTIONS

1. **Unfolding the Chair:** Place the folded chair on a flat surface. Gently pull the armrests apart until the chair frame fully extends and locks into its open position. Ensure all four legs are firmly on the ground and the chair feels stable.
2. **Deploying the Side Table:** Locate the foldable side table on the right-hand side of the chair. Swing the table outwards until it clicks into its horizontal, locked position. Verify that the table is secure before placing items on it.
3. **Attaching the Detachable Cooler Bag:** If desired, attach the detachable cooler bag to the side of the chair using the integrated straps or clips.



Image: The Timber Ridge Director's Chair in its unfolded state, displaying its overall dimensions and the 600 lbs weight capacity.

EXTRA LARGE CAMPING CHAIR

Wider and bigger designed




Image: The director's chair with its integrated side table extended, showing the cup holder feature.

OPERATING INSTRUCTIONS

- **Using the Side Table:** The right-hand side table is designed to hold small items such as mobile phones, drinks, or snacks. Always ensure it is locked in the open position before use.
- **Utilizing Storage Pockets:** The chair features a detachable cooler bag and a bottom pocket. Use the cooler bag to keep beverages chilled for extended periods. The bottom pocket is suitable for storing smaller personal items like keys or a phone.

DESIGNED FOR COMFORT

600 D FABRIC
Soft and Breathable

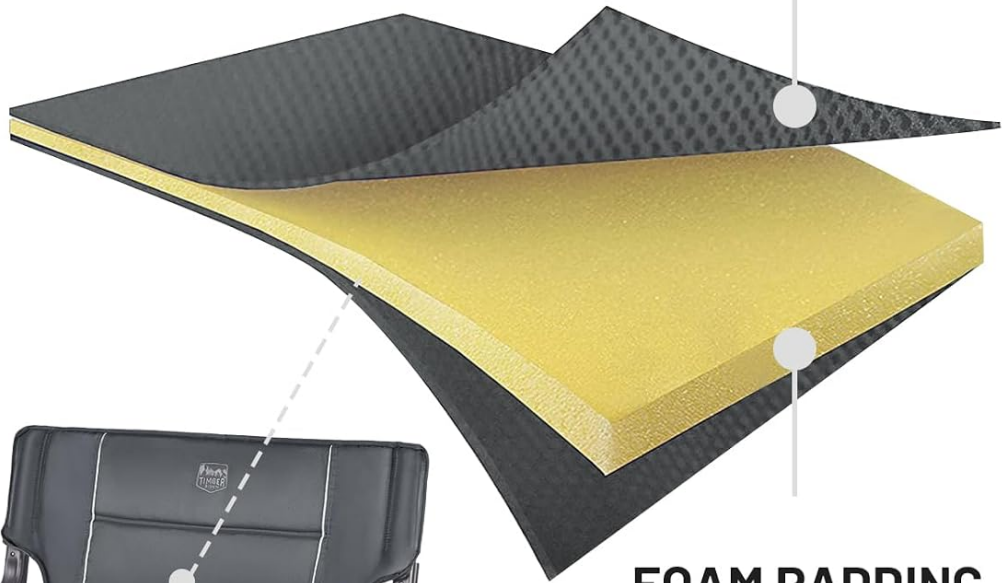

FOAM PADDING
Provides extra comfort



Image: A close-up view of the chair's side table, highlighting the integrated cup holder.

DETACHABLE COOLER BAG

Built-in cooler bag keeps
drinks chilled for hours



Image: The detachable cooler bag attached to the chair, shown with two bottles inside, demonstrating its chilling capability.



Image: A hand demonstrating the use of the chair's bottom pocket by placing a smartphone inside.

MAINTENANCE

- **Cleaning:** Clean the chair fabric and frame with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners that could damage the material or finish.
- **Drying:** Ensure the chair is completely dry before folding and storing to prevent mold or mildew growth.
- **Storage:** Store the chair in a dry, cool place away from direct sunlight when not in use.
- **Inspection:** Periodically inspect the frame, fabric, and all moving parts for any signs of wear, damage, or loose components. Tighten any loose screws if necessary.

TROUBLESHOOTING

- **Chair is difficult to fold/unfold:** Check for any obstructions in the folding mechanism. If joints are stiff, apply a

small amount of silicone-based lubricant to the pivot points.

- **Side table does not lock securely:** Ensure the table is fully extended until it clicks into place. If the locking mechanism appears damaged, avoid using the side table to prevent items from falling.
- **Carrying strap broke:** If the detachable shoulder strap or its attachment points are damaged, discontinue use of the strap. Contact customer support for potential replacement options.
- **Chair feels unstable:** Verify that the chair is on a flat, level surface and that all legs are fully extended and locked. Do not use if the frame is bent or damaged.

SPECIFICATIONS

Feature	Detail
Model Number	FC850-065C-SGY
Unfolded Dimensions (W x D x H)	71 x 50 x 86 cm (28 x 19.7 x 33.9 inches)
Folded Dimensions	16 x 60 x 92 cm (6.3 x 23.6 x 36.2 inches)
Seat Width	45.7 cm (18 inches)
Seat Depth	50.8 cm (20 inches)
Seat Height	18.1 inches
Weight Capacity	600 lbs (272.2 kg)
Item Weight	9.98 kg (22 lbs)
Frame Material	25mm Steel tube with powder coating
Fabric Material	600D embossed polyester fabric
Padding Material	Foam
Special Features	Padded headrest, Padded armrests, Foldable side table, Detachable cooler bag, Bottom pocket



Image: A visual comparison illustrating the wider design of the Timber Ridge Oversized Director's Chair compared to a standard camping chair.



WEIGHT
CAPACITY **600** lbs



PRODUCT
WEIGHT **22** lbs

Image: The director's chair shown in its folded position, demonstrating its compact storage capability.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact Timber Ridge customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question