

- Manuals.plus /
- › DmofwHi /
 - › DmofwHi Electric Garlic Chopper (Model DSC101G) User Manual

DmofwHi DSC101G

DmofwHi Electric Garlic Chopper User Manual

Model: DSC101G | Brand: DmofwHi

1. INTRODUCTION

Thank you for choosing the DmofwHi Electric Garlic Chopper, Model DSC101G. This cordless, USB rechargeable mini food chopper is designed to simplify food preparation tasks by quickly chopping various ingredients. Please read this manual thoroughly before use to ensure safe and efficient operation.



Image: The DmofwHi Electric Garlic Chopper, featuring its compact design and blue-green top.

2. SAFETY INSTRUCTIONS

- **Sharp Blades:** The stainless steel blades are very sharp. Handle with extreme care during assembly, disassembly, and cleaning to prevent injury.
- **Child Safety Lock:** The chopper is equipped with a magnetic child safety lock. Ensure the lid and bowl are correctly attached for the device to operate. This prevents accidental activation.
- **Water Exposure:** The motor unit (top part) should not be submerged in water. The bowl and blades are detachable and can be rinsed directly.
- **Not Dishwasher Safe:** Do not place any part of the chopper in a dishwasher. Hand wash only.

- **Charging:** Use the provided USB cable for charging. Do not attempt to use other charging methods.
- **Food Preparation:** Ensure food items are cut into small, manageable pieces before placing them in the chopper to avoid overloading the motor and blades.
- **Supervision:** Keep the device out of reach of children. Adult supervision is required when the device is in use.

3. PRODUCT OVERVIEW

Components

- Motor Unit (Lid with power button and USB charging port)
- 304 Stainless Steel Chopping Blade
- 250ml Capacity Container/Bowl

Key Features

- **Cordless & Portable:** Designed for convenience and easy storage, suitable for home use, camping, and travel.
- **USB Rechargeable:** Charges via USB. A 3-hour charge provides extended use.
- **One-Touch Operation:** Simple press-and-release button for control.
- **Powerful Motor:** Equipped with a 60W motor for efficient chopping.
- **Durable Blades:** Food-grade 304 stainless steel blades are resistant to rust and corrosion.
- **Waterproof Design:** The detachable bowl and blades are designed for easy rinsing.

Make your life convenient

Cordless & Portable Garlic Chopper
Compact size for your convenient storage



Image: The chopper's compact size makes it portable and easy to store.

USB Rechargeable

3-Hour Charging
available for 30 times use



Image: The USB charging port for convenient recharging.

4. SETUP

1. **Charge the Device:** Before first use, fully charge the chopper using the provided USB cable. The charging port is located under the orange button on the motor unit.
2. **Insert Blade:** Carefully place the stainless steel chopping blade onto the central pin inside the transparent container. Ensure it sits securely.
3. **Add Ingredients:** Place your desired ingredients into the container. Do not exceed the 'MAX' fill line. For best results, cut larger ingredients into smaller pieces (e.g., 1-inch cubes) before chopping.
4. **Attach Motor Unit:** Align the motor unit (lid) with the container and twist gently until it locks securely into place. The magnetic safety lock will engage, allowing the device to operate.



Step 1: Insert the blade.



Step 2: Add ingredients.

5. OPERATING INSTRUCTIONS

1. Ensure the chopper is properly assembled and charged.
2. Press and hold the power button located on top of the motor unit to begin chopping.
3. Release the button to stop chopping. Pulse the button for coarse chopping or hold for finer results.
4. Chop for approximately 30 seconds for even results. Adjust chopping time based on desired consistency.
5. Once chopping is complete, carefully remove the motor unit and then the blade before emptying the contents.

Suitable Ingredients

This mini chopper is ideal for small jobs such as chopping garlic, ginger, chili, onions, peanuts, other vegetables, and small amounts of cooked meat.

One-Button Operation



Image: One-touch power operation for ease of use.

MEET

all your needs
of different
seasonings



Image: Examples of ingredients that can be chopped, including garlic, ginger, and chili.

Demonstration Videos

Video: A demonstration of the DmofwHi Cordless Kitchen Chopper in action, showing its ease of use for various ingredients.

Video: This video illustrates how the chopper can make cooking easier by quickly processing ingredients.

6. CLEANING AND MAINTENANCE

- **Disassembly:** After each use, detach the motor unit from the container. Carefully remove the blade.
- **Hand Wash Only:** Rinse the container and blade directly with water. Use a mild detergent and a soft brush if necessary to remove any food residue.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not submerge it in water or rinse it under running water.
- **Drying:** Ensure all parts are thoroughly dried before reassembling or storing to prevent rust and maintain hygiene.
- **Storage:** Store the clean and dry chopper in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Chopper does not turn on.	Low battery or improper assembly.	Ensure the device is fully charged. Verify that the motor unit and container are securely locked together, engaging the magnetic safety lock.
Chopper stops during operation or blades spin slowly.	Overloaded with ingredients or low battery.	Reduce the amount of ingredients. Cut larger items into smaller pieces. Recharge the device.
Food is not chopped evenly.	Ingredients are too large or unevenly distributed.	Cut ingredients into uniform, smaller pieces. Use the pulse function for better control over consistency.
Unusual noise or vibration.	Improper assembly or foreign object.	Disassemble and reassemble the chopper, ensuring the blade is correctly seated. Check for any foreign objects. If the issue persists, discontinue use and contact customer support.

8. SPECIFICATIONS

- **Brand:** DmofwHi
- **Model Name:** DSC101G
- **Special Feature:** USB Rechargeable
- **Product Dimensions:** 3.94"D x 3.94"W x 4.33"H
- **Color:** Blue (Specific unit color, other colors may be available)
- **Bowl Capacity:** 250ml (8.5 Ounces)
- **Recommended Uses:** Chopping garlic, ginger, onion, chili, nuts, vegetables, small amounts of meat.
- **Number of Speeds:** 1
- **Product Care Instructions:** Hand Wash
- **Included Components:** Chopping Blade, Container, Lid (Motor Unit)
- **Is Dishwasher Safe:** No
- **Blade Material:** Stainless Steel
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Item Weight:** 13.1 ounces
- **Wattage:** 37 watts

9. WARRANTY AND SUPPORT

For any product inquiries, technical assistance, or warranty claims, please contact DmofwHi customer service. While specific warranty details are not provided in this manual, the manufacturer is committed to customer satisfaction. Please retain your proof of purchase for any support requests.

Contact information can typically be found on the product packaging or the official DmofwHi website.

© 2023 DmofwHi. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08F5C6CDP>

More documents and user manuals: <https://manuals.plus/>