

Domo DO530FR

DOMO DO530FR Deli-fryer Instruction Manual

Model: DO530FR

1. INTRODUCTION

Thank you for purchasing the DOMO DO530FR Deli-fryer. This appliance is designed to provide a fast and energy-efficient way to prepare a variety of meals with significantly less fat compared to traditional frying methods. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new air fryer. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
- Do not immerse the main unit, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep children and pets away from the appliance during operation. The exterior surfaces can become hot.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Never use accessories or parts not recommended by the manufacturer.
- Do not block the air inlet or outlet vents during operation.
- Exercise extreme caution when removing the hot air fryer basket. Hot steam may escape.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your DOMO DO530FR Deli-fryer:

- **Main Unit:** Houses the heating element, fan, and control panel. Features a cool-touch stainless steel housing.
- **Control Panel:** LCD screen with touch controls for temperature, timer, and program selection.
- **Frying Basket:** Removable basket for holding food during cooking.
- **Non-stick Grill Plate:** Inserted into the frying basket to allow fat to drain and ensure even cooking.

- **Handle:** Ergonomic handle for safely pulling out and inserting the frying basket.



Image 2.1: Exploded view showing the main unit, frying basket, and non-stick grill plate.

3. SETUP AND FIRST USE

Unpacking

1. Carefully remove all packaging materials from the appliance.
2. Check that all components are present and undamaged.

Initial Cleaning

1. Before first use, clean the frying basket and the non-stick grill plate with hot water, a mild dishwashing liquid, and a non-abrasive sponge.
2. Rinse thoroughly and dry all parts completely.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

Placement

1. Place the DOMO DO530FR Deli-fryer on a stable, level, and heat-resistant surface.
2. Ensure there is at least 10 cm of free space around the appliance (sides and back) and above it to allow for proper ventilation.
3. Do not place the appliance near flammable materials or heat sources.

First Use (Burn-in Cycle)

It is recommended to run the appliance empty for about 10-15 minutes during its first use to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal and will dissipate quickly.

1. Insert the grill plate into the frying basket, then slide the basket into the main unit.
2. Plug the power cord into a grounded wall outlet.
3. Set the temperature to 180°C and the timer to 15 minutes.
4. Allow the appliance to run. Once complete, unplug and let it cool down before proceeding with cooking.

4. OPERATING INSTRUCTIONS

The DOMO DO530FR Deli-fryer features an intuitive LCD screen and 8 automatic programs for ease of use.



Image 4.1: The DOMO DO530FR Deli-fryer in operation, showing the digital display.

Basic Operation

1. **Prepare Food:** Place your ingredients on the non-stick grill plate inside the frying basket. Do not overfill the basket

to ensure even cooking.

2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks into place.
3. **Power On:** Plug the appliance into a grounded wall outlet. The LCD screen will illuminate.
4. **Select Program or Manual Settings:**
 - **Automatic Programs:** Press the 'Menu' button (usually represented by an icon like three horizontal lines or a specific program icon) to cycle through the 8 pre-set programs for common foods like fries, chicken, meat, fish, etc. Each program has a default temperature and time.
 - **Manual Settings:** Use the temperature control buttons (up/down arrows or a dial) to set the desired temperature (80°C to 200°C). Use the timer control buttons to set the cooking time (up to 60 minutes).
5. **Start Cooking:** Press the 'Start/Pause' button to begin the cooking process. The fan and heating element will activate.
6. **Shake Basket (Optional):** For some foods, especially fries or smaller items, it is recommended to shake the basket halfway through the cooking time to ensure even browning. The appliance will pause automatically when the basket is pulled out and resume when re-inserted.
7. **End of Cooking:** The appliance will beep when the timer reaches zero. Carefully pull out the basket using the cool-touch handle.
8. **Serve:** Remove the cooked food from the basket. Use tongs or a spatula to avoid scratching the non-stick coating.



Image 4.2: The air fryer basket containing cooked fries, pulled out for inspection or serving.

Cooking Tips

- For crispy results, lightly coat fresh ingredients with a small amount of oil.
- Pre-packaged frozen foods often require no additional oil.
- Smaller pieces of food generally require shorter cooking times.
- For larger quantities, you may need to increase cooking time or cook in batches.
- The appliance is versatile and can be used for fries, croquettes, chicken, meat, quiche, and even cake.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your DOMO DO530FR Deli-fryer.

Before Cleaning

1. Always unplug the appliance from the power outlet.
2. Allow the air fryer to cool down completely before cleaning.

Cleaning the Frying Basket and Grill Plate

The frying basket and non-stick grill plate are dishwasher safe, but hand washing is recommended to preserve the non-stick coating.

1. Remove the frying basket and grill plate from the main unit.
2. Wash them with hot water, a mild dishwashing liquid, and a non-abrasive sponge.
3. For stubborn food residues, soak the basket and plate in hot soapy water for about 10 minutes before cleaning.
4. Rinse thoroughly and dry completely before reassembling or storing.

Cleaning the Main Unit

1. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads, as they can damage the stainless steel finish.
2. Clean the interior of the appliance with a damp cloth. If necessary, a soft brush can be used to gently remove food residue from the heating element.
3. Ensure the interior is completely dry before plugging in or storing the appliance.

Storage

Store the cleaned and dried appliance in a cool, dry place, away from direct sunlight and out of reach of children.

6. TROUBLESHOOTING

If you encounter any issues with your DOMO DO530FR Deli-fryer, please consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the frying basket fully into the main unit until it clicks.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket overloaded; food not shaken during cooking.	Do not overload the basket. Cook in smaller batches if necessary. Shake the basket halfway through cooking.
White smoke comes from the appliance.	Greasy residue from previous use; high-fat ingredients.	Clean the basket and grill plate thoroughly after each use. For high-fat foods, excess fat may drip onto the heating element, causing smoke. This is normal.
Food is not crispy.	Not enough oil (for fresh ingredients); temperature too low; cooking time too short.	Lightly brush fresh ingredients with oil. Increase temperature or cooking time as needed. Ensure the basket is not overloaded.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	DO530FR
Brand	Domo
Capacity	4 Liters (1.2 kg food capacity)
Power	1500 Watts
Voltage	230 Volts
Temperature Range	80°C to 200°C
Timer	Up to 60 minutes
Dimensions (L x W x H)	34 x 27.2 x 33.5 cm
Weight	4.98 Kilograms
Material	Stainless Steel housing
Special Features	LCD screen, 8 automatic programs, Temperature control, Overheating protection, Cool-touch housing

8. WARRANTY AND SUPPORT

Warranty Information

Your DOMO DO530FR Deli-fryer is covered by a manufacturer's warranty, typically for a period of two years from the date of purchase. This warranty covers manufacturing defects and material faults. Please retain your proof of purchase (receipt or invoice) as it will be required for any warranty claims. The warranty does not cover damage resulting from improper use, neglect, accidental damage, or normal wear and tear.

Customer Support

Related Documents - DO530FR



DOMO



DO530FR

Handleiding	Deli-fryer
Mode d'emploi	Deli-fryer
Gebruiksaanwijzing	Deli-fryer
Instruction booklet	Deli-fryer
Manuale istruzioni	Deli-fryer
Istruzioni per l'uso	Deli-fryer
Hávod k použití	Horkovzdusná fritiza Deli-Fryer
Hávod na použitie	Teplovzdusná fritiza Deli-Fryer

PRODUCT OF LINEA

[pdf] User Manual Instructions

DOMO DO530FR 869626 Manual domo do530fr manuals coolblue nl 70 |||

DO530FR Handleiding Deli-fryer Mode d'emploi Deli-fryer Gebruiksaanleitung Deli-fryer Instruction booklet Deli-fryer Manual de instrucciones Deli-fryer Istruzioni per l'uso Deli-fryer Nvod k použití Horkovzdusná fritiza Deli-Fryer Nvod na použitie Teplovzdusná fritiza Deli-Fryer PRODUCT O...

lang:nl score:51 filesize: 3.04 M page_count: 60 document date: 2020-01-15



DOMO DO530FR frytkownica, stal nierdzewna 18/8, srebrna, 4 litry

Indeks: 630313 Producent: DOMO Kod producenta: DO530FR

Cena: 398.56 zł

Opis

DOMO DO530FR frytkownica, stal nierdzewna 18/8, srebrna, 4 litry

Producent: DOMO

Frytkownica Domo DO530FR to doskonałe rozwiązanie dla miłośników smażonych przekąsek. Dzięki technologii grzewczego powłoki można przygotować potrawę fryki, kotlety, mięso walek smażone i 80% mniej tłuszczu. Regulowana temperatura, timer i programy, ułatwiają precyzyjne gotowanie. Plastikowa i stalowa pokrywa zapewniają bezpieczeństwo użytkownika i ochronę przed przegrzaniem, przy niedostępnym sterowaniu w Twoim domu.

Ta Frytkownica 4 litrowa to nie tylko funkcjonalne urządzenie, ale również designowy element Twojej kuchni. Chłodzenie Cool Touch zachowuje bezpieczną temperaturę na zewnętrznej części Frytkownicy Domo DO530FR. Wykonana ze stali nierdzewnej, zabezpieczona przed przegrzaniem, jest idealnym rozwiązaniem w Twoim domu.

Dzięki nowoczesnej smażalniczy, smażalnicy i ułatwionej praktyczności przygotowania przy użyciu Frytkownicy Domo DO530FR. Zaimponuj w kuchni i kochaj gotowanie bez dodatkowego tłuszczu. Zapewnij sobie zdrowie, smaczne i zdrowe posiłki na co dzień!

- Frytkownica na grzewczą powłokę: do 80% mniej tłuszczu w potrawach z tradycyjnym frytkowaniem. Szybka i wygodna powłoka zapewnia szybkie smażenie i smażenie smażone.
- Do przygotowania fryki, kotletów, mięsa, ryb, drożdży, mięsa, kurczaka, ciasta i wielu innych.
- Programy: 4-1-2, 2-2, regulowana temperatura: 80°C - 200°C, timer do 60 minut, 8 automatycznych programów.
- Praktyczna do smażenia i natychmiast na pokrywie wykładają plastikową powłokę zapobiegającą przegrzaniu. Łatwa do czyszczenia i konserwacji.
- Chłodzenie Cool Touch ze stali nierdzewnej, zabezpieczenie przed przegrzaniem 220 V - 50 Hz - 1500 W.

- Waga produktu: 4,5 kilograma
- Użytkownik: 1
- Nazwa modelu: DO530FR
- punkt zlokalizacji: Frytkownica. Frytkownica na grzewczą powłokę: do 80% mniej tłuszczu w potrawach z tradycyjnym frytkowaniem. Szybka i wygodna powłoka zapewnia szybkie smażenie i smażenie smażone. Do przygotowania fryki, kotletów, mięsa, ryb, drożdży, mięsa, kurczaka, ciasta i wielu innych. Programy: 4-1-2, 2-2, regulowana temperatura: 80°C - 200°C, timer do 60 minut, 8 automatycznych programów. Praktyczna do smażenia i natychmiast na pokrywie wykładają plastikową powłokę zapobiegającą przegrzaniu. Łatwa do czyszczenia i konserwacji. Chłodzenie Cool Touch ze stali nierdzewnej, zabezpieczenie przed przegrzaniem 220 V - 50 Hz - 1500 W.

[pdf]

DOMO DO530FR frytkownica stal nierdzewna 18 8 srebrna 4 litry Sklep internetowy stylem pl domo do530fr 630313 upload files product |||

DOMO **DO530FR** frytkownica, stal nierdzewna 18/8, srebrna, 4 litry Indeks: 630313 Producent: DOMO Kod producenta: **DO530FR** Cena: 398.56 zł Opis DOMO **DO530FR** frytkownica, stal nierdzewna 18/8, srebrna, 4 litry Producent: DOMO Frytkownica DOMO **DO530FR** to doskonałe rozwiązanie dla miłośników smaonych przekse... lang:pl score:39 filesize: 206.32 K page_count: 2 document date: 2025-01-30

DOMO



DO530FR

Handleiding	Deli-fryer
Mode d'emploi	Deli-fryer
Gebruiksaanwijzing	Deli-fryer
Instruction booklet	Deli-fryer
Manuale istruzioni	Deli-fryer
Istruzioni per l'uso	Deli-fryer
Hávod k použití	Horkovzdusná fritiza Deli-Fryer
Hávod na použitie	Teplovzdusná fritiza Deli-Fryer

PRODUCT OF LINEA

[pdf] User Manual Instructions

Untitled Bekijk de handleiding Domo DO530FR Heteluchtfriteuse 4L Zilver bol original media s J8w92QDG9xw2 |||

DO530FR Handleiding Deli-fryer Mode d'emploi Deli-fryer Gebruiksaanleitung Deli-fryer Instruction booklet Deli-fryer Manual de instrucciones Deli-fryer Istruzioni per l'uso Nvod k použití Nvod na použitie Deli-fryer Horkovzdusná fritiza Deli-Fryer Teplovzdusná fritiza Deli-Fryer PRODUCT OF ...

lang:nl score:33 filesize: 654.04 K page_count: 60 document date: 2020-08-20

[pdf]

Bekijk de CE marking DOMO DO530FR Heteluchtfriteuse XL 4L LCD display RVS bol original media s
xxxR2XMJDDn |||

8 AUTOMATIC PROGRAMS 1,2 KG Deli-fryer**DO530FR** RECEPTEN - RECETTES -
REZEPTEN - RECIPES INCL. RECIPE BOOKLET DELI-FRYER XL DELI-FRYER XL
DO530FR Deli-Fryer 4 l Heteluchtfriteuse: tot 80 minder vet dan gewoon frituren
Snelle luchtcirculatie voor snel en energiezuinig frituren Voor frieten, k...
lang:nl **score:28** filesize: 10.37 M page_count: 1 document date: 2023-01-16



[pdf]

Fiche technique Friteuse à air chaud DOMO DO530FR U Techno fr a u techno media 1f 9b 2b
1706904760 |||

DO530FR XL 1,2 KG 4 L CAPACITY 8 AUTOMATIC PROGRAMS INCL. RECIPE
BOOKLET DELI-FRYER 4 L Heteluchtfriteuse: tot 80 minder vet dan gewoon frituren
Snelle luchtcirculatie voor snel en energiezuinig frituren Voor frieten, kroketten en
snacks, maar ook kip, vlees, quiche, cake, e.a. Capacit...
lang:fr **score:25** filesize: 586.32 K page_count: 1 document date: 2020-08-13



[pdf]

Deli fryer DO530FR receptenboekje LR domo elektro be sites default files product
Deli-fryer **DO530FR** RECEPTEN - RECETTES - REZEPTEN - RECIPES NL
ZELFGEMAAKTE FRIETEN - VOOR 2 PERSONEN INGREDINTEN 1/2 kg
aardappelen l snuifje zout BEREIDING 1. Schil 1/2 kg aardappelen en snij ze in
frieten van ongeveer 1 cm dik. 2. Laat ze 30 minuten in water weken. Dep ze hierna
goed droog. 3. V...
lang:nl **score:20** filesize: 7.53 M page_count: 20 document date: 2020-02-03

