

## Amazon Fire HD 10 (2021 Release)

# Amazon Fire HD 10 Tablet User Manual

Model: Fire HD 10 (2021 Release)

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Amazon Fire HD 10 tablet (2021 release). Please read it thoroughly before operating your device.

### Key Features

- **Fast and Responsive:** Powered by an octa-core processor and 3 GB RAM, offering 50% more RAM than the previous generation.
- **Long-lasting Battery:** Up to 12 hours of battery life for reading, browsing, video, and music.
- **Vivid Display:** 10.1-inch 1080p Full HD display, 10% brighter than the previous generation, with over 2 million pixels.
- **Ample Storage:** Available with 32 GB or 64 GB internal storage, expandable up to 1 TB with a microSD card (sold separately).
- **App Compatibility:** Access to popular apps like Netflix, Facebook, Disney+, Instagram, TikTok, and more via Amazon's Appstore.
- **Productivity Tools:** Supports apps like Microsoft Office, OneNote, and Dropbox for enhanced productivity.
- **Durable Design:** Thinner and lighter than the previous generation, with a screen strengthened by aluminosilicate glass.
- **Split Screen Functionality:** Allows two compatible apps to be open side-by-side for multitasking.

# fire HD10

32/64 GB storage | 12-hour battery  
3 GB RAM | octa-core processor

Stockage 32/64 Go | autonomie de 12 heures  
Mémoire vive 3 Go | processeur à huit cœurs



Image 1.1: The Amazon Fire HD 10 tablet highlighting its 32/64 GB storage, 12-hour battery, 3 GB RAM, and octa-core processor, alongside logos of supported applications such as Prime Video, Netflix, Disney+, Amazon Music, Office, Zoom, Kindle, and Spotify.

## 2. SETUP

### 2.1 Unboxing and Initial Charge

Upon receiving your Fire HD 10 tablet, carefully remove all components from the packaging. Before first use, it is recommended to fully charge the device.

- Connect the provided USB-C (2.0) cable to the tablet's USB-C port.
- Plug the other end of the USB-C cable into the 9W power adapter.
- Plug the power adapter into a wall outlet.
- A full charge from 0% to 100% typically takes approximately 4 hours while the device is in standby mode.

### 2.2 Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the tablet until the Amazon logo

appears on the screen.

- **To Power Off:** Press and hold the power button until a power options menu appears. Select 'Power Off'.
- **To Restart:** From the power options menu, select 'Restart'.

## 2.3 Wi-Fi Connectivity

To access online content and services, connect your Fire HD 10 to a Wi-Fi network.

1. From the Home screen, swipe down from the top to open the Quick Settings panel.
2. Tap the Wi-Fi icon.
3. Select your desired Wi-Fi network from the list of available networks.
4. If prompted, enter the network password and tap 'Connect'.
5. The tablet supports 2.4 GHz and 5.0 GHz networks. Ad-hoc (peer-to-peer) Wi-Fi networks are not supported.

## 2.4 Account Setup

During the initial setup process, you will be guided to register your Fire HD 10 to an Amazon account. This is necessary to download apps, access Amazon content, and utilize cloud services.

- Follow the on-screen prompts to sign in with an existing Amazon account or create a new one.
- Ensure your account details are accurate for full functionality.

# 3. OPERATING INSTRUCTIONS

---

## 3.1 Navigating the Interface

The Fire HD 10 tablet features a touch-sensitive display for interaction.

- **Tap:** To select an item, open an app, or activate a button.
- **Swipe:** To scroll through pages, lists, or switch between home screens.
- **Pinch-to-Zoom:** To zoom in or out on images, web pages, or documents.
- **Long Press:** To access contextual menus or move app icons.

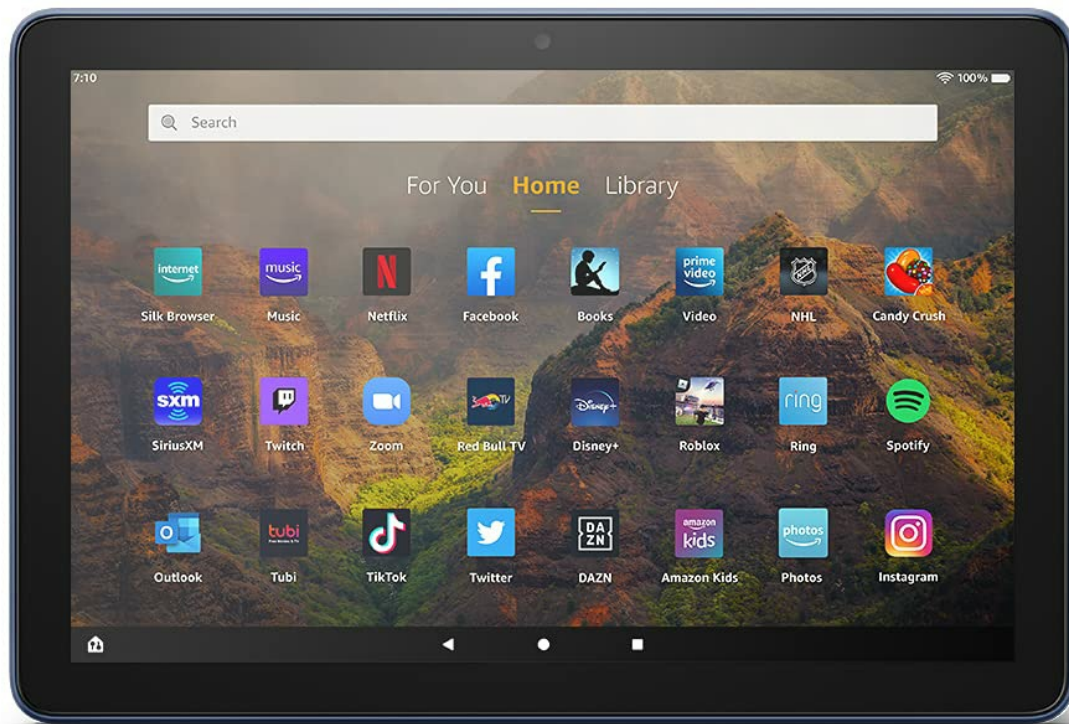


Image 3.1: The Amazon Fire HD 10 tablet's home screen, showcasing a grid of application icons including Silk Browser, Music, Netflix, Facebook, Books, Video, NHL, Candy Crush, SiriusXM, Twitch, Zoom, Red Bull TV, Disney+, Roblox, Ring, Spotify, Outlook, Tubi, TikTok, Twitter, DAZN, Amazon Kids, Photos, and Instagram.

## 3.2 Using Applications

Applications can be downloaded from the Amazon Appstore. Google Play is not supported.

- Tap an app icon on the Home screen to launch it.
- To find new apps, open the 'Appstore' application.
- Some apps may require a subscription for full access.




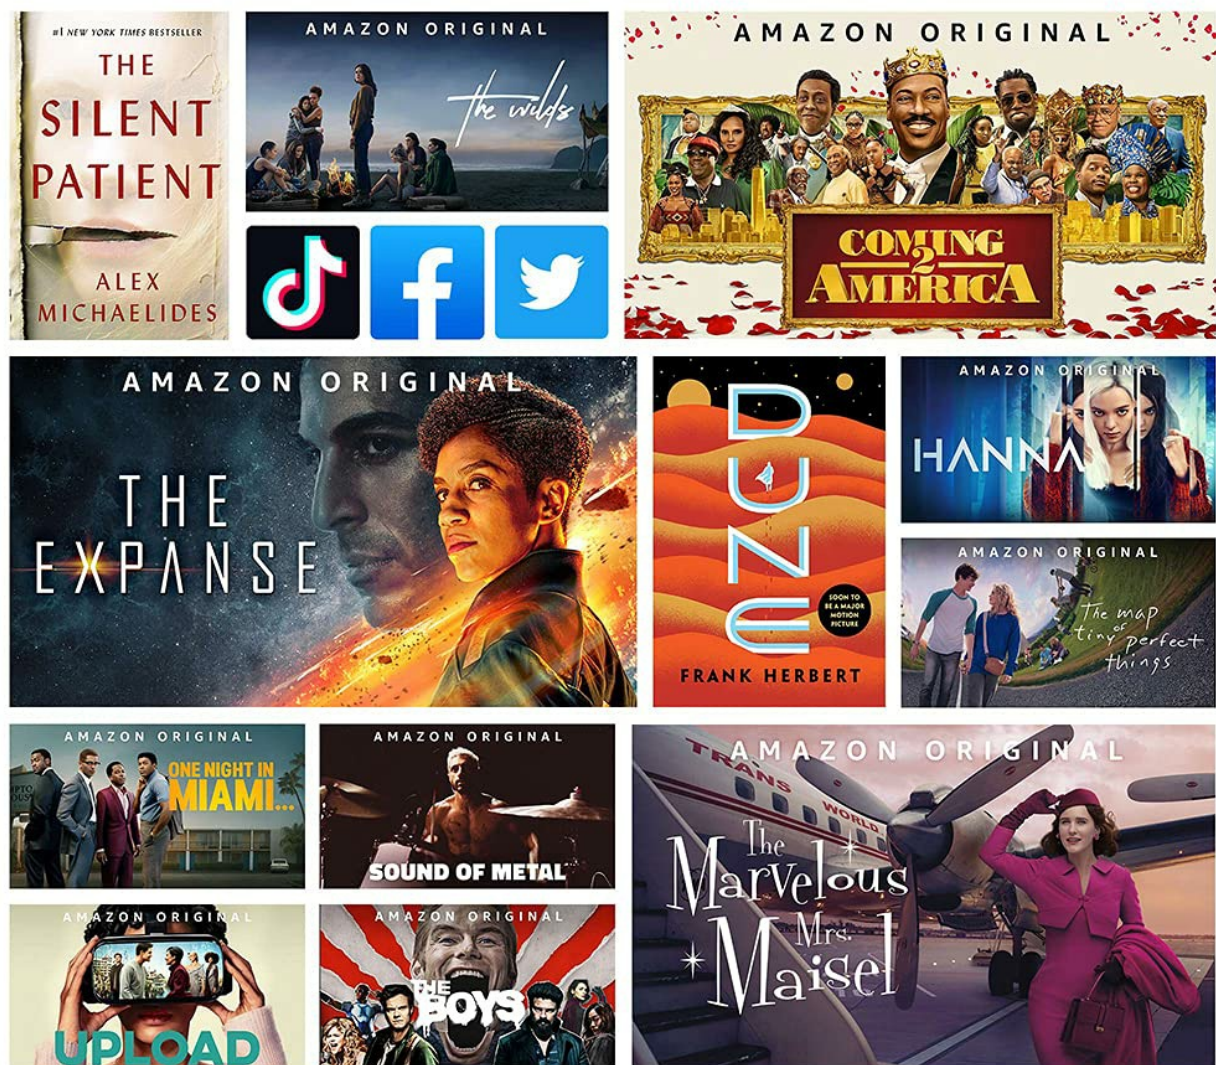


Image 3.2: A collage of content available on the Amazon Fire HD 10 tablet, featuring book covers like 'The Silent Patient', Amazon Original series and movies such as 'The Wilds', 'Coming to America', 'The Expanse', 'Dune', 'Hanna', 'One Night in Miami', 'Sound of Metal', 'The Marvelous Mrs. Maisel', 'Upload', and 'The Boys', alongside social media app logos for TikTok, Facebook, and Twitter.

### 3.3 Split Screen Multitasking

The Fire HD 10 supports split screen functionality, allowing two compatible applications to run side-by-side.

1. Open the first application you wish to use.
2. Swipe up from the bottom of the screen to reveal the navigation bar.
3. Long-press the icon of the first app in the recent apps view.
4. Select 'Split Screen' from the options.
5. Choose a second compatible app from your recent apps or app drawer to fill the other half of the screen.

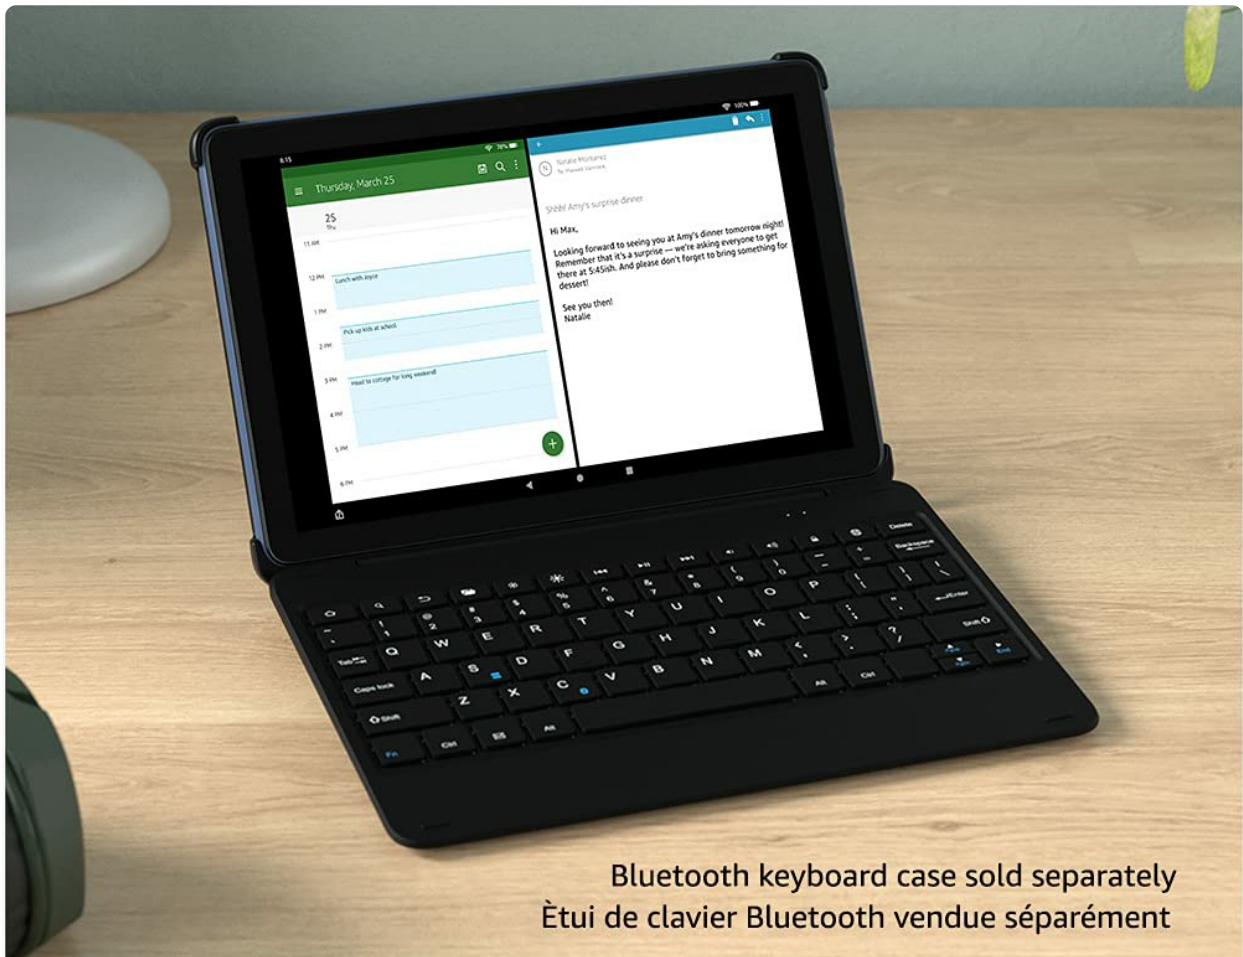

Bluetooth keyboard case sold separately  
Étui de clavier Bluetooth vendue séparément

## Get more done with one device faire plus avec un seul appareil

Image 3.3: The Amazon Fire HD 10 tablet, shown with an optional Bluetooth keyboard case, demonstrating its split-screen capability. Two applications are open simultaneously: a calendar app on the left and a messaging app on the right, illustrating enhanced productivity.

### 3.4 Camera Usage

The tablet is equipped with a 2 MP front-facing camera and a 5 MP rear-facing camera, both capable of 720p HD video recording.

- Open the 'Camera' app from your Home screen or app drawer.
- Tap the shutter button to take a photo.
- Switch between front and rear cameras using the camera toggle icon.
- Select video mode to record videos.

### 3.5 Audio and Bluetooth

The Fire HD 10 includes dual integrated speakers and a 3.5 mm stereo jack for headphones. It also supports Bluetooth 5.0 LE.

- Connect wired headphones or external speakers via the 3.5 mm jack.
- To pair Bluetooth devices (headphones, speakers, microphones, LE accessories):

- a. Go to 'Settings' > 'Connected Devices' > 'Bluetooth'.
- b. Ensure Bluetooth is turned on.
- c. Select your device from the list of available devices and follow pairing instructions.

## 3.6 Storage Management

Your Fire HD 10 comes with either 32 GB or 64 GB of internal storage. You can expand this by up to 1 TB using a microSD card.

- To insert a microSD card: Locate the microSD slot on the side of the tablet, open the cover, and gently insert the card until it clicks into place.
- Manage storage by going to 'Settings' > 'Storage'. Here you can view usage and move compatible apps or media to the microSD card.

## 4. MAINTENANCE

---

### 4.1 Battery Care

- Avoid exposing the tablet to extreme temperatures, as this can degrade battery performance.
- For optimal battery longevity, avoid frequently draining the battery completely or keeping it at 100% charge for extended periods.
- Use only the provided 9W power adapter and USB-C cable for charging.

### 4.2 Cleaning the Device

- Turn off the tablet before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen and body.
- For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.

### 4.3 Software Updates

Amazon periodically releases software updates to improve performance and add new features. Ensure your device is connected to Wi-Fi to receive these updates.

- Updates are typically downloaded and installed automatically.
- You can manually check for updates by going to 'Settings' > 'Device Options' > 'System Updates'.

## 5. TROUBLESHOOTING

---

### 5.1 Device Not Responding

- If the device is frozen or unresponsive, press and hold the power button for approximately 20 seconds to force a restart.
- Ensure the device has sufficient battery charge. Connect it to the charger and try powering it on again.

### 5.2 Wi-Fi Connection Issues

- Verify that Wi-Fi is enabled in Quick Settings or 'Settings' > 'Wireless'.
- Ensure you are within range of your Wi-Fi router.

- Restart your Wi-Fi router and modem.
- Forget the network in 'Settings' > 'Wireless' and reconnect, re-entering the password if necessary.

### 5.3 Apps Crashing or Not Loading

- Close and reopen the app.
- Clear the app's cache: Go to 'Settings' > 'Apps & Games' > 'Manage All Applications', select the problematic app, and tap 'Clear Cache'.
- Ensure your tablet's software is up to date.
- If the issue persists, consider uninstalling and reinstalling the app.

### 5.4 Short Battery Life

- Reduce screen brightness.
- Close unused applications running in the background.
- Turn off Wi-Fi or Bluetooth when not in use.
- Limit background data usage for apps.
- Check 'Settings' > 'Battery' to identify apps consuming the most power.

## 6. SPECIFICATIONS

Feature	Detail
Generation	11th generation, 2021 release
Display	Brilliant 10.1" 1080p display (1920 x 1200) with over 2 million pixels (224 ppi). Screen strengthened with aluminosilicate glass.
Size	247mm x 166mm x 9.2 mm
Weight	465 grams (Actual size and weight may vary)
CPU & RAM	Octa-core 2.0 GHz with 3 GB of RAM
Storage	32 GB (24.2 GB available) or 64 GB (55.0 GB available) internal storage. Expandable up to 1 TB with microSD card.
Battery Life	Up to 12 hours of mixed usage (reading, web, video, music). Varies by settings and usage.
Charge Time	Approx. 4 hours (0-100%) with provided 9W adapter in standby.
WiFi Connectivity	Supports 2.4 GHz and 5.0 GHz networks. Does not support ad-hoc networks.
Ports	USB-C (2.0) for charging, microSD slot for external storage.
Audio	3.5 mm stereo jack, dual integrated speakers, external volume controls.



Feature	Detail
Sensors	Accelerometer, ambient light sensors.
Camera Specs	2 MP front-facing, 5 MP rear-facing cameras with 720p HD video recording.
Microphones	2 built-in microphones.
Location Services	Location-based services via WiFi.
Available Colors	Black, Denim.
Bluetooth	Built-in Bluetooth 5.0 LE with A2DP support for stereo headphones, speakers, microphone, and LE accessories.

## 6.1 Accessibility Features

The Fire HD 10 tablet includes various accessibility features to assist users. These can be accessed via 'Settings' > 'Accessibility'.

- **VoiceView Screen Reader:** Provides spoken feedback for users who are blind or visually impaired.
- **Screen Magnifier:** Allows users to zoom in/out and pan around the screen.
- **Switch Access:** Enables interaction for users with motor impairments via compatible Bluetooth devices.
- **Kindle Read Aloud:** Alexa can read Kindle books aloud.
- **Display Settings:** Includes options for Closed Captioning, Font Size, Display Size, High Contrast Text, Color Inversion, Color Correction, and Convert Stereo to Mono audio. (Note: Captions are not available for all content.)

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

Your Amazon Fire HD 10 tablet comes with a 1-year limited warranty and service. Optional 1-year, 2-year, and 3-year extended warranties are available for purchase separately for customers in Canada. Use of the Fire HD 10 tablet is subject to Amazon's Conditions of Use and associated terms.

### 7.2 Included in the Box

The following items are included with your Fire HD 10 tablet:







- Fire HD 10 tablet
- USB-C (2.0) cable
- 9W power adapter
- Quick Start Guide

## 7.3 Further Support

For additional assistance, please visit the Amazon Device Support website or contact Amazon Customer Service.

© 2025 Amazon. All rights reserved.

### Related Documents - Fire HD 10 (2021 Release)

	<p><a href="#">Amazon Fire HD 10 Tablet Quick Start Guide</a></p> <p>A concise guide to setting up, activating, and navigating your Amazon Fire HD 10 tablet, covering device features, charging, and basic operations.</p>
	<p><a href="#">Amazon Fire Tablet User Guide: Setup, Features, and Troubleshooting</a></p> <p>A comprehensive user guide for Amazon Fire tablets, detailing setup, Wi-Fi, power management, storage optimization, Amazon Kids features, app installation, Alexa integration, accessibility options, and troubleshooting common issues. Learn to maximize your Fire tablet experience.</p>
	<p><a href="#">Amazon Fire Kids Edition Tablet Safety and Warranty Information</a></p> <p>Essential safety guidelines, warranty information, and usage precautions for the Amazon Fire Kids Edition Tablet and its accessories, covering handling, power, and battery care.</p>
	<p><a href="#">Amazon Fire 7 Kids Quick Start Guide</a></p> <p>This guide provides essential information for setting up and using the Amazon Fire 7 Kids tablet. It covers device features, activation steps, case management, cleaning, storage expansion, and accessing parental controls via the Parent Dashboard.</p>
	<p><a href="#">Amazon Fire HD 8 (12th Gen) Quick Start Guide</a></p> <p>A concise guide to setting up, activating, exploring features, and charging your Amazon Fire HD 8 (12th Generation) tablet. Includes troubleshooting information.</p>
	<p><a href="#">Amazon Fire Kids Edition Tablet Safety and Warranty Information</a></p> <p>Comprehensive safety guidelines, warranty details, and usage instructions for the Amazon Fire Kids Edition Tablet and Kid-Proof Case, designed for parents and young users.</p>