

VGR V-117

VGR V-117 Professional Hair Trimmer Instruction Manual

Model: V-117

1. INTRODUCTION

Thank you for choosing the VGR V-117 Professional Hair Trimmer. This rechargeable hair clipper is designed for precise and comfortable hair cutting, beard trimming, and grooming of various facial and body hair styles. Please read this instruction manual carefully before using the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INFORMATION

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Do not immerse the appliance in water or use it near water (e.g., bathtub, shower, sink).
- Keep the appliance away from heated surfaces.
- Do not use the appliance if it has a damaged cord or plug, or if it is not working properly.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use attachments supplied by the manufacturer.
- Unplug the appliance before cleaning or performing maintenance.
- Ensure the power adapter is compatible with your local power supply.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- VGR V-117 Hair Clipper
- Four Attachment Combs (3mm, 6mm, 9mm, 12mm)
- Cleaning Brush
- Power Adapter (Charger)



Image 1: Contents of the VGR V-117 package, including the hair clipper, charger, cleaning brush, and four guide combs.

4. SETUP

4.1 Charging the Trimmer

1. Ensure the trimmer is switched off.
2. Connect the power adapter to the charging port on the trimmer.
3. Plug the power adapter into a suitable electrical outlet.
4. Allow the trimmer to charge fully before first use. The trimmer can be used corded while charging or wirelessly on its battery.

4.2 Attaching Guide Combs

The VGR V-117 comes with four attachment combs for different cutting lengths: 3mm, 6mm, 9mm, and 12mm.

1. Select the desired guide comb for your preferred hair length.
2. Align the comb with the trimmer blade and push it firmly until it clicks into place.
3. To remove, gently pull the comb away from the blade.



Image 2: The VGR V-117 hair trimmer shown with its four adjustable guide combs (3mm, 6mm, 9mm, 12mm).

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Ensure the trimmer is fully charged or connected to the power adapter.
2. Attach the desired guide comb for your preferred hair length. For a closer trim or detailing, you may use the trimmer without a comb.
3. Switch on the trimmer using the power button. The high-speed quiet motor operates at less than 60dB, providing a comfortable experience.
4. Hold the trimmer with the blade flat against the skin and move it slowly against the direction of hair growth.

5. The high-precision steel micro t-outliner blades are designed for precise cutting without snagging hair or damaging the skin surface.
6. After use, switch off the trimmer and disconnect it from the power source if applicable.

5.2 Recommended Uses

- **Hair Clipper:** For general haircuts, use appropriate guide combs to achieve desired lengths.
- **Beard Trimmer:** Ideal for shaping and maintaining mustaches, sideburns, goatees, and stubble.
- **Detailing:** The t-outliner blade is suitable for creating sharp lines and intricate designs.
- **Body Hair:** Can be used for trimming other face and body hair as needed.



Image 3: The VGR V-117 Professional Hair Trimmer, showcasing its ergonomic design.

6. MAINTENANCE

6.1 Cleaning the Trimmer

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. Ensure the trimmer is switched off and unplugged from the power adapter.
2. Remove any attached guide combs.
3. Use the provided cleaning brush to remove loose hairs from the blade and trimmer body.
4. The waterproof blade can be rinsed under running water. Do not immerse the entire trimmer body in water.
5. Allow the blade to air dry completely before reattaching combs or storing the trimmer.

6.2 Blade Care

For best cutting performance, periodically apply a small amount of clipper oil (not included) to the blades. This helps to lubricate the blades and prevent rust.

7. TROUBLESHOOTING

If you encounter issues with your VGR V-117 trimmer, refer to the following common solutions:

- **Trimmer not turning on:** Ensure the trimmer is fully charged. If using corded, check the power adapter and outlet connection.
- **Poor cutting performance:** Clean the blades thoroughly to remove any trapped hair. Apply clipper oil to the blades. Ensure the guide comb is correctly attached.
- **Excessive noise or vibration:** Clean and oil the blades. If the issue persists, contact customer support.
- **Battery not charging:** Verify the power adapter is securely connected to both the trimmer and the power outlet. Ensure the outlet is functional.

8. SPECIFICATIONS

Brand:	VGR
Model:	V-117
Power Source:	Battery Powered (Rechargeable)
Blade Material:	Stainless Steel
Body Material:	Alloy Steel
Special Features:	Portable, Rechargeable, Waterproof (blade)
Recommended Uses:	Beard, Facial Hair
Item Weight:	640 g
Package Dimensions:	12.1 x 9 x 8 cm

9. WARRANTY AND SUPPORT

The VGR V-117 Hair Trimmer comes with a 3-month guarantee. If you are not satisfied with the product or encounter any issues, please contact VGR customer support. We aim to reply within 24 hours to assist you.
For support, please refer to the contact information provided on the product packaging or the official VGR website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question