

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PowerPac](#) /

› [PowerPac PPT25 Electric Oven User Manual](#)

PowerPac PPT25

PowerPac PPT25 Electric Oven User Manual

Model: PPT25 | Brand: PowerPac

INTRODUCTION

Thank you for purchasing the PowerPac PPT25 Electric Oven. This manual provides important information for the safe and efficient operation of your new appliance. Please read it thoroughly before use and keep it for future reference. This 25L electric oven is designed for versatile cooking, grilling, toasting, and baking, featuring a heating selector and durable stainless steel heating elements.



The PowerPac PPT25 Electric Oven, a versatile appliance for cooking, grilling, toasting, and baking, shown here with a dish of cooked chicken drumsticks, highlighting its culinary capabilities.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the oven.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any other flammable materials.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PARTS AND COMPONENTS

The PowerPac PPT25 Electric Oven comes with essential components and accessories for a complete cooking experience.


- **Tempered Glass Window:** Allows you to monitor cooking progress.
- **Cool Touch Handle:** For safe opening and closing of the oven door.
- **Control Knobs:** For temperature, function, and timer settings.
- **Power Light Indicator:** Illuminates when the oven is operating.
- **Stainless Steel Heating Elements:** Durable and efficient heating.
- **Baking Tray:** For baking various foods.
- **Grill Rack:** For grilling and toasting.
- **Tray/Rack Handle:** For safe removal of hot trays and racks.

*Tempered glass window with
cool touch handle*



A hand demonstrating the cool-touch handle and the smooth operation of the tempered glass door on the PowerPac PPT25 Electric Oven, emphasizing safety and ease of access.

*1 set of food tray
and grill rack*

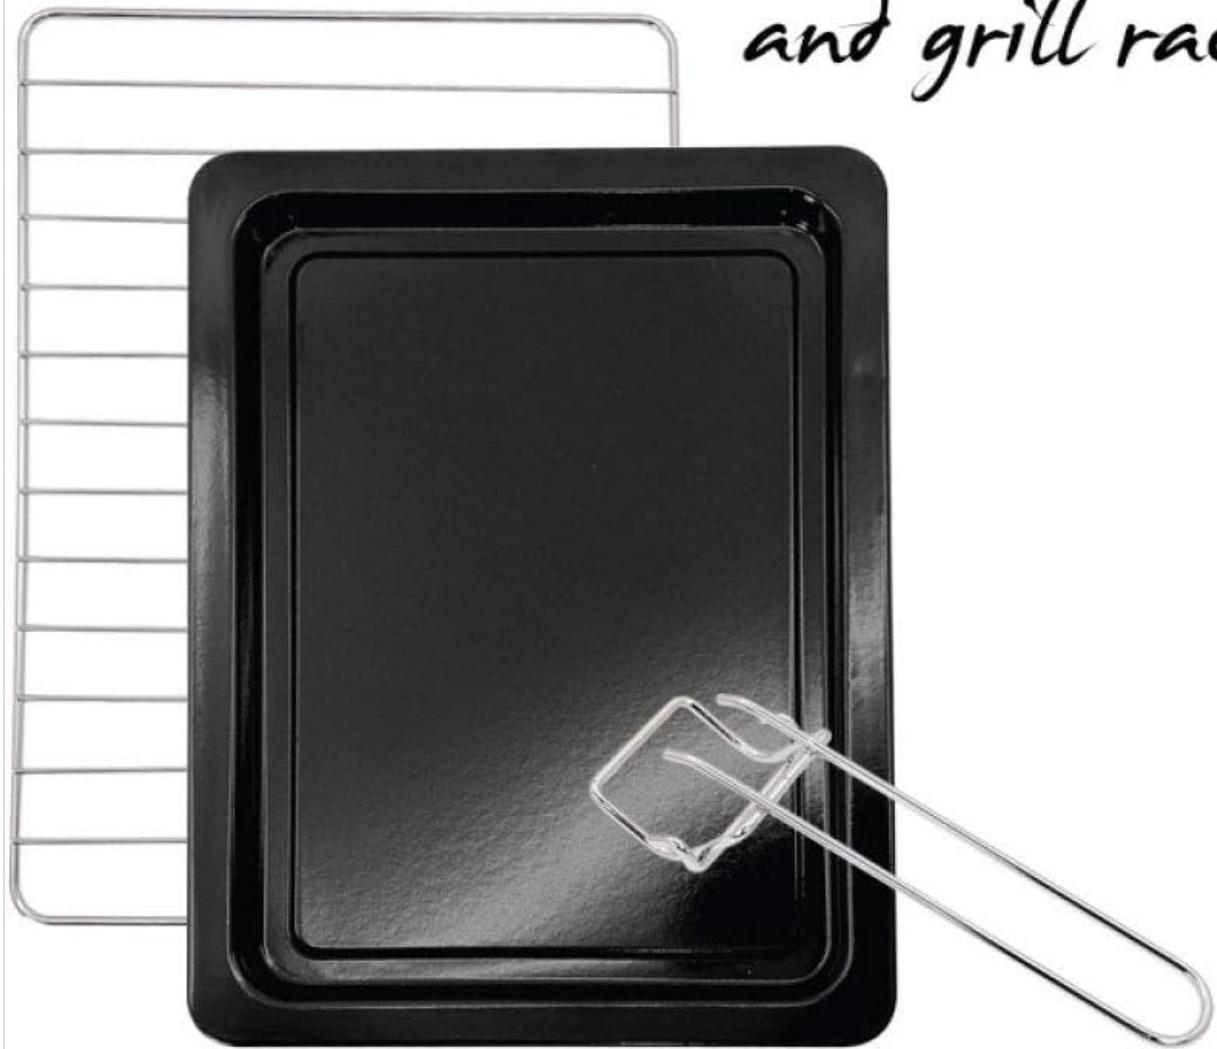

The included accessories for the PowerPac PPT25 Electric Oven: one baking tray and one grill rack, along with a handle for safe removal, designed for various cooking needs.

SETUP

Follow these steps for the initial setup of your electric oven:

- 1. Unpacking:** Carefully remove the oven and all accessories from the packaging. Remove any protective films or stickers.
- 2. Placement:** Place the oven on a stable, level, and heat-resistant surface. Ensure there is adequate ventilation around the oven (at least 10-15 cm clearance on all sides and top) to allow for proper heat dissipation. Do not place it directly against a wall or under cabinets.
- 3. Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash the baking tray, grill rack, and tray handle in warm, soapy water. Rinse and dry thoroughly.
- 4. First Use (Burn-Off):** It is normal for a new oven to produce a slight odor and some smoke during its first use. To minimize this, operate the oven empty for approximately 15 minutes at the maximum temperature setting (250°C) with the function selector set to 'Upper and Lower Heating'. Ensure the area is well-ventilated during this process.
- 5. Power Connection:** Ensure the oven is unplugged before placing accessories inside. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The PowerPac PPT25 Electric Oven offers versatile cooking options with its intuitive controls.

Control Knobs:

- **Temperature Selector (Top Knob):** Adjusts the cooking temperature from 100°C to 250°C. Turn clockwise to increase temperature.
- **Function/Heat Selector (Middle Knob):** Selects the heating mode. This oven features 4 heat settings for maximum efficiency and energy saving during food preparation:
 - **Off:** Oven is off.
 - **Upper Heating:** Only the top heating elements are active, ideal for browning or grilling.
 - **Lower Heating:** Only the bottom heating elements are active, suitable for gentle baking or reheating.
 - **Upper and Lower Heating:** Both top and bottom elements are active, providing even heat for baking and roasting.
 - **Upper Heating with Convection (if applicable):** Combines upper heating with fan for faster, more even cooking.
(Note: This model description does not explicitly state convection, but common for 4-in-1).
- **Timer (Bottom Knob):** Sets the cooking time up to 60 minutes. Turn clockwise to set the desired time. The oven will automatically turn off and a bell will ring when the set time has elapsed. For continuous operation, turn the timer knob counter-clockwise to the 'Stay On' position (if available, otherwise set to maximum time).

General Operation:

1. **Prepare Food:** Place food on the baking tray or grill rack. Use appropriate bakeware if needed.
2. **Insert Tray/Rack:** Slide the baking tray or grill rack into the desired rack position inside the oven.
3. **Close Door:** Close the tempered glass door securely.
4. **Set Temperature:** Turn the Temperature Selector knob to your desired cooking temperature (100°C-250°C).
5. **Select Function:** Turn the Function/Heat Selector knob to the desired cooking mode (e.g., Upper and Lower Heating for general baking).
6. **Set Timer:** Turn the Timer knob to the desired cooking time (up to 60 minutes). The power light indicator will illuminate, indicating the oven is operating.
7. **Monitor Cooking:** Observe food through the tempered glass window. Adjust time or temperature if necessary.
8. **Remove Food:** Once cooking is complete and the timer rings, carefully open the oven door using the cool-touch handle. Use the provided tray/rack handle or oven mitts to safely remove the hot food and accessories.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

- **Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the finish.
- **Interior Cleaning:** For the interior, wipe with a damp cloth and mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for conventional ovens can be used, following the product instructions carefully. Ensure all cleaner residue is wiped away.
- **Accessories:** The baking tray, grill rack, and tray handle can be washed in warm, soapy water. Rinse thoroughly and dry completely before storing or reusing.
- **Crumb Tray:** Regularly remove and clean the crumb tray (if applicable) to prevent grease buildup and potential fire hazards.
- **Do Not Immerse:** Never immerse the oven body, cord, or plug in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your PowerPac PPT25 Electric Oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set; faulty outlet.	Ensure oven is securely plugged in. Check household circuit breaker. Set the timer knob to a desired time. Test outlet with another appliance.
Food not cooking evenly.	Incorrect rack position; uneven food placement; door opened too frequently.	Adjust rack position for optimal heat distribution. Arrange food evenly on the tray. Avoid opening the door unnecessarily during cooking.
Oven produces smoke/odor during first use.	Protective coating burning off.	This is normal for new ovens. Ensure good ventilation. The odor will dissipate after initial use.
Timer does not work.	Timer knob not set correctly.	Ensure the timer knob is turned past the 'Off' position and set to a specific time.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Detailed specifications for the PowerPac PPT25 Electric Oven:

Feature	Detail
Brand	PowerPac
Model	PPT25
Capacity	25 Liters
Voltage	230 Volts
Wattage	1600 watts
Product Dimensions (L x W x H)	46.5 x 34.3 x 30.3 cm
Material	Tempered Glass
Special Features	Timer
Control Type	Knob
Included Components	1 x Electric Oven, 1 x Baking Tray, 1 x Grill Rack, 1 x Tray/Rack Handle

Product Measurement



Diagram illustrating the dimensions of the PowerPac PPT25 Electric Oven, with a width of 470mm, depth of 360mm, and height of 300mm, providing clear measurements for placement.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official PowerPac website. If you have any questions or require assistance with your PowerPac PPT25 Electric Oven, please contact PowerPac customer service directly.

© 2023 PowerPac. All rights reserved.

Related Documents - PPT25

 <p>2 IN 1 STEAMBOAT AND BBQ GRILL PPMC728</p>	<p>PowerPac PPMC728 2-in-1 Steamboat and BBQ Grill User Manual</p> <p>Comprehensive user manual for the PowerPac PPMC728 2-in-1 Steamboat and BBQ Grill, covering parts description, safety warnings, operation, cleaning, descaling, troubleshooting, specifications, and warranty information.</p>
 <p>Electric Oven Right that cooking well Model: PPT25 CE 25L PowerPac Electrical Pte Ltd www.powerpac.com.sg @powerpac_sg @PowerPac</p>	<p>PowerPac PPT25 Oven User Manual and Safety Guide</p> <p>Comprehensive guide for the PowerPac PPT25 oven, covering parts, operation, safety warnings, cleaning, specifications, and warranty information.</p>
 <p>2 IN 1 STEAMBOAT AND BBQ GRILL PPMC728</p>	<p>PowerPac PPMC728 2-in-1 Steamboat and BBQ Grill User Manual</p> <p>This user manual provides comprehensive instructions for the PowerPac PPMC728 2-in-1 Steamboat and BBQ Grill. It covers parts identification, safety warnings, operating procedures, cleaning and descaling instructions, troubleshooting, specifications, and warranty information for this versatile kitchen appliance.</p>
 <p>2 DOOR MINI BAR FRIDGE WITH FREEZER 136L PPF136</p>	<p>PowerPac PPF136 136L 2-Door Mini Bar Fridge with Freezer: User Manual & Specifications</p> <p>Comprehensive user manual for the PowerPac PPF136 136L 2-door mini bar fridge. Covers installation, operation, safety warnings, cleaning, troubleshooting, technical specifications, and warranty information.</p>
 <p>ELECTRIC PRESSURE COOKER PPC611</p>	<p>PowerPac PPC611 Electric Pressure Cooker: User Manual and Safety Guide</p> <p>Comprehensive user manual for the PowerPac PPC611 Electric Pressure Cooker, covering operation, safety, cleaning, troubleshooting, and warranty information. Learn how to use your digital pressure cooker for fast and hygienic cooking.</p>



[PowerPac 14" Power Fan Air Circulator PP2814 User Manual and Safety Guide](#)

Comprehensive user manual for the PowerPac 14-inch Power Fan Air Circulator (Model PP2814), detailing safety instructions, operating procedures, cleaning guide, warranty information, and technical specifications.